

3onedata



ICS6400 Series Layer 3 Industrial Ethernet Switch User Manual

Document Version: 01

Issue Date: 2/16/2022

Industrial Ethernet Communication Solution Expert

3onedata Co., Ltd.

Copyright © 2022 3onedata Co., Ltd. All rights reserved.

No company or individual is allowed to duplicate or transmit this manual in any forms without written permission issued by 3onedata Co., Ltd.

Trademark statement



3onedata, **3onedata** and **3One data** are the registered trademark owned by 3onedata Co., Ltd. And other trademarks mentioned in this manual belong to their corresponding companies.

Note

Purchased product, service or features should be constrained by 3onedata commercial contracts and clauses. The whole or part product, service or features described in this document may beyond purchasing or using range. 3onedata won't make any statement or warranty for this document content unless any other appointment exists.

Due to product version upgrading or other reason, this document content will be upgraded periodically. Unless other appointment exists, this document only for usage guide, all statement, information and suggestion in this document won't constitute any warranty.

3onedata



Please scan our QR code
for more details

3onedata
Make network communication more reliable



BlueEyes pro



Embedded Industrial
Ethernet Switch Modules

Embedded Serial
Device Server Modules



Industry-specialized
Products
(Rail Transit, Power,
Smart City, Pipe Gallery...)

Honor · Quality · Service



Layer 2 (Unmanaged)
Managed Industrial
Ethernet Switch

Layer 3 Managed
Industrial Ethernet Switch
Industrial PoE Switch



BlueEyes Pro
Management Software

VSP Virtual Serial Port
Management Software

SNMP Management
Software



Modbus Gateway
Serial Device Server
Media Converter
CAN Device Server
Interface Converter



Industrial Wireless
Products

3onedata Co., Ltd.

Headquarter address: 3/B, Zone 1, Baiwangxin High Technology Industrial park, Nanshan District, Shenzhen, 518108 China

Technology support: tech-support@3onedata.com

Service hotline: +86 -880-4496

E-mail: sales@3onedata.com

Fax: +86-0755-26703485

Website: <http://www.3onedata.com>

Preface

Layer 3 Industrial Ethernet Switch User Manual has introduced this switch:

- Product features
- Product network management configuration
- Overview of related principles of network management



Note

The reference model for the screenshot in this manual is ICS6400-12GT12GS4XS (12 Gigabit copper ports + 12 Gigabit SFP + 4 10Gigabit SFP+). In addition to the differences in the supported Ethernet interface, type and quantity of power supply, the interface functions and operation of other models in this series are similar.

Audience

This manual applies to the following engineers:






- Network administrators
- Technical support engineers
- Network engineer

Text Format Convention

Format	Description
" "	Words with "" represent the interface words. Such as: "Port No.".
>	Multi-level path is separated by ">". Such as opening the local connection path description: Open "Control Panel> Network Connection> Local Area Connection".
Light Blue Font	It represents the words clicked to achieve hyperlink. The font

Format	Description
	color is as follows: 'Light Blue'.

Symbols

Format	Description
 Notice	Remind the announcements in the operation, improper operation may result in data loss or equipment damage.
 Warning	Pay attention to the notes on the mark, improper operation may cause personal injury.
 Note	Conduct a necessary supplements and explanations for the description of operation content.
 Key	Configuration, operation, or tips for device usage.
 Tips	Pay attention to the operation or information to ensure success device configuration or normal working.

Port Convention

The port number in this manual is only an example, and does not represent the actual port with this number on the device. In actual use, the port number existing on the device shall prevail.

Revision Record

Version No.	Date	Revision note
01	2022-02-16	Product release

Contents

PREFACE	1
CONTENTS.....	1
PART ONE: OPERATION.....	1
1 LOG IN THE WEB INTERFACE.....	1
1.1 SYSTEM REQUIREMENTS FOR WEB BROWSING	1
1.2 SETTING IP ADDRESS OF PC.....	1
1.3 LOG IN THE WEB CONFIGURATION INTERFACE	3
2 SYSTEM INFORMATION.....	4
3 SYSTEM CONFIGURATION	6
3.1 IP ADDRESS CONFIGURATION.....	6
3.2 USER CONFIGURATION	7
3.3 NETWORK DIAGNOSIS.....	8
3.3.1 Ping	8
3.3.2 Traceroute	9
3.3.3 Port Loopback	11
3.3.4 SFP Digital Diagnosis.....	13
3.4 LOGIN MODE CONFIGURATION.....	14
4 PORT CONFIGURATION	16
4.1 PORT SETTINGS	16
4.2 STORM SUPPRESSION	19
4.3 PORT RATE LIMIT	22
4.4 PORT MIRRORING	24
4.5 LINK AGGREGATION	26
4.6 PORT STATISTICS	29
4.6.1 Port Statistics-Overview	29
4.6.2 Port Statistics-Port.....	30
4.7 PORT ISOLATION	31
4.8 LINK FLAPPING PROTECTION	32
4.8.1 Global Configuration.....	33
4.8.2 Port Configuration.....	34
5 LAYER 2 CONFIGURATION	37
5.1 MAC CONFIGURATION	37
5.1.1 MAC Settings	37
5.1.2 Static MAC.....	39

5.1.3	Static Multicast MAC	40
5.2	VLAN CONFIGURATION	41
5.2.1	VLAN Configuration.....	42
5.2.2	Access Configuration	43
5.2.3	Trunk Configuration.....	45
5.2.4	Hybrid Configuration	46
5.3	SPANNING-TREE CONFIGURATION	51
5.3.1	Bridge Configuration.....	52
5.3.2	Instance Configuration.....	53
5.3.3	Port Configuration.....	54
5.3.4	Instance Port Configuration.....	56
5.4	ERPS CONFIGURATION	58
5.4.1	Timer Configuration.....	58
5.4.2	Ring Configuration.....	60
5.4.3	Instance Configuration.....	61
5.5	RING CONFIGURATION	63
5.6	IGMP SNOOPING CONFIGURATION.....	69
5.6.1	Global Configuration.....	70
5.6.2	Interface Configuration.....	71
5.6.3	Routing Port Configuration.....	73
5.6.4	Routing port information	74
5.7	PORT LOOPBACK DETECTION	74
5.7.1	Global Configuration.....	75
5.7.2	Port Configuration.....	77
6	LAYER 3 CONFIGURATION	79
6.1	MULTICAST ROUTING	79
6.2	INTERFACE CONFIGURATION	80
6.2.1	Layer 3 Interface	81
6.2.2	Loopback Interface.....	83
6.3	ARP CONFIGURATION	84
6.3.1	Show ARP	84
6.3.2	Static ARP	85
6.3.3	ARP Parameter Configuration	86
6.4	VRRP CONFIGURATION.....	87
6.5	NAT SETTINGS	90
6.5.1	NAT port binding	90
6.5.2	NAT Configuration Rule.....	94
6.5.3	NAT Destination Address.....	95
6.6	IGMP CONFIGURATION	96
6.6.1	Interface Configuration.....	96
6.6.2	SSM-Map configuration	98
6.6.3	Multicast Group Information.....	100
6.7	PIM-SM CONFIGURATION	101

6.7.1	Global Configuration.....	102
6.7.2	Static RP Configuration	103
6.7.3	C-RP Configuration of Interface	104
6.7.4	Interface Configuration.....	105
6.7.5	Status Display	106
6.7.6	Multicast PR Address	107
6.8	PIM-DM CONFIGURATION.....	107
6.8.1	Global Configuration.....	108
6.8.2	Interface Configuration.....	109
6.8.3	Status Display	110
7	ROUTER CONFIGURATION.....	112
7.1	IPv4 CONFIGURATION	112
7.2	IPv4 Routing Table.....	112
7.3	IPv4 Static Route	113
7.4	RIP CONFIGURATION	114
7.4.1	RIP Global Configuration	114
7.4.2	RIP Network Setting.....	117
7.4.3	RIP Interface Configuration	117
8	ADVANCED CONFIGURATION.....	119
8.1	DHCP CONFIGURATION.....	119
8.1.1	DHCP Switch	119
8.1.2	DHCP Pool Configuration.....	120
8.1.3	Server Configuration	122
8.1.4	MAC Binding	123
8.1.5	Port Binding	124
8.1.6	Client List.....	125
8.2	DHCP-SNOOPING CONFIGURATION	125
8.2.1	Global Configuration.....	127
8.2.2	VLAN Enable Configuration.....	128
8.2.3	Binding Configuration	128
8.2.4	Port Configuration.....	129
8.3	DHCP-RELAY CONFIGURATION.....	132
8.4	LLDP CONFIGURATION	133
8.4.1	Current configuration	133
8.4.2	Port Configuration.....	134
8.4.3	Neighbor Information	136
8.5	SNMP CONFIGURATION	137
8.5.1	SNMP Switch	137
8.5.2	View	138
8.5.3	Community.....	139
8.5.4	SNMP Group	140
8.5.5	V3 User.....	141
8.5.6	Trap alarm	144

8.6	RMON CONFIGURATION	145
8.6.1	Event.....	145
8.6.2	Statistical.....	146
8.6.3	History	147
8.6.4	Alarm.....	148
8.7	NTP CONFIGURATION	150
9	SYSTEM MAINTENANCE.....	152
9.1	CONFIGURE FILE MANAGEMENT	152
9.1.1	Global Configuration.....	152
9.1.2	Configuration File Update.....	153
9.1.3	Restore Factory Settings	153
9.2	ALARM CONFIGURATION	154
9.3	UPGRADE	156
9.4	LOG INFORMATION	157
9.4.1	Log Information	157
9.4.2	Syslog Server.....	158
THE SECOND PART: FREQUENTLY ASKED QUESTIONS		160
10	FAQ	160
10.1	SIGN IN PROBLEMS	160
10.2	CONFIGURATION PROBLEM.....	161
10.3	ALARM PROBLEM.....	162
10.4	INDICATOR PROBLEM	162
11	MAINTENANCE AND SERVICE	164
11.1	INTERNET SERVICE	164
11.2	SERVICE HOTLINE.....	164
11.3	PRODUCT REPAIR OR REPLACEMENT.....	165

Part One: Operation

1 Log in the Web Interface

1.1 System Requirements for WEB Browsing

While using managed industrial Ethernet switches, the system should meet the following conditions.

Hardware and Software	System requirements
CPU	Above Pentium 586
Memory	128MB or more
Resolution	Above 1024x768
Color	256 color or above
Browser	Internet Explorer 6.0 or above
Operating system	Windows XP/7/8/10

1.2 Setting IP Address of PC

The default management of the industrial Ethernet switch is as follows:

IP Settings	Default Values
IP address	192.168.1.254
Subnet mask	255.255.255.0

While configuring the switch via Web:

- Before remote configuration, please make sure the route between computer and switch is reachable.
- Before local configuration, please make sure the IP address of the computer is on the same subnet to the one of switch.

Note:

When the switch is first configured. If it is configured locally, make sure the current computer network segment is 1.


Eg: Assume that the IP address of the current PC is 192.168.5.60, change the network segment "5" of the IP address to "1".

Operation steps

Amendment steps as follow:

Step 1 Open "Control Panel> Network Connection> Local Area Connection> Properties> Internet Protocol Version 4 (TCP / IPv4)> Properties".

Step 2 Change the selected "5" in red frame of the picture below to "1".

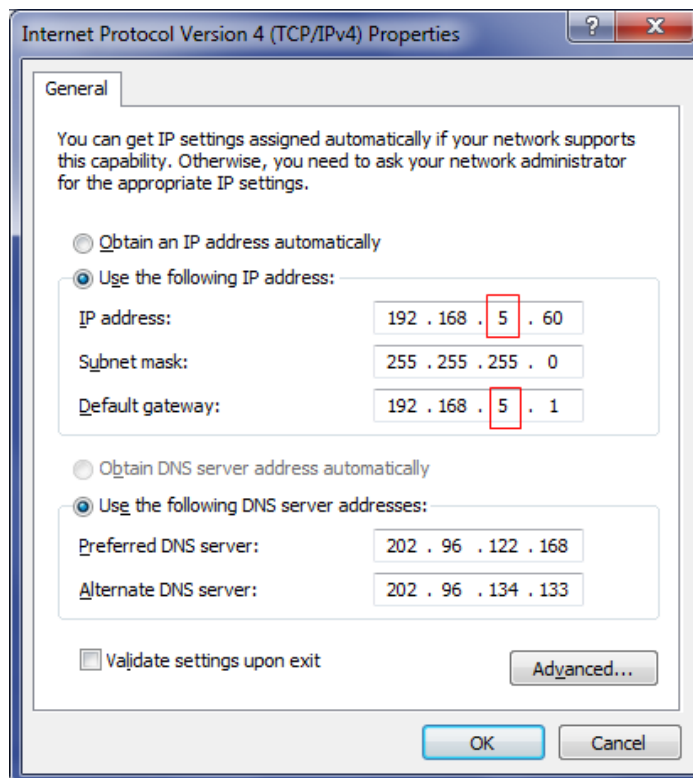

Step 3 Click "OK", IP address is modified successfully.


Step 4 End.

1.3 Log in the Web Configuration Interface

Operation steps

Login in the web configuration interface as follow:

- Step 1** Run the computer browser.
- Step 2** On the address bar of browser, enter in the IP address of the switch "http://192.168.1.254".
- Step 3** Click the "Enter" key.
- Step 4** Pop-up dialog box as shown below, enter the user name and password in the login window.

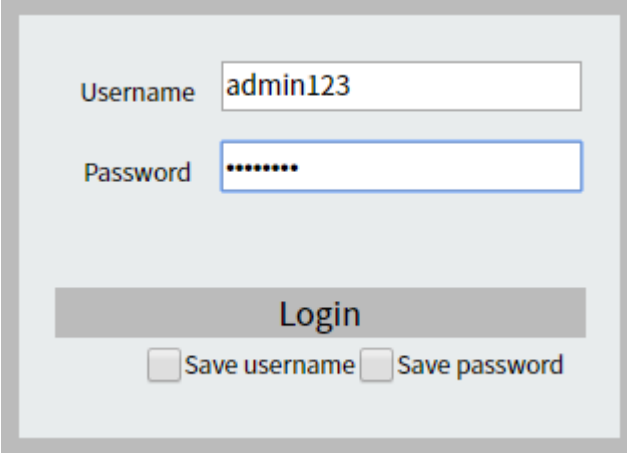

The screenshot shows a login dialog box with a light gray background. It contains two input fields: 'Username' with the text 'admin123' and 'Password' with masked characters '.....'. Below these fields is a prominent 'Login' button. At the bottom, there are two checkboxes labeled 'Save username' and 'Save password', both of which are currently unchecked.

Note:

- The default username and password are "admin123"; please strictly distinguish capital and small letter while entering.
- Default user account has the administrator privilege.

Step 5 Click "Login".

Step 6 End.

After successful login, you can configure the relevant parameters and information of the WEB interface as needed.

Note:

After login in the device, modify the switch IP address for usage convenience.

2 System Information

Function Description


On the "System Information" page, you can view product information such as product model, hardware version, software version and MAC address.

Operation Path

Open: "System Information".

Interface Description

System information interface as follows:

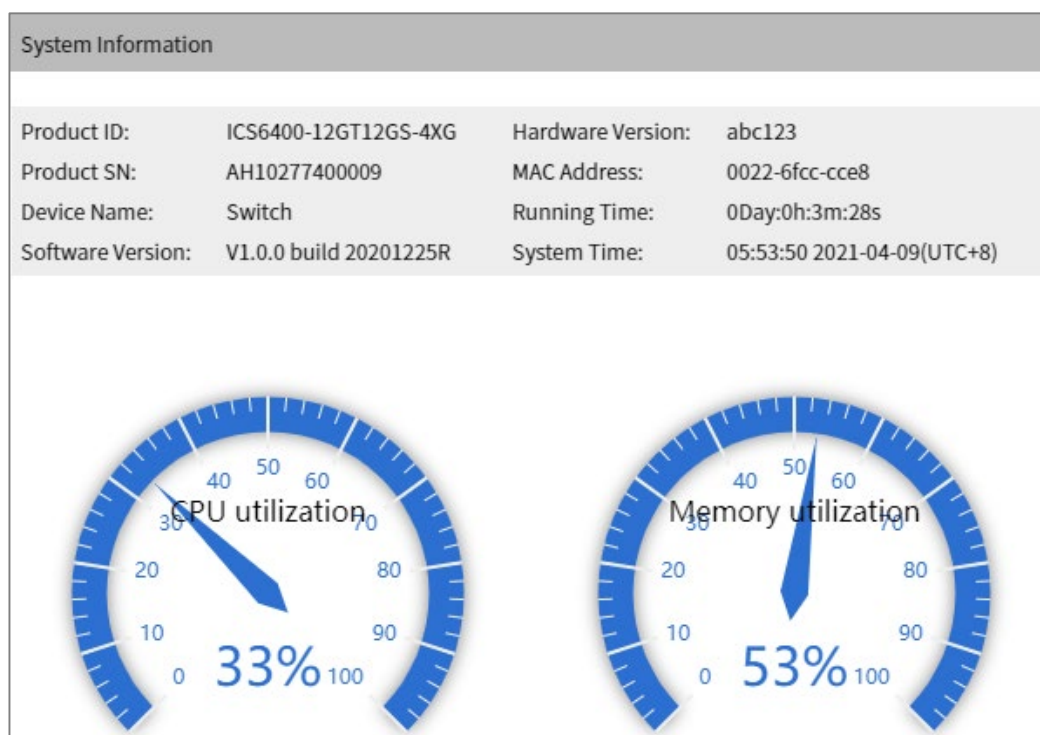

The main element configuration description of state information interface:

Interface Element	Discription
Product ID.	Model of the device.
Product SN.	Product SN
Device name	Network identity used by the device.
Software Version	Software version information currently in use.
Hardware Version	Current hardware version information, pay attention to the hardware version limits in software version.
MAC Address	Hardware address of device factory configuration.
Running time	Running time of the current device.
System Time	Current system time information. Users can specify the time zone and server in "NTP Configuration".
CPU Utilization	CPU usage of the current device. Note: When the CPU utilization rate and memory utilization rate are lower than 90%, the system is running normally.
Memory Utilization	Memory usage of the current device. Note: When the CPU utilization rate and memory utilization rate are lower than 90%, the system is running normally.

3 System Configuration

3.1 IP Address Configuration

Function Description


On the IP address configuration page, you can modify the vlanif1 interface address of the device. The format of IP address is: XXXX.XXXX.XXXX.XXXX/XX. For example, 192.168.1.254/24, 192.168.1.254 represents IP address, and 24 represents subnet mask 255.255.0.

Operation Path

Open in order: "System Configuration > IP Address Configuration".

Interface Description

IP address configuration interface is as follow:

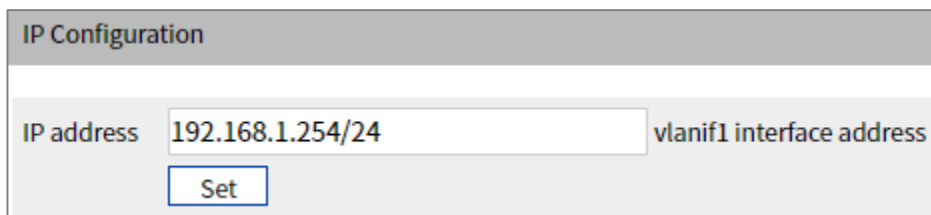

The screenshot shows a web interface titled "IP Configuration". It contains a text input field labeled "IP address" with the value "192.168.1.254/24". To the right of the input field is the label "vlanif1 interface address". Below the input field is a blue button labeled "Set".

The main elements configuration description of IP address configuration interface:

Interface Element	Discription
IP Address	IP address and subnet mask of the device, such as 192.168.1.254/24. Note: After modifying the IP of the device, re-enter the corresponding IP address to access the WEB interface.

3.2 User Configuration

Function Description

On the page of "User Configuration", user can:

- Add users, and set their login password and user rights.
- Delete user.

Operation Path

Open in order: "System Configuration > User Configuration".

Interface Description

The user configuration interface is as follows:

User Configuration			
<input type="checkbox"/>	+ Add	Delete	
<input type="checkbox"/>	Username	Password	Privilege
<input type="checkbox"/>	admin123	admin123	15

The main elements configuration description of user configuration interface:

Interface Element	Discription
Username	Identification of the visitor. Note: The user name cannot be empty, and the length is less than 16 characters.
Password	Password used by the visitor. Note: Password cannot be empty and the length is less than 8 characters.
Privilege	User permissions are divided into 16 levels from 0 to 15, corresponding to 4 different types of permissions, and the corresponding relationship is as follows. <ul style="list-style-type: none">• 0: visit level, user can only check device version information and some simple configuration.• 1: check level, user can check device configuration

Interface Element	Discription
	<p>information without modifying it.</p> <ul style="list-style-type: none">• 2: configuration level, user can check and configure device information, but not manage devices.• 3-15: manage level, user has all privileges of the device, including downloading, uploading, rebooting, modifying device information and other other operations.

3.3 Network Diagnosis

Network diagnosis is used to detect the status of the network, including:

- Ping
- Traceroute
- Port Loopback
- SFP Digital Diagnosis

3.3.1 Ping

Function Description


On the "Ping" page, users can use the Ping command to check whether the network is clear or the network connection speed. The Ping command uses the uniqueness of the IP addresses of the machines on the network to send a packet to the target IP address, and then asks the opposite end to return a packet with the same size to determine the connection status and delay value of the two network devices.

Operation Path

Open in order: "System Configuration > Diagnosis > Ping".

Interface Description

The Ping interface is as follows:

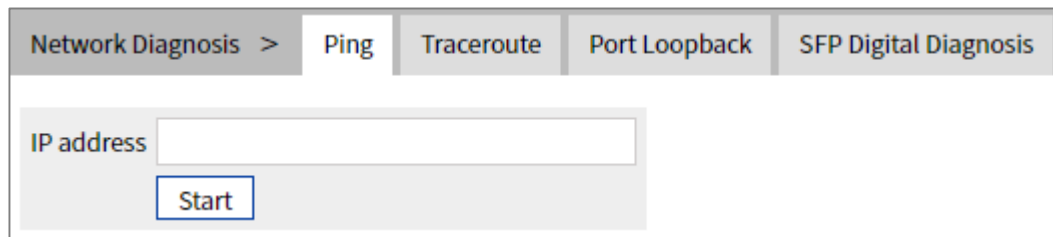

Network Diagnosis > Ping Traceroute Port Loopback SFP Digital Diagnosis

IP address


Start

The main elements configuration description of Ping configuration interface:

Interface Element	Discription
IP Address	The IP address of the detected device, that is, the destination address. The device can check the network intercommunity to other devices via the ping command.

Ping Configuration:

- Step 1** Fill in the IP address that needs ping in the IP address text box;
- Step 2** Click the "Start" button to check the ping results;

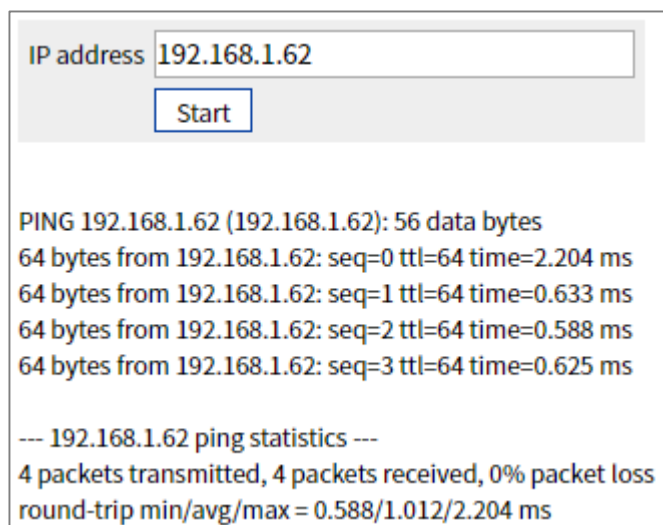

IP address

Start

PING 192.168.1.62 (192.168.1.62): 56 data bytes
64 bytes from 192.168.1.62: seq=0 ttl=64 time=2.204 ms
64 bytes from 192.168.1.62: seq=1 ttl=64 time=0.633 ms
64 bytes from 192.168.1.62: seq=2 ttl=64 time=0.588 ms
64 bytes from 192.168.1.62: seq=3 ttl=64 time=0.625 ms

--- 192.168.1.62 ping statistics ---
4 packets transmitted, 4 packets received, 0% packet loss
round-trip min/avg/max = 0.588/1.012/2.204 ms

- Step 3** End.

3.3.2 Traceroute

Function Description

On the "Traceroute" page, you can test the network situation between the switch and the target host, check whether the network connection is reachable, and help analyze

where the network fails. Traceroute measures how long it takes by sending small packets to the destination device until they return. Each device on a path Traceroute returns a test result three times, up to the maximum number of hops, until the destination address returns a test result. Output results include the time of each test (ms), the name of the device (if there is no name, replace it with IP address), and IP address.

Operation Path

Open in order: "System Configuration > Diagnosis > Traceroute".

Interface Description

Traceroute interface as follows:




The screenshot shows a web interface for network diagnosis. At the top, there are five tabs: 'Network Diagnosis >', 'Ping', 'Traceroute', 'Port Loopback', and 'SFP Digital Diagnosis'. The 'Traceroute' tab is currently selected. Below the tabs, there is a text input field labeled 'IP address' which is empty. Below the input field is a button labeled 'Start'.

The main element configuration description of Traceroute interface:

Interface Element	Discription
IP Address	IP address of the destination device, fill in the IP address of the opposite device that needs to be detected.

Traceroute Configuration:

- Step 1** Fill in the destination IP address in the "IP address" text box;
- Step 2** Click the "Start" button to check the results, as the picture below.

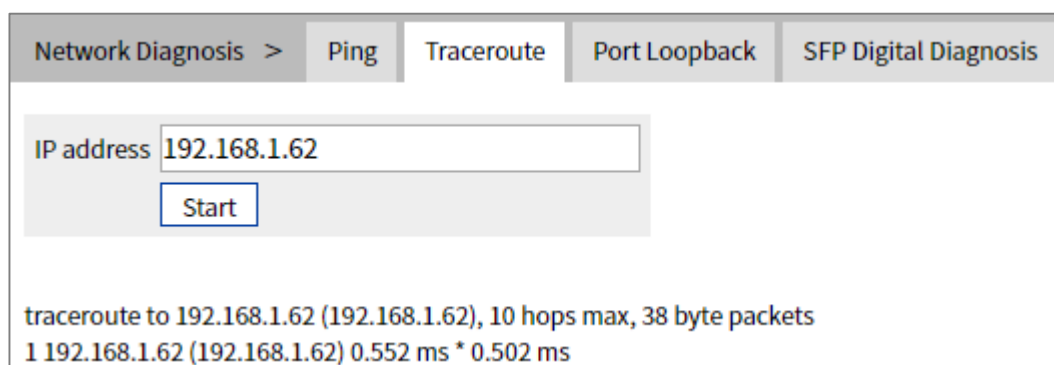

The screenshot shows the same web interface as before, but now the 'IP address' field contains the text '192.168.1.62'. The 'Start' button is still visible. Below the input field, the traceroute results are displayed in a monospaced font:

```
traceroute to 192.168.1.62 (192.168.1.62), 10 hops max, 38 byte packets
1 192.168.1.62 (192.168.1.62) 0.552 ms * 0.502 ms
```

Note:

"* * *" means that no response message is received within a certain period of time after the Nth hop. The number of device node hops in the path can be up to 10 hops.

Step 3 End.

3.3.3 Port Loopback

Function Description

On "Port Loopback" page, user can measure the loopback situation of the switch port PHY or MAC for the convenience of troubleshooting. Port loopback is a common method for the maintenance and troubleshooting of communication port line. Connect the sending end of tested device or line to its receiving end, then the tested device can judge whether the line or port exists breakpoint by receiving the signal sent by it. The test instrument hanged on the loopback route can also test the transmission quality of the loopback route.

Operation Path

Open in order: "System Configuration > Diagnosis > Port Loopback".

Interface Description

Port loopback interface as follows:

Network Diagnosis >
Ping
Traceroute
Port Loopback
SFP Digital Diagnosis

Config

Note: The port loopback may cause a broadcast storm and the page cannot be accessed. If you are not sure, do not use it.

	Port	State	Mode
<input type="checkbox"/>	ge1	up	disable
<input type="checkbox"/>	ge2	down	disable
<input type="checkbox"/>	ge3	down	disable
<input type="checkbox"/>	ge4	down	disable
<input type="checkbox"/>	ge5	down	disable
<input type="checkbox"/>	ge6	down	disable
<input type="checkbox"/>	ge7	down	disable
<input type="checkbox"/>	ge8	down	disable
<input type="checkbox"/>	ge9	down	disable
<input type="checkbox"/>	ge10	down	disable
<input type="checkbox"/>	ge11	down	disable
<input type="checkbox"/>	ge12	down	disable
<input type="checkbox"/>	ge13	down	disable
<input type="checkbox"/>	ge14	down	disable
<input type="checkbox"/>	ge15	down	disable
<input type="checkbox"/>	ge16	down	disable
<input type="checkbox"/>	ge17	down	disable
<input type="checkbox"/>	ge18	down	disable
<input type="checkbox"/>	ge19	down	disable
<input type="checkbox"/>	ge20	down	disable
<input type="checkbox"/>	ge21	down	disable
<input type="checkbox"/>	ge22	down	disable
<input type="checkbox"/>	ge23	down	disable
<input type="checkbox"/>	ge24	down	disable
<input type="checkbox"/>	xe1	down	disable
<input type="checkbox"/>	xe2	down	disable
<input type="checkbox"/>	xe3	down	disable
<input type="checkbox"/>	xe4	down	disable

The main element configuration description of port loopback interface:

Interface Element	Description (check the checkbox of the port, click “config” to configure it.)
Port	The corresponding port name of the device Ethernet port.
State	Display the connection status of the current port. <ul style="list-style-type: none"> up: connected; down: disconnected.
Mode	Port loopback method, options as follows: <ul style="list-style-type: none"> Disable: the port loopback function of this port is disabled; MAC: Data is looped back after transmitted to the MAC layer of Ethernet; PHY: Data is looped back after transmitted to the physical layer of Ethernet.

3.3.4 SFP Digital Diagnosis

Function Description

On the "SFP Digital Diagnostics" page, user can monitor SFP parameter in real time. This function has greatly facilitated the troubleshooting process of optical fiber link and the cost of on-site debugging.

Operation Path

Open in order: "Main Menu > System Configuration > Network Diagnosis > SFP Digital Diagnosis".



Interface Description

The SFP digital diagnosis interface is as follows:

Network Diagnosis > Ping Traceroute Port Loopback SFP Digital Diagnosis				
Port xe1 (SFP/SFP+) —				
Parameter	Mark	Actual Value	Unit	Reference Range
Temperature		44.00	°C	-40.00 - 95.00
Voltage		3.32	V	3.00 - 3.60
Bias Current		12.73	mA	0.00 - 55.00
Rx Power(dBM)		0.00	mW	-27.96 - 0.00
Tx Power(dBM)		-6.39	mW	-10.00 - -2.01
Port xe2(SFP/SFP+) —				
Parameter	Mark	Actual Value	Unit	Reference Range
Temperature		44.00	°C	0.00 - 100.00
Voltage		3.37	V	2.90 - 3.60
Bias Current		39.89	mA	3.00 - 85.00
Rx Power(dBM)	↓	-40.00	mW	-18.00 - 2.00
Tx Power(dBM)		-3.06	mW	-6.99 - 1.00

Configuration description of main elements of SFP digital diagnosis interface:

Interface Element	Discription
Port	The corresponding port name of the device Ethernet port.
Parameter	Parameter information of optical module: <ul style="list-style-type: none"> Temperature: This device's SFP temperature. Its unit is °C. The operating temperature of this SFP module should be within the temperature range of normal

Interface Element	Discription
	<p>operation;</p> <ul style="list-style-type: none"> • Voltage: The voltage that this device offers SFP. Its unit is V. Overvoltage could lead to the breakdown of CMOS device; under voltage would disable the normal operation of lasers; • Bias current: laser bias current; • Receiving power: Optical input power, referring to the lowest optical power of receiving in certain rate and bit error rate; • Transmission power: Optical output power, referring to the output power of optical source in the sending end of optical module.
Mark	<p>Identification of whether the parameter value is normal:</p> <ul style="list-style-type: none"> •  : The parameter value is less than the normal reference range; •  : The parameter value is greater than the normal reference range; • No ID: the parameter value is normal.
Actual value	Current values of parameters of optical module
Unit	<p>Units of each parameter of optical module:</p> <ul style="list-style-type: none"> • Temperature: °C; • Voltage: V; • Bias current: mA; • Receiving power: mW; • Transmission power: mW.
Reference Range	Reference range of optical module parameters

3.4 Login Mode Configuration

Function Description

On the “Login Mode Configuration” page, Telnet service and SSH service of the device can be enabled or disabled. Telnet service and SSH service can both control the WEB or CLI interface access of devices. Their difference lies in:


- Telnet transmission process adopts TCP protocol for plaintext transmission.
- SSH (Secure Shell) protocol provides secure remote login and encrypts transmission data, ensuring the safe transmission of data.

Operation Path





Open in order: "System Configuration > Login Mode Configuration ".

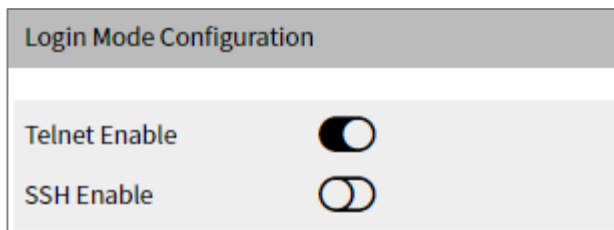Interface Description

Login mode configuration interface as follow:



Main elements configuration description of login mode configuration interface:

Interface Element	Discription
Telnet enable	TELNET service enable switch button, which is enabled by default. It has the following status: <ul style="list-style-type: none">• : represents enable;• : represents disable.
SSH enable	SSH service enable switch button, which is disabled by default. It has the following status: <ul style="list-style-type: none">• : represents enable;• : represents disable.

4 Port Configuration

4.1 Port Settings

Function Description

On the “Port Settings” page, you can implement the following functions:

- Set parameters such as rate mode, duplex mode, flow control, maximum frame length and interface switch;
- View port status.

Operation Path

Open in order: "Port Configuration > Port Setting".

Interface Description

Port setting interface as follows:

Port Setting

Config

Note: Affecting the configuration of webpage access, changing the configuration may cause the web to no longer be accessible !

Port type selection: ☒ ge ☐ xe

<input type="checkbox"/>	Port	State	Medium	Rate	Duplex mode	Flow control	Max frame	Enable
<input type="checkbox"/>	ge1	up	copper	100m(auto)	full(auto)	disable	1518	enable
<input type="checkbox"/>	ge2	down	copper	auto	auto	disable	1518	enable
<input type="checkbox"/>	ge3	down	copper	auto	auto	disable	1518	enable
<input type="checkbox"/>	ge4	down	copper	auto	auto	disable	1518	enable
<input type="checkbox"/>	ge5	down	fiber	auto	auto	disable	1518	enable
<input type="checkbox"/>	ge6	down	fiber	auto	auto	disable	1518	enable
<input type="checkbox"/>	ge7	down	fiber	auto	auto	disable	1518	enable
<input type="checkbox"/>	ge8	down	fiber	auto	auto	disable	1518	enable
<input type="checkbox"/>	ge9	down	copper	auto	auto	disable	1518	enable
<input type="checkbox"/>	ge10	down	copper	auto	auto	disable	1518	enable
<input type="checkbox"/>	ge11	down	copper	auto	auto	disable	1518	enable
<input type="checkbox"/>	ge12	down	copper	auto	auto	disable	1518	enable
<input type="checkbox"/>	ge13	down	fiber	auto	auto	disable	1518	enable
<input type="checkbox"/>	ge14	down	fiber	auto	auto	disable	1518	enable
<input type="checkbox"/>	ge15	down	fiber	auto	auto	disable	1518	enable
<input type="checkbox"/>	ge16	down	fiber	auto	auto	disable	1518	enable
<input type="checkbox"/>	ge17	down	copper	auto	auto	disable	1518	enable
<input type="checkbox"/>	ge18	down	copper	auto	auto	disable	1518	enable
<input type="checkbox"/>	ge19	down	copper	auto	auto	disable	1518	enable
<input type="checkbox"/>	ge20	down	copper	auto	auto	disable	1518	enable
<input type="checkbox"/>	ge21	down	fiber	auto	auto	disable	1518	enable
<input type="checkbox"/>	ge22	down	fiber	auto	auto	disable	1518	enable
<input type="checkbox"/>	ge23	down	fiber	auto	auto	disable	1518	enable
<input type="checkbox"/>	ge24	down	fiber	auto	auto	disable	1518	enable
<input type="checkbox"/>	xe1	down	fiber	10g(auto)	full(auto)	disable	1518	enable
<input type="checkbox"/>	xe2	down	fiber	10g(auto)	full(auto)	disable	1518	enable
<input type="checkbox"/>	xe3	down	fiber	10g(auto)	full(auto)	disable	1518	enable
<input type="checkbox"/>	xe4	down	fiber	10g(auto)	full(auto)	disable	1518	enable

Main elements configuration description of port settings interface:

Interface Element	Description (check the checkbox of the port, click “config” to configure it.)
Port type selection	<p>Select the port type, and check the ports of the same type in batches:</p> <ul style="list-style-type: none"> 100M port (Fe); Gigabit port (ge); 10Gigabit port (xe); Static aggregation port (sa); Dynamic Aggregation Port (po). <p>Note: The port type shall be determined by the port supported by the device, and the aggregation port shall be reflected after configuration.</p>
Port	The corresponding port name of the device Ethernet port.
State	<p>Ethernet port connection status, display status as follows:</p> <ul style="list-style-type: none"> down: represent the port is disconnected;

Interface Element	Description (check the checkbox of the port, click "config" to configure it.)
	<ul style="list-style-type: none"> up: represent the port is connected.
Medium	<p>The connection types of Ethernet ports, the status are shown as follows:</p> <ul style="list-style-type: none"> copper: copper port medium. fiber: fiber port medium. <p>Note: When the device has a Combo port, the medium of Combo port is "auto", "copper" or "fiber".</p>
Rate	<p>The default is self-adaption mode, and the display status is as follows:</p> <ul style="list-style-type: none"> auto: self-adaption; 10m: 10M; 100m: 100M; 1g: Gigabit. 10g: 10 Gigabit. <p>Note: The selected maximum rate is different for different bandwidth ports.</p>
Duplex Mode	<p>The default is self-adaption mode, and the display status is as follows:</p> <ul style="list-style-type: none"> auto: self-adaption; half: half-duplex; full: full duplex.
Flow Control	<p>Port flow control status, the display status is as follows:</p> <ul style="list-style-type: none"> disable tx: enable the port to send data flow control; rx: enable flow control of port data receiving; both: enable flow control of both port data sending and receiving.
Max Frame	<p>The maximum data frame length that passes Ethernet port, the default value is 1518 and the supported input range is 64~16360.</p>
Enable	<p>Enable or disable Ethernet port. Options are as follows:</p> <ul style="list-style-type: none"> enable disable <p>Notice: If the port "disable" is selected, the port will not be used.</p>

4.2 Storm Suppression

Function Description

On the "Storm Control" page, user can set the maximum broadcast, multicast or unknown unicast packet flow the port allows. When the sum of each port broadcast, unknown multicast or unknown unicast flow achieves the value user sets, the system will discard the packets beyond the broadcast, unknown multicast or unknown unicast flow limit, so that the proportion of overall broadcast, unknown multicast or unknown unicast flow can be reduced to limited range, ensuring the normal operation of network business.

Operation Path

Open in order: "Port Configuration > Storm Suppression".

Interface Description

Storm control interface as follows:

Storm Control

Config

Note: All bandwidths are k=1000, m=1000k, g=1000m; all unrestricted or unconfigured are indicated by "-" !

Port type selection: ☒ ge ☐ xe

<input type="checkbox"/>	Port	Broadcast(bps)	Multicast(bps)	Unicast(bps)
<input type="checkbox"/>	ge1	10M	-	100M
<input type="checkbox"/>	ge2	10M	-	100M
<input type="checkbox"/>	ge3	10M	-	100M
<input type="checkbox"/>	ge4	10M	-	100M
<input type="checkbox"/>	ge5	10M	-	100M
<input type="checkbox"/>	ge6	10M	-	100M
<input type="checkbox"/>	ge7	10M	-	100M
<input type="checkbox"/>	ge8	10M	-	100M
<input type="checkbox"/>	ge9	10M	-	100M
<input type="checkbox"/>	ge10	10M	-	100M
<input type="checkbox"/>	ge11	10M	-	100M
<input type="checkbox"/>	ge12	10M	-	100M
<input type="checkbox"/>	ge13	10M	-	100M
<input type="checkbox"/>	ge14	10M	-	100M
<input type="checkbox"/>	ge15	10M	-	100M
<input type="checkbox"/>	ge16	10M	-	100M
<input type="checkbox"/>	ge17	10M	-	100M
<input type="checkbox"/>	ge18	10M	-	100M
<input type="checkbox"/>	ge19	10M	-	100M
<input type="checkbox"/>	ge20	10M	-	100M
<input type="checkbox"/>	ge21	10M	-	100M
<input type="checkbox"/>	ge22	10M	-	100M
<input type="checkbox"/>	ge23	10M	-	100M
<input type="checkbox"/>	ge24	10M	-	100M
<input type="checkbox"/>	xe1	100M	-	1.00G
<input type="checkbox"/>	xe2	100M	-	1.00G
<input type="checkbox"/>	xe3	100M	-	1.00G
<input type="checkbox"/>	xe4	100M	-	1.00G

Main elements configuration description of storm suppression interface:

Interface Element	Description (check the checkbox of the port, click "config" to configure it.)
Port type selection	<p>Select the port type, and check the ports of the same type in batches:</p> <ul style="list-style-type: none"> • 100M port (Fe); • Gigabit port (ge); • 10Gigabit port (xe); • Static aggregation port (sa); • Dynamic Aggregation Port (po). <p>Note:</p>

Interface Element	Description (check the checkbox of the port, click "config" to configure it.)
	The port type shall be determined by the port supported by the device, and the aggregation port shall be reflected after configuration.
Port	The corresponding port name of the device Ethernet port.
Broadcast (bps)	<p>The port control for broadcast packet transmission speed, input value range:</p> <ul style="list-style-type: none"> 100M interface: 0-100,000Kbps or 0-100Mbps. Gigabit interface: 0-1,000,000Kbps or 0-1,000Mbps or 0-1Gbps. 10 Gigabit interface: 0-10,000,000Kbps or 0-10,000Mbps or 0-10Gbps. <p>Note: Broadcast packet, namely, the data frame with the destination address of FF-FF-FF-FF-FF-FF.</p>
Multicast (bps)	<p>The port control for unknown multicast data packet transmission speed, input value range:</p> <ul style="list-style-type: none"> 100M interface: 0-100,000Kbps or 0-100Mbps. Gigabit interface: 0-1,000,000Kbps or 0-1,000Mbps or 0-1Gbps. 10 Gigabit interface: 0-10,000,000Kbps or 0-10,000Mbps or 0-10Gbps. <p>Note: Multicast packet, namely, the destination address is XX-XX-XX-XX-XX-XX data frame, the second X is odd number, such as: 1, 3, 5, 7, 9, B, D, F, other X represents arbitrary number.</p>
Unicast (bps)	<p>The port control for unknown unicast data packet transmission speed, input value range:</p> <ul style="list-style-type: none"> 100M interface: 0-100,000Kbps or 0-100Mbps. Gigabit interface: 0-1,000,000Kbps or 0-1,000Mbps or 0-1Gbps. 10 Gigabit interface: 0-10,000,000Kbps or 0-10,000Mbps or 0-10Gbps. <p>Note: Unknown unicast packet, namely, the MAC address of the data frame doesn't exist in the MAC address table of the device, which needs to be forwarded to all ports.</p>



Note

-
- Supports unit of K/M/G when click the "Config" button to configure the rate. In WEB display, unit conversion will be conducted and similar values will be taken according to the input value and the unit.
 - Enter "0" means on limit on the current rate.
 - Different types of ports support different rates, and the port type is based on the actual port supported by the device.
-

4.3 Port Rate Limit

Function Description

On the "Port rate-Limit" page, User can limit the communication flow of each port or cancel the port flow limit. The device provides port speed limit, including entrance and exit speed limit. User can select a fixed speed, the device will discard the packet or adopt flow control to limit the transmission speed or receiving speed of opposite device according to the flow control is enabled or not.


Operation Path

Open in order: "Port Configuration > Port RateLimit".

Interface Description

Port rate limit interface as follows:

Port Speed Limit

 Config

Note: All bandwidths are k=1000, m=1000k, g=1000m; all unrestricted or unconfigured are indicated by "-" !

Port type selection: ☒ ge ☐ xe

<input type="checkbox"/>	Port	Bandwidth(kbps)	Operation
<input type="checkbox"/>	ge1	-	Clear
<input type="checkbox"/>	ge2	-	Clear
<input type="checkbox"/>	ge3	-	Clear
<input type="checkbox"/>	ge4	-	Clear
<input type="checkbox"/>	ge5	-	Clear
<input type="checkbox"/>	ge6	-	Clear
<input type="checkbox"/>	ge7	-	Clear
<input type="checkbox"/>	ge8	-	Clear
<input type="checkbox"/>	ge9	-	Clear
<input type="checkbox"/>	ge10	-	Clear
<input type="checkbox"/>	ge11	-	Clear
<input type="checkbox"/>	ge12	-	Clear
<input type="checkbox"/>	ge13	-	Clear
<input type="checkbox"/>	ge14	-	Clear
<input type="checkbox"/>	ge15	-	Clear
<input type="checkbox"/>	ge16	-	Clear
<input type="checkbox"/>	ge17	-	Clear
<input type="checkbox"/>	ge18	-	Clear
<input type="checkbox"/>	ge19	-	Clear
<input type="checkbox"/>	ge20	-	Clear
<input type="checkbox"/>	ge21	-	Clear
<input type="checkbox"/>	ge22	-	Clear
<input type="checkbox"/>	ge23	-	Clear
<input type="checkbox"/>	ge24	-	Clear
<input type="checkbox"/>	xe1	-	Clear
<input type="checkbox"/>	xe2	-	Clear
<input type="checkbox"/>	xe3	-	Clear
<input type="checkbox"/>	xe4	-	Clear

The main element configuration description of port rate limit interface:

Interface Element	Description (check the checkbox of the port, click "config" to configure it.)
Port type selection	<p>Select the port type, and check the ports of the same type in batches:</p> <ul style="list-style-type: none"> 100M port (Fe); Gigabit port (ge); 10Gigabit port (xe); Static aggregation port (sa); Dynamic Aggregation Port (po). <p>Note: The port type shall be determined by the port supported by the device, and the aggregation port shall be reflected after</p>

Interface Element	Description (check the checkbox of the port, click "config" to configure it.)
	configuration.
Port	The corresponding port name of the device Ethernet port.
Bandwidth (bps)	<p>The port control for all input and output data transmission speed, it has to be a multiple of 64Kbps, input value range:</p> <ul style="list-style-type: none"> 100M interface: 64-100,000Kbps or 0-100Mbps. Gigabit interface: 64-1,000,000Kbps, 1-1000Mbps or 1Gbps; 10 Gigabit interface: 64-10,000,000Kbps or 1-10,000Mbps or 1-10Gbps. <p>Note: Supports unit of K/M/G when configure the rate. In WEB display, unit conversion will be conducted and the simplest values will be displayed according to the input value and the unit.</p>
Operation	Click "delete" to delete port rate limit configuration, port rate restores to no limit by default.

**Note**

- When using the port rate limit, flow control should be enabled, otherwise the rate between devices will no longer be a smooth curve;
- When using the port rate limit, packet loss should not occur unless the flow control is disabled. The representation of packet loss is the fluctuating transmission speed.
- Port speed limit has high requirements on network cable quality, otherwise lots of conflict packets and broken packet would appear.

4.4 Port Mirroring

Function Description

On the "Port mirroring" page, user can copy the data from the origin port to appointed port for data analysis and monitoring.

Operation Path

Open in order: "Port Configuration > Port Mirroring".

Interface Description

Port mirror interface as follows:

Port Mirroring

+ Add

Delete

<input type="checkbox"/>	Session ID	Source port	Destination port	Operation
--------------------------	------------	-------------	------------------	-----------

The main element configuration description of port mirror interface:

Interface Element	Description (check the checkbox of the port, and click "Add" button to configure it.
Session ID	Device mirror ID number, value is 1-4. Note: The device supports maximum 4-way mirror sessions.
Source port	Monitored ports, from which the device will collect input or output messages. There can be one or more mirror ports.
Destination port	Monitoring port, copying and analyzing messages from source port.
Operation	Click "Edit" under "Operation" to configure the direction type of source port data to be monitored in this session. Click "Delete" under "operation" to delete the corresponding port mirroring entry directly. Data direction options are as follows: <ul style="list-style-type: none"> transmit:egress data, the message sent by the source port will be mirrored to the destination port; receive: ingress data, the packet received by the source port will be mirrored to the destination port; Both: all data, mirror the source port receiving and sending packets at the same time. Note: Directions can only be superimposed and cannot be deleted.
Add	Click "Add" to increase the port mirror entries.
Delete	Check the checkbox of port mirror entries, click "Delete" button to delete all mirror group entries



Note

-
- This function must be disabled during normal use, otherwise all port-based advanced management functions, such as RSTP and IGMP Snooping, cannot be used.
 - Mirror function only deals with FCS normal packet; it cannot handle the wrong data frame
-

4.5 Link Aggregation

Link aggregation is the shorter form of Ethernet link aggregation; it binds multiple Ethernet physical links into a logical link, achieving the purpose of increasing the link bandwidth. At the same time, these bundled links can effectively improve the link reliability by mutual dynamic backup.

The Link Aggregation Control Protocol (LACP) protocol based on the IEEE802.3ad standard is a protocol for implementing dynamic link aggregation. Devices running this protocol exchange LACPDU (Link Aggregation Control Protocol Data Unit, Link Aggregation Control Protocol Data Unit) to exchange link aggregation related information.

Based on the enabling or disabling of LACP protocol, the link aggregation can be divided into two modes, static aggregation and dynamic aggregation. LACP priority is used to distinguish the priority of different interfaces being selected as active interfaces. The smaller the priority value, the higher the priority.

Function Description

Under static aggregation mode, the member port in aggregation group disables LACP protocol, its port status is maintained manually.

Operation Path

Open in order: "Port Configuration > Link Aggregation Config".

Interface Description

Link Aggregation interface as below:

Link Aggregation

Lacp priority 32768 0-65535,32768 by default Set

+ Add

Delete

<input type="checkbox"/>	Group name	Work mode	Port list	Port priority	Operation

The main element configuration description of Link Aggregation interface:

Interface Element	Discription
Lacp priority	<p>LACP priority setting, the setting range is 0-65535, and the default value is 32768.</p> <p>Note:</p> <p>The lower the priority value of the system LACP is, the higher the priority is, and the activity interface of the device with high system priority is selected at both ends of the aggregation link.</p>
Group name	The ID number of static aggregation link, support up to 12 groups, each group can configure up to 8 ports to join aggregation.
Work mode	<p>There are 6 options for the configuration of trunk group load balance mode:</p> <ul style="list-style-type: none"> • Dst-ip: Load balance mode based on destination IP; • Dst-mac: Load balance mode based on destination MAC; • Src-dst-ip: Load balance mode based on source and destination IP; • Src-dst-mac: Load balance mode based on source and destination MAC; • Src-ip: Load balance mode based on source IP; • Src-mac: Load balance mode based on source MAC.
Port list	Port member in the link aggregation group.
Port priority	<p>Port LACP priority, value range 0-65535, default value 32768. Used to distinguish the priority of different interfaces in the same aggregation link being selected as activity interfaces.</p> <p>Note:</p> <p>The lower the priority value of interface LACP is, the higher the priority is, and the interface with higher priority will be selected as the activity interface.</p>
Operation	Click "Edit" under "operation" to set the working mode and port priority for the specified dynamic aggregation group.

Interface Element	Discription
	Click "Delete" under "operation" to delete the corresponding link aggregation group directly.
Add	Click "Add" to add link aggregation entry.
Delete	Check the checkbox of link aggregation entry and click "Delete" button to delete link aggregation entry.

Interface Description: Add

The Link Aggregation-Add interface as follows:

The screenshot shows a web-based configuration window for Link Aggregation. It includes the following elements:

- Group ID:** A dropdown menu set to '1'.
- Type:** A dropdown menu set to 'static'.
- Port list:** A dropdown menu set to 'active'.
- Load mode:** A dropdown menu set to 'src-dst-mac'.
- Port Selection:** A grid of checkboxes for various ports:
 - Row 1: ge1, ge2, ge3
 - Row 2: ge4, ge5, ge6
 - Row 3: ge7, ge8, ge9
 - Row 4: ge10, ge11, ge12
 - Row 5: ge13, ge14, ge15
 - Row 6: ge16, ge17, ge18
 - Row 7: ge19, ge20, ge21
 - Row 8: ge22, ge23, ge24
 - Row 9: xe1, xe2, xe3
 - Row 10: xe4
- Buttons:** A 'Set' button at the bottom right.
- Text:** 'Tick up to 8' at the bottom left.

The main elements configuration description of Link Aggregation-Add interface:

Interface Element	Discription
Group ID	The ID number of static aggregation link, support up to 12 groups, each group can configure up to 8 ports to join aggregation.
Type	Aggregation group mode: <ul style="list-style-type: none"> Static: Static aggregation; Dynamic: Dynamic aggregation.

Interface Element	Discription
Port list	<p>The drop-down box of port member:</p> <ul style="list-style-type: none">• Active: the active interface, that is, the interface for forwarding data.• Passive: inactive interface, that is, interface that does not forward data. <p>Note: When the type is Static, this function cannot be edited.</p>
Load mode	<p>There are 6 options for the configuration of trunk group load balance mode:</p> <ul style="list-style-type: none">• Dst-ip: Load balance mode based on destination IP;• Dst-mac: Load balance mode based on destination MAC;• Src-dst-ip: Load balance mode based on source and destination IP;• Src-dst-mac: Load balance mode based on source and destination MAC;• Src-ip: Load balance mode based on source IP;• Src-mac: Load balance mode based on source MAC.
Port	Port member in the aggregation group.

4.6 Port Statistics

On the Port Statistics page, you can implement the following functions:

- Check the number of messages sent and received by each port and the number of message bytes; Number of discarded and erroneous messages.
- Check the classification statistics of the total number of messages sent and received by the designated port and the number of bytes of messages.

4.6.1 Port Statistics-Overview

Function Description

In the "Port Statistics - Overview" page, the following functions can be achieved:

- Check the number of messages sent and received by each port and the number of message bytes; Number of discarded and erroneous messages.

- Click the “Clear” button to clear the overview information of the screen.

Operation Path

Open in order: "Port Configuration > Port statistics > Port Statistics-Overview".

Interface Description

Port Statistics-Overview interface as follows:

Port Statistics > Port Statistics - Overview Port Statistics - Port								
Clear								
Port	Received packets	Sent packets	Received byte	Sent byte	Received drop	Sent drop	Receive error message	Send error message
ge1	9966	3174	986449	2486095	2356	3	0	0
ge2	0	0	0	0	0	0	0	0
ge3	0	0	0	0	0	0	0	0
ge4	0	0	0	0	0	0	0	0
ge5	0	0	0	0	0	0	0	0
ge6	0	0	0	0	0	0	0	0
ge7	0	0	0	0	0	0	0	0
ge8	0	0	0	0	0	0	0	0
ge9	0	0	0	0	0	0	0	0
ge10	0	0	0	0	0	0	0	0
ge11	0	0	0	0	0	0	0	0
ge12	0	0	0	0	0	0	0	0
ge13	0	0	0	0	0	0	0	0
ge14	0	0	0	0	0	0	0	0
ge15	0	0	0	0	0	0	0	0
ge16	0	0	0	0	0	0	0	0
ge17	0	0	0	0	0	0	0	0
ge18	0	0	0	0	0	0	0	0
ge19	0	0	0	0	0	0	0	0
ge20	0	0	0	0	0	0	0	0
ge21	0	0	0	0	0	0	0	0
ge22	0	0	0	0	0	0	0	0
ge23	0	0	0	0	0	0	0	0
ge24	0	0	0	0	0	0	0	0
xe1	0	0	0	0	0	0	0	0
xe2	0	0	0	0	0	0	0	0
xe3	0	0	0	0	0	0	0	0
xe4	0	0	0	0	0	0	0	0

4.6.2 Port Statistics-Port

Function Description

On the Port Statistics-Port page, you can implement the following functions:

- Check the classification statistics of the total number of messages sent and received by the designated port and the number of bytes of messages.
- Click the “Clear” button to clear the port information from the screen.

Operation Path

Open in order: "Port Configuration > Port statistics > Port Statistics-Port".

Interface Description

Port Statistics-Port interface as follows:

Port Statistics > Port Statistics - Overview Port Statistics - Port		
Port	ge1	<input type="button" value="Clear"/>
	Inbound direction	Outbound direction
Counting statistics		
No. of packets	10746	3442
No. of bytes	1070838	2644904
Unicast No.	3894	3435
Multicast No.	649	6
No. of broadcasts	6203	1
Pause frame	0	0
Length count		
64 bytes	6756	911
65-127 bytes	3160	466
128-255 bytes	325	202
256-511 bytes	45	238
512-1023 bytes	460	34
1024-1518 bytes	0	1591
1518-2047 bytes	0	0
2048-4095 bytes	0	0
4096-9216 bytes	0	0

4.7 Port Isolation

Function Description


Port isolation is to isolate different interfaces of the same VLAN. Ports of the same VLAN that are not in the same isolation group cannot be accessed from each other. Port isolation has provided safer and more flexible networking scheme for users.

Operation Path

Open in order: "Port Configuration > Port Isolation".

Interface Description

Isolate-port configuration interface as follows:

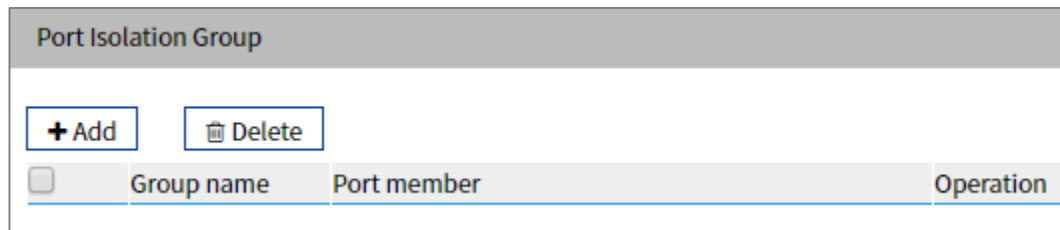

Port Isolation Group		
<input type="checkbox"/>	Group name	Port member
		Operation

The main element configuration description of isolate-port config interface:

Interface Element	Discription
Group name	The Group ID of the device's port isolation group. Its value range is 0-8.
Port member	The port of the isolation group that this device joins
Operation	Click "Delete" button to delete the corresponding port isolation group.
Add	Click "add" button to add the group name of isolation group and isolation port.
Delete	Check the radio box of port isolation group, and click "delete" button to delete port isolation group.

4.8 Link Flapping Protection

Network jitter or network cable failure will cause frequent Up/Down changes in the physical state of device interface, which will lead to link flapping and frequent changes in network topology, thus affecting user communication. For example, in the application of active-standby link, when the physical Up/Down state of the main link interface changes frequently, the service will switch back and forth between the active-standby link, which will not only increase the device burden, but also cause the loss of service data.

In order to solve the above problems, users can configure the link flapping protection function, and close the interface whose physical Up/Down state changes frequently to keep it remain Down, so that the network topology will stop changing frequently back and forth.

4.8.1 Global Configuration

Function Description

On the "Global Config" page, user can configure relative parameters of link flapping protection.

Operation Path

Open in order: "Port Configuration > Link Flapping Protection > Global Configuration".

Interface Description

Global configuration interface is as follows:

Link Shock Protection > Global configuration Port Configuration

In the default state, the link oscillates five times within 20s, an alarm log is generated, and the port is set to shutdown state

Detection interval 20 Range: 10-100(s), default: 20(s)

Turbulence hreshold 5 Range: 3-100, default: 5

Automatic recovery ☐

Recovery time 3600 Range: 30-86400 (s), default: 3600(s)

Set

The main element configuration description of global configuration interface:

Interface Element	Discription
Detection interval	The value range of link detection interval is 10-100s, and the default value is 20s.
Turbulence threshold	The threshold value of the number of oscillations detected by the link. If the number of oscillations exceeds the threshold value within the time specified by the "detection interval", an alarm log will be generated and the port will be set to shutdown. The value range is from 3 to100, default value is 5.
Automatic recovery	Automatic recovery radio box. After being checked, the port

Interface Element	Discription
	will automatically return to normal within the specified time.
Recovery time	The value range of the time when the port automatically returns to normal is 30-86400s, and the default value is 3600s.

4.8.2 Port Configuration

Function Description

On the "Port Config" page, user can enable port link flapping protection.

Operation Path

Open in order: "Port Configuration > Link Flapping Protection > Port Configuration".

Interface Description

Check port configuration interface as below:

Link Shock Protection >
Global configuration
Port Configuration

In the default state, the link oscillates five times within 20s, an alarm log is generated, and the port is set to shutdown state

Enable
Cancel

Port type selection: ☒ ge ☐ xe ☐ all

<input type="checkbox"/>	Port	Enabled state	Port status
<input type="checkbox"/>	ge1	-	up
<input type="checkbox"/>	ge2	-	down
<input type="checkbox"/>	ge3	-	down
<input type="checkbox"/>	ge4	-	down
<input type="checkbox"/>	ge5	-	down
<input type="checkbox"/>	ge6	-	down
<input type="checkbox"/>	ge7	-	down
<input type="checkbox"/>	ge8	-	down
<input type="checkbox"/>	ge9	-	down
<input type="checkbox"/>	ge10	-	down
<input type="checkbox"/>	ge11	-	down
<input type="checkbox"/>	ge12	-	down
<input type="checkbox"/>	ge13	-	down
<input type="checkbox"/>	ge14	-	down
<input type="checkbox"/>	ge15	-	down
<input type="checkbox"/>	ge16	-	down
<input type="checkbox"/>	ge17	-	down
<input type="checkbox"/>	ge18	-	down
<input type="checkbox"/>	ge19	-	down
<input type="checkbox"/>	ge20	-	down
<input type="checkbox"/>	ge21	-	down
<input type="checkbox"/>	ge22	-	down
<input type="checkbox"/>	ge23	-	down
<input type="checkbox"/>	ge24	-	down
<input type="checkbox"/>	xe1	-	down
<input type="checkbox"/>	xe2	-	down
<input type="checkbox"/>	xe3	-	down
<input type="checkbox"/>	xe4	-	down

The main element configuration description of port configuration interface:

Interface Element	Discription
Enable	Select the port and click Enable to enable the link flapping protection function of the port.
Cancel	Select the port and click Disable to disable the link flapping protection function of the port.
Port type selection	Click to select ports of the same type in batches, and the options are fe, ge, xe and all, where all is all selected. Note: The port type shall be determined by the port supported by the device, and the aggregation port shall be reflected after configuration.
Radiobox	Tick to enable link oscillation protection for this port.
Port	The corresponding port number of this device's Ethernet port.

Interface Element	Discription
Enable state	Whether the port is enabled for link flapping protection. <ul style="list-style-type: none">• On: means enabled;• - : means not enabled.
Port status	Ethernet port connection status, display status as follows: <ul style="list-style-type: none">• down: port is disconnected;• up: port is connected.

5 Layer 2 Configuration

5.1 MAC Configuration

MAC (Media Access Control) address is the hardware identity of network device; the switch forwards the message according to MAC address. MAC address has uniqueness, which has guaranteed the correct retransmission of message. Each switch is maintaining a MAC address table. In the table, MAC address is corresponding to the switch port. When the switch receives data frames, it decides whether to filter them or forward them to the corresponding port according to the MAC address table. MAC address is the foundation and premise that switch achieves fast forwarding.

5.1.1 MAC Settings

Each port in the switch is equipped with automatic address learning function, it stores the frame source address (source MAC address, switch port number) that port sends and receives in the address table. Ageing time is a parameter influencing the switch learning process; the default value is 300 seconds. When the timekeeping starts after an address record is added to the address table, if each port doesn't receive the frame whose source address is the MAC address within the ageing time, then these addresses will be deleted from dynamic forwarding address table (source MAC address, destination MAC address and their corresponding switch port number).

Function Description

On the page of "Mac Settings", user can:

- Enable or disable the aging time of dynamic MAC addresses;
- Filters view static/dynamic unicast/multicast information.

Operation Path

Open in order: "Layer 2 Configuration > MAC Configuration > MAC Settings".

Interface Description

MAC configuration interface as follows:

MAC Configuration >
MAC Settings
Static MAC
Static Multicast MAC

MAC aging time range 10-1000000 unit(s)

Filter mode ALL

The MAC and VLAN ID are the same, the ports will be merged, but the total number will not change !

MAC	Forwarding type	Port	VLAN ID	Type
0022.6fcc.0004	forward	ge1	1	dynamic
00e0.4d2f.2f52	forward	ge1	1	dynamic
3497.f68e.4334	forward	ge1	1	dynamic
aa22.660d.6464	forward	ge1	1	dynamic
aa22.660d.6465	forward	ge1	1	dynamic
aa22.660d.6466	forward	ge1	1	dynamic
aa22.660d.6467	forward	ge1	1	dynamic
aa22.660d.646b	forward	ge1	1	dynamic
aa22.660d.646c	forward	ge1	1	dynamic
aa22.660d.646e	forward	ge1	1	dynamic
aa22.660d.6474	forward	ge1	1	dynamic
aa22.660d.6477	forward	ge1	1	dynamic

Total item 12
Total page 1
Current page < >

The main element configuration description of MAC setting interface:

Interface Element	Discription
MAC Aging Time	MAC address aging-time, unit is second, default value is 300, and range is 10-1000000. Note: When "Close Address Aging" is selected, the MAC address will no longer age and become a static address.
Filter mode	Drop-down list of MAC mode to filter the display of the MAC address list of the specified type. The options are as follows: <ul style="list-style-type: none"> • All; • Dynamic Unicast • Dynamic Multicast • Static Multicast • Static Unicast
MAC	The dynamic MAC addresses that the device have learned or the static MAC address information that user has configured.

Interface Element	Discription
Forwarding Type	MAC forwarding type, as shown below: <ul style="list-style-type: none"> Discard Forward
Port	Corresponding port number of the MAC address.
VLAN ID	VLAN ID number the data MAC address sending belongs to.
Type	The type of MAC address, it displays as follows: <ul style="list-style-type: none"> Dynamic: dynamic MAC address; Static: static MAC address.

5.1.2 Static MAC

Function Description

On the static MAC page, you can bind unicast MAC addresses manually. The unicast address after binding is static MAC, which will not age.

Operation Path

Open in order: "Layer 2 Configuration > MAC Configuration > Static Mac".

Interface Description

Static MAC interface as follows:

MAC Configuration > MAC Settings Static MAC Static Multicast MAC

[+ Add](#) [Delete](#)

MAC	Forwarding type	Port	VLAN ID	Operation
-----	-----------------	------	---------	-----------

Total item 0 Total page 0 Current page < 1 >

The main element configuration description of static MAC interface:

Interface Element	Discription
MAC	Fill in the unicast MAC address that needs to bind the interface, such as 0001.0001.0001.
Forwarding Type	The forward type of MAC, discard or transmit, it displays

Interface Element	Discription
	as follows: <ul style="list-style-type: none"> • Discard; • Forward.
Port	The Binding Port Number.
VLAN ID	VLAN ID number the data MAC address sending belongs to, such as 1-4094. Note: Input VLAN ID is the existing ID.
Operation	Click “Delete” under “operation” to delete the corresponding MAC entry directly.
Add	Click “Add” button to add static MAC entry.
Delete	Check the radio box of MAC entries and click “delete” button to delete MAC entries.

**Note**

- The function is a sort of security mechanism, please carefully confirm the setting, otherwise, part of the devices won't be able to communicate;
- Please don't adopt multicast address as the entering address;
- Please don't enter reserved MAC address, such as the local MAC address.

5.1.3 Static Multicast MAC

Function Description

On the static multicast MAC page, you can bind multicast MAC addresses. The bound multicast address is static multicast MAC, which will not age.

Operation Path

Open in order: "Layer 2 Configuration > MAC Configuration > Static Multicast Mac".

Interface Description

Static multicast MAC interface as follows:

MAC Configuration > MAC Settings Static MAC Static Multicast MAC

<input type="checkbox"/>	MAC	Forwarding type	Port	VLAN ID	Operation
Total item 0 Total page 0 Current page < 1 >					

The main element configuration description of static multicast MAC interface:

Interface Element	Discription
MAC	Fill in the multicast MAC address that needs to bind the interface, such as 0100.0001.0001.
Forwarding Type	The forward type of MAC, discard or transmit, it displays as follows: <ul style="list-style-type: none"> Discard; Forward.
Port	The Binding Port
VLAN ID	VLAN ID number the data MAC address sending belongs to, such as 1-4094. Note: Input VLAN ID is the existing ID.
Operation	Click "Delete" under "operation" to delete the corresponding MAC entry directly.
Add	Click "Add" button to add static MAC entry.
Delete	Check the radio box of MAC entries and click "delete" button to delete MAC entries

5.2VLAN Configuration

VLAN is Virtual Local Area Network. VLAN is the data switching technology that logically (note: not physically) divides the LAN device into each network segment (or smaller LAN) to achieve the virtual working group (unit).

VLAN advantages mainly include:

- Port isolation. Ports in different VLAN, even in the same switch, can't intercommunicate. Such a physical switch can be used as multiple logical switches.
- Network security. Different VLAN can't directly communicate with each other,

which has eradicated the insecurity of broadcast information.

- Flexible management. Changing the network user belongs to needn't to change ports or connection; only needs to change the firmware configuration.

That is, ports within the same VLAN can intercommunicate; otherwise, ports can't communicate with each other. A VLAN is identified with VLAN ID, and ports with the same VLAN ID belong to a same VLAN.

5.2.1 VLAN Configuration

Function Description

On the "VLAN-config" page, user can create VLAN and edit VLAN description.

Operation Path

Open in order: "Layer 2 Configuration > VLAN Configuration > VLAN-config".

Interface Description

Vlan configuration interface as follows:

VLAN Configuration > VLAN Configuration						
Access Configuration Trunk Configuration Hybrid Configuration						
<input type="button" value="+ Add"/> <input type="button" value="Delete"/> <input type="button" value="Range delete"/>						
<input type="checkbox"/>	VLAN	Description	Untagged port	Tagged port	State	Operation
<input type="checkbox"/>	1	default	ge1 ge2 ge3 ge4 ge5 ge6 ge7 ge8 ge9 ge10 ge11 ge12 ge13 ge14 ge15 ge16 ge17 ge18 ge19 ge20 ge21 ge22 ge23 ge24 xe1 xe2 xe3 xe4		static	Edit Delete
Total item 1 Total page 1 Current page < 1 >						

The main element configuration description of Vlan configuration interface.

Interface Element	Discription
VLAN	VLAN ID number, value range is 1-4094.
Description	VLAN ID description, maximum 16 characters.
Untagged Port	Untagged port member to conduct untagged process to sending data frame.
Tagged Port	Tag port member to conduct tagged process to sending data frame.
State	Status type: <ul style="list-style-type: none"> • Static;

Interface Element	Discription
	<ul style="list-style-type: none">• Dynamic.
Operation	Click “edit” button to add description. Click “Delete” under “operation” to delete the corresponding VLAN entry directly.
Add	Click "Add" to add VLAN entry.
Delete	Check VLAN entry and click “delete” button to delete VLAN entry.
Range delete	Click the "Range delete" button to delete range-specified VLAN entry.

5.2.2 Access Configuration

Function Description

On the “Access Configuration” page, a list of ports in Access mode is displayed. The functions that can be realized are:

- Configure the PVID (Port Default VLAN ID) of the Access interface.
- Configure VLAN mode, switch access interface to Trunk interface or Hybrid interface.

Operation Path

Open in order: "Layer 2 Configuration > VLAN Configuration > Access Configuration".

Interface Description

Access configuration interface as follow:

VLAN Configuration >		VLAN Configuration	Access Configuration	Trunk Configuration	Hybrid Configuration
<div> <input checked="" type="checkbox"/> Pvid Config <input type="checkbox"/> Mode setting </div>					
<input type="checkbox"/>	Port	Pvid			
<input type="checkbox"/>	ge1	1			
<input type="checkbox"/>	ge2	1			
<input type="checkbox"/>	ge3	1			
<input type="checkbox"/>	ge4	1			
<input type="checkbox"/>	ge5	1			
<input type="checkbox"/>	ge6	1			
<input type="checkbox"/>	ge7	1			
<input type="checkbox"/>	ge8	1			
<input type="checkbox"/>	ge9	1			
<input type="checkbox"/>	ge10	1			
<input type="checkbox"/>	ge11	1			
<input type="checkbox"/>	ge12	1			
<input type="checkbox"/>	ge13	1			
<input type="checkbox"/>	ge14	1			
<input type="checkbox"/>	ge15	1			
<input type="checkbox"/>	ge16	1			
<input type="checkbox"/>	ge17	1			
<input type="checkbox"/>	ge18	1			
<input type="checkbox"/>	ge19	1			
<input type="checkbox"/>	ge20	1			
<input type="checkbox"/>	ge21	1			
<input type="checkbox"/>	ge22	1			
<input type="checkbox"/>	ge23	1			
<input type="checkbox"/>	ge24	1			
<input type="checkbox"/>	xe1	1			
<input type="checkbox"/>	xe2	1			
<input type="checkbox"/>	xe3	1			
<input type="checkbox"/>	xe4	1			

The main element configuration description of Access configuration interface.

Interface Element	Discription
Port	The corresponding port name of the device Ethernet port.
Pvid	Port Default Vlan ID, which is the default VLAN of the port. Default is 1, value range is 1-4094. Note: Each port has a PVID property, when the port receives Untag messages, it adds Tag mark on them according to PVID. When the port transmits data message with the same Tag mark as PVID, it would erase the Tag mark and then transmit the message. The PVID of all ports default to 1.
Pvid Config	Check the entries of pvid value that need to be reset, click "Pvid Config" button to reset pvid value.
Mode setting	There are three port link types that the switch supports: <ul style="list-style-type: none"> Access: port only belongs to 1 VLAN (which is the default VLAN), all ports of the switch are Access mode by default and all PVID are 1.

Interface Element	Discription
	<ul style="list-style-type: none">Trunk: port can belong to multiple VLAN, Trunk port can allow the messages of multiple VLANs to pass with Tag, but only allow the messages of one VLAN to transmit without tag (strip Tag) from this kind of interface. Commonly used in the connection between network devices.Hybrid: port can belong to multiple VLANs. Hybrid port allows messages of multiple VLANs to pass with tag, and allows the messages sent from this kind of interface to configure whether the messages of some VLANs is with tag (not strip Tag) or not (strip Tag). It could be used in the connection between network devices, as well as user devices. <p>Note: If the port mode is set to Trunk or Hybrid, the port display will be updated to the tab corresponding to "Trunk Configuration" or "Hybrid Configuration".</p>

5.2.3 Trunk Configuration

Function Description

On the "Trunk Configuration" page, a list of ports in mode "Trunk" is displayed. Users can:

- Configure Trunk port PVID value and Tagvlan, and Tagvlan is the port tag value.
- Configure VLAN mode, switch Trunk interface to Access interface or Hybrid interface.

Operation Path

Open in order: "Layer 2 Configuration > VLAN Configuration > Trunk-configuration".

Interface Description

Trunk configuration interface as follows:

The screenshot shows a web interface for configuring network settings. At the top, there are four tabs: 'VLAN Configuration >', 'VLAN Configuration', 'Access Configuration', 'Trunk Configuration', and 'Hybrid Configuration'. Below the tabs, there are three buttons: 'Config' (with a wrench icon), 'Mode setting', and 'Clear port VLAN'. At the bottom, there are three input fields labeled 'Port', 'Pvid', and 'Tagvlan'.

The main element configuration description of Trunk configuration interface:

Interface Element	Discription
Port	The corresponding port name of the device Ethernet port.
Pvid	VLAN ID number, value range is 1-4094.
Tagvlan	A tagged value, a single value or range (range denoted by a "-"), such as 9 or 10-15.
Config	Check the entries that need to be reconfigured, click configure to reset pvid value and tagvlan parameters.
Mode setting	Click mode setting to set the mode to Access or Hybrid. Note: If the port mode is set to Access or Hybrid, the port display will be updated to the tab corresponding to "Access Configuration" or "Hybrid Configuration".
Clear port VLAN	Check the entries that need to be configured, click to clear port VLAN, input Tagvlan value to delete Tagvlan.

5.2.4 Hybrid Configuration

Function Description

In the "Hybrid Configuration" page, the list of ports in mode "Hybrid" is displayed. The functions can be achieved as follows:

- Configure Hybrid port Pvid value, Untagvlan and Tagvlan, and Tagvlan is the port tag value.
- Configure VLAN mode, switch Hybrid interface to access interface or trunk interface.

Operation Path

Open in order: "Layer 2 Configuration > VLAN Configuration > Hybrid Configuration".

Interface Description

Hybrid configuration interface as follow:

The main element configuration description of Hybrid configuration interface.

Interface Element	Discription
Port	The corresponding port name of the device Ethernet port.
Pvid	VLAN ID number, value range is 1-4094.
Untagvlan	An untagged value, a single number or range (range denoted by a "-"), such as 9 or 10-15.
Tagvlan	A tagged value, a single value or range (range denoted by a "-"), such as 9 or 10-15.
Config	Check the entries that need to be reconfigured, click configure to reset pvid value and tagvlan parameters.
Mode setting	Click mode setting to set the mode to Access or Trunk Note: If the port mode is set to Access or Trunk, the port display will be updated to the tab corresponding to "Access Configuration" or "Hybrid Configuration".
Clear port VLAN	Check the entries that need to be configured, click to clear port VLAN, input Tagvlan value to delete Tagvlan.

Process for Port Receiving Message

Interface type	Process for Receiving Untagged Message	Process for Receiving Tagged Message
Access	Receive this message and tag it with default VLAN ID.	<ul style="list-style-type: none"> Receive the message when the VLAN ID is the same as default VLAN ID. Discard the message when the VLAN ID is different from the default VLAN ID.
Trunk	Receive this message and tag it with default VLAN ID.	<ul style="list-style-type: none"> Receive this message when the VLAN ID is in the list of VLAN ID
Hybrid		


Interface type	Process for Receiving Untagged Message	Process for Receiving Tagged Message
		<p>that allow to pass through the interface.</p> <ul style="list-style-type: none"> Discard this message when the VLAN ID is not in the list of VLAN ID that allow to pass through the interface.

Process for Sending Message

Interface type	The process of transmit frame
Access	Strip the PVID Tag of the message first, then transmit it.
Trunk	<ul style="list-style-type: none"> When the VLAN ID is the same as the default VLAN ID, and it is the VLAN ID allowed to pass through the interface, it would strip the Tag and send this message. When the VLAN ID is different from the default VLAN ID, and it's the VLAN ID allowed to pass through the interface, it would remain its original Tag and send the message.
Hybrid	When the VLAN ID is the one allowed to pass through the interface, it would send this message. It could be set to whether to carry Tag during transmission.

Example: Typical VLAN Configuration

If the switch port 2, 3, 4 meet the following requirements: port2 that connects the external network device is the upper interface, Port3/4 that connect the user device are the downward interface. Port2 communicates with Port3, Port2 communicates with Port4, and Port3 cannot communicate with Port4. As shown below. Do not consider other ports, how to set the VLAN?

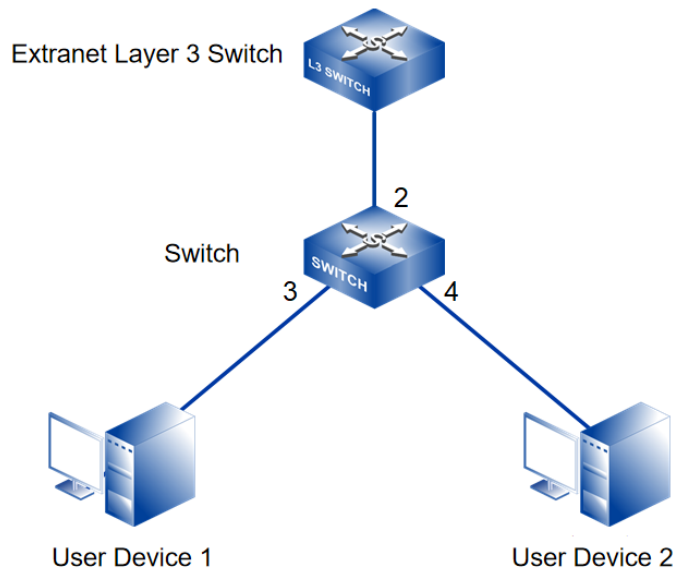

Instance analysis

Port2, Port3 and Port4 are set with different port types to realize the communication between the ports. Analyse the configuration of each port as below:

- Port3
Port3 is upper interface, set Ports to Access type. Configure the PVID value of Port3 to 3.
- Port 4
Port4 is downward interface, set Ports to Access type. The PVID value of Port4 is set to 4.
- Port2
Port2 is upper interface, set Port2 to Trunk type. Add Port2 into VLAN3 and VLAN4. Port2 can communicate with Port3 and Port4.

Operation Steps

Step 1 Access "Layer 2 Configuration > VLAN Configuration > VLAN Config".

Step 2 Set VLAN value: VLAN3 and VLAN4.

- 1 Click "add", enter 3 and 4 in "VLAN " text box as shown below:

VLAN

3 4

A group of input boxes of the same size indicates a vlan, otherwise a group of vlan ranges

Set

2 Click "Apply" button, the VLAN settings are as the picture below.

VLAN Configuration > VLAN Configuration Access Configuration Trunk Configuration Hybrid Configuration						
<input type="button" value="+ Add"/> <input type="button" value="Delete"/> <input type="button" value="Range delete"/>						
<input type="checkbox"/>	VLAN	Description	Untagged port	Tagged port	State	Operation
<input type="checkbox"/>	1	default	ge1 ge2 ge3 ge4 ge5 ge6 ge7 ge8 ge9 ge10 ge11 ge12 ge13 ge14 ge15 ge16 ge17 ge18 ge19 ge20 ge21 ge22 ge23 ge24 xe1 xe2 xe3 xe4		static	Edit Delete
<input type="checkbox"/>	3	VLAN0003			static	Edit Delete
<input type="checkbox"/>	4	VLAN0004			static	Edit Delete
Total item 3 Total page 1 Current page < 1 >						

Step 3 Set the corresponding pvid of port3 and port4, as well as the type of port2, port 3 and port4.

- 1 Access "Layer 2 Configuration > VLAN Configuration > Access Configuration".
- 2 Check port ge3, click "configure", enter "pvid" as "3", and click "set".
- 3 Check port ge4, click "configure", enter "pvid" as "4", and click "set".
- 4 Check port ge2, click "mode setting", select "trunk" as "type", and click "set".

VLAN Configuration > VLAN Configuration Access Configuration Trunk Configuration Hybrid Configuration						
<input type="button" value="Pvid Config"/> <input type="button" value="Mode setting"/>						
<input type="checkbox"/>	Port	Pvid				
<input type="checkbox"/>	ge1	1				
<input type="checkbox"/>	ge3	3				
<input type="checkbox"/>	ge4	4				
<input type="checkbox"/>	ge5	1				
<input type="checkbox"/>	ge6	1				
<input type="checkbox"/>	ge7	1				

Step 4 Set the tagvlan value of port 2.

- 1 Access "Layer 2 Configuration > VLAN Configuration > Trunk Configuration".
- 2 Check the item and click "Apply".
- 3 Enter "1" in "Pvid" and "3-4" in "Tagvlan".

4 Click "Apply" button, as the picture below.

VLAN Configuration >		VLAN Configuration	Access Configuration	Trunk Configuration	Hybrid Configuration
<input type="button" value="Config"/> <input type="button" value="Mode setting"/> <input type="button" value="Clear port VLAN"/>					
<input type="checkbox"/>	Port	Pvid	Tagvlan		
<input type="checkbox"/>	ge2	1	3-4		

5 Enter "layer 2 configuration > VLAN configuration", check configuration result as show below.

VLAN Configuration >VLAN ConfigurationAccess ConfigurationTrunk ConfigurationHybrid Configuration

+ Add

Delete

Range delete

<input type="checkbox"/>	VLAN	Description	Untagged port	Tagged port	State	Operation	
<input type="checkbox"/>	1	default	ge1 ge2 ge5 ge6 ge7 ge8 ge9 ge10 ge11 ge12 ge13 ge14 ge15 ge16 ge17 ge18 ge19 ge20 ge21 ge22 ge23 ge24 xe1 xe2 xe3 xe4		static	Edit	Delete
<input type="checkbox"/>	3	VLAN0003	ge3	ge2	static	Edit	Delete
<input type="checkbox"/>	4	VLAN0004	ge4	ge2	static	Edit	Delete

Total item 3

Total page 1

Current page

< 1 >

Step 5 End.

5.3 Spanning-tree Configuration

Spanning-tree protocol is a sort of layer 2 management protocol; it can eliminate the network layer 2 circuit via selectively obstructing the network redundant links. At the same time, it has link backup function. Here are three kinds of spanning-tree protocols:

- STP (Spanning Tree Protocol);
- RSTP (Rapid Spanning Tree Protocol);
- MSTP (Multiple Spanning Tree Protocol).

Spanning-tree protocol has two main functions:

- First function is utilizing spanning-tree algorithm to establish a spanning-tree that takes a port of a switch as the root to avoid ring circuit in Ethernet.
- Second function is achieving the convergence protection purpose via spanning-tree protocol when Ethernet topology changes.

Compared to STP, RSTP, MSTP can converge the network more quickly when network structure changes; MSTP is compatible with STP and RSTP, and is better than STP and RSTP. It can not only quickly converge but also send different VLAN along each path to provide better load sharing system for redundant link.

5.3.1 Bridge Configuration

Function Description

On the "Bridge Configuration" page, user can configure relative parameters of spanning-tree.

Operation Path

Open in order: "Layer 2 Configuration > Spanning-tree > Bridge Configuration".

Interface Description

Bridge configuration interface as follows:

Spanning-tree Configuration > **Bridge Configuration** Instance Configuration Port Configuration Instance Port Configuration

Enable ☒ Disable by default

Work mode ☐ 0-STP ☐ 2-RSTP ☒ 3-MSTP

Mstp by default

Priority 0-61440 32768 by default

Max hop count 1-40 20 by default

Forwarding delay 4-30 15s by default

Aging time 6-40 20s by default

Handshake time 1-10 2s by default

MST version 0-65535 0 by default

MST name Up to 32 characters Default by default

Note:
1. Forwarding delay and aging time should meet: (forwarding delay-1)*2>=aging time
2. The aging time and handshake time should meet: (handshake time+1)*2<=aging time

The main element configuration description of bridge configuration interface:

Interface Element	Discription
Enable	Spanning-tree enable switch. Disable by default
Worke mode	Defaults to MSTP, there are three modes for spanning-tree protocol choice: <ul style="list-style-type: none">0-STP: Spanning-tree;2-RSTP: Rapid spanning tree;

Interface Element	Discription
	<ul style="list-style-type: none"> 3-MSTP: Multiple spanning-trees.
Priority	Bridge priority level, value range is 0-61440. Note: Smaller the priority level value is, higher the priority level is.
Max hop count	The maximum hop in MST region, defaults to 20, the value range is 1-40. Note: The maximum hop in MST region has limited the size of MST region. The maximum hop configured on a domain root will be used as the maximum hop in MST region.
Forwarding delay	Port state transition delay, defaults to 15S, the value range is 4-30.
Aging time	The maximum lifetime of the message in the device, defaults to 20S, the value range is 6-40. It's used to determine whether the configuration message times out.
Handshake Time	Message sending cycle,defaults to 2S, the value range is 1-10. Note: The spanning tree protocol sends configuration information every Hello time to check whether the link is faulty.
MST version	MSTP revision level, defaults to 0, the value range is 0-65535. Note: When the MST region name, revision level, instance-to-VLAN mapping relation are the same, the two or more bridges will belong to a same MST region.
MST name	MST domain name, defaults to Default, up to 32 characters.

5.3.2 Instance Configuration

Function Description

On the "Instance Configuration" page, user can configure instance-to-VLAN mapping.

Multiple Spanning Tree Regions (MST Regions) are composed of multiple devices in the switched network and the network segments between them.

In a MST region, multiple spanning trees can be generated through MSTP. Each spanning tree is independent to others and corresponding to special VLAN. Each spanning tree is called an MSTI (Multiple Spanning Tree Instance).

VLAN mapping table is an attribute of MST region, and it's used to describe the mapping relation between VLAN and MSTI.

Operation Path

Open in order: "Layer 2 Configuration > Spanning-tree > Instance Configuration".

Interface Description

Instance configuration interface as follows:

The main element configuration description of instance configuration interface:

Interface Element	Discription
Instance	Instance ID number of Multiple Spanning-tree. The value range is 1-16.
Priority	Device priority level, value range is 0-61440, default to 32769, step is 4096. During adding, choose a priority based on 0-15 times the value on the 4096. Note: The priority of a device participates in spanning tree calculation. Its size determines whether the device can be selected as the root bridge of a spanning tree.
VIAN Mapped	VLAN mapping table is separated by commas, such as: 4, 5, 6, 7; "-" represents range, such as: 4-7. Note: VLAN mapping table is an attribute of MST region, and it's used to describe the mapping relation between VLAN and MSTI. MSTP achieves load balancing based on the VLAN mapping table.

5.3.3 Port Configuration

Function Description


On the "Port Configuration" page, user can enable port to participate in spanning-tree and configure port type, link type and BPDU protection function.

Operation Path

Open in order: "Layer 2 Configuration > Spanning-tree > Port Configuration".

Interface Description

Check port configuration interface as below:

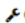Spanning-tree Configuration > Bridge Configuration Instance Configuration Port Configuration Instance Port Configuration					
 Config					
<input type="checkbox"/>	Port	Enable	Bpduguard	Edge port	Connection Type
<input type="checkbox"/>	ge1	enable	default	disable	auto
<input type="checkbox"/>	ge2	enable	default	disable	auto
<input type="checkbox"/>	ge3	enable	default	disable	auto
<input type="checkbox"/>	ge4	enable	default	disable	auto
<input type="checkbox"/>	ge5	enable	default	disable	auto
<input type="checkbox"/>	ge6	enable	default	disable	auto
<input type="checkbox"/>	ge7	enable	default	disable	auto
<input type="checkbox"/>	ge8	enable	default	disable	auto
<input type="checkbox"/>	ge9	enable	default	disable	auto
<input type="checkbox"/>	ge10	enable	default	disable	auto
<input type="checkbox"/>	ge11	enable	default	disable	auto
<input type="checkbox"/>	ge12	enable	default	disable	auto
<input type="checkbox"/>	ge13	enable	default	disable	auto
<input type="checkbox"/>	ge14	enable	default	disable	auto
<input type="checkbox"/>	ge15	enable	default	disable	auto
<input type="checkbox"/>	ge16	enable	default	disable	auto
<input type="checkbox"/>	ge17	enable	default	disable	auto
<input type="checkbox"/>	ge18	enable	default	disable	auto
<input type="checkbox"/>	ge19	enable	default	disable	auto
<input type="checkbox"/>	ge20	enable	default	disable	auto
<input type="checkbox"/>	ge21	enable	default	disable	auto
<input type="checkbox"/>	ge22	enable	default	disable	auto
<input type="checkbox"/>	ge23	enable	default	disable	auto
<input type="checkbox"/>	ge24	enable	default	disable	auto
<input type="checkbox"/>	xe1	enable	default	disable	auto
<input type="checkbox"/>	xe2	enable	default	disable	auto
<input type="checkbox"/>	xe3	enable	default	disable	auto
<input type="checkbox"/>	xe4	enable	default	disable	auto

The main element configuration description of port configuration interface:

Interface Element	Description (check the checkbox of the port, click "config" to configure it.)
Port	The corresponding port name of the device Ethernet port.
Enable	Enable checkbox to participate in spanning-tree.
Bpduguard	BPDU (Bridge Protocol Data Unit) protection function status: <ul style="list-style-type: none"> • Enable; • Disable; • Default.
Edge port	Configure port type: <ul style="list-style-type: none"> • Enable;

Interface Element	Description (check the checkbox of the port, click "config" to configure it.)
	<ul style="list-style-type: none">• Disable.
Connection type	Port link type: <ul style="list-style-type: none">• Auto: Automatic system detection;• Point-to-point: point-to-point link;• Shared: Non point-to-point link.

5.3.4 Instance Port Configuration

Function Description

On the "Inst Port Config" page, user can configure port priority level and cost.

Operation Path

Open in order: "Layer 2 Configuration > Spanning-tree > Inst Port Configuration".

Interface Description

Instance port configuration interface as follows:

Spanning-tree Configuration >
Bridge Configuration
Instance Configuration
Port Configuration
Instance Port Configuration

MSTID 0

Config

<input type="checkbox"/>	Port	Enable	Instance	Priority	Configuration cost	Role	State
<input type="checkbox"/>	ge1	enable	0	128	200000	disabled	forwarding
<input type="checkbox"/>	ge2	enable	0	128	20000000	disabled	discarding
<input type="checkbox"/>	ge3	enable	0	128	20000000	disabled	discarding
<input type="checkbox"/>	ge4	enable	0	128	20000000	disabled	discarding
<input type="checkbox"/>	ge5	enable	0	128	20000000	disabled	discarding
<input type="checkbox"/>	ge6	enable	0	128	20000000	disabled	discarding
<input type="checkbox"/>	ge7	enable	0	128	20000000	disabled	discarding
<input type="checkbox"/>	ge8	enable	0	128	20000000	disabled	discarding
<input type="checkbox"/>	ge9	enable	0	128	20000000	disabled	discarding
<input type="checkbox"/>	ge10	enable	0	128	20000000	disabled	discarding
<input type="checkbox"/>	ge11	enable	0	128	20000000	disabled	discarding
<input type="checkbox"/>	ge12	enable	0	128	20000000	disabled	discarding
<input type="checkbox"/>	ge13	enable	0	128	20000000	disabled	discarding
<input type="checkbox"/>	ge14	enable	0	128	20000000	disabled	discarding
<input type="checkbox"/>	ge15	enable	0	128	20000000	disabled	discarding
<input type="checkbox"/>	ge16	enable	0	128	20000000	disabled	discarding
<input type="checkbox"/>	ge17	enable	0	128	20000000	disabled	discarding
<input type="checkbox"/>	ge18	enable	0	128	20000000	disabled	discarding
<input type="checkbox"/>	ge19	enable	0	128	20000000	disabled	discarding
<input type="checkbox"/>	ge20	enable	0	128	20000000	disabled	discarding
<input type="checkbox"/>	ge21	enable	0	128	20000000	disabled	discarding
<input type="checkbox"/>	ge22	enable	0	128	20000000	disabled	discarding
<input type="checkbox"/>	ge23	enable	0	128	20000000	disabled	discarding
<input type="checkbox"/>	ge24	enable	0	128	20000000	disabled	discarding
<input type="checkbox"/>	xe1	enable	0	128	2000	disabled	discarding
<input type="checkbox"/>	xe2	enable	0	128	2000	disabled	discarding
<input type="checkbox"/>	xe3	enable	0	128	2000	disabled	discarding
<input type="checkbox"/>	xe4	enable	0	128	2000	disabled	discarding

The main element configuration description of instance port configuration interface:

Interface Element	Description (check the checkbox of the port, click “config” to configure it.)
MSTID	Choose multiple Spanning-tree ID number.
Port	The corresponding port name of the device Ethernet port.
Enable	Port enable status: <ul style="list-style-type: none"> Enable: participate in spanning-tree; Disable: not participate in spanning-tree.
Instance	Instance ID number port belongs to.
Priority	Port priority level, the value range is 0-240. Note: Port priority level in bridge, port priority level is higher when the value is smaller. The higher the priority, the more likely it is to be a root port.
Configuration cost	The path cost from network bridge to root bridge. Value range: 1-200000000.
Role	Port role.

Interface Element	Description (check the checkbox of the port, click "config" to configure it.)
	<ul style="list-style-type: none"> • unkn: Unknown; • root: Root port; • desg: Designated port; • altn: Alternate port; • back: Backup port; • disa: Disable port.
State	Port status in spanning-tree: <ul style="list-style-type: none"> • Disable: Port close status; • Blocking: Blocked state; • Listening: Monitoring state. • Learning: Learning state; • Forwarding: Forwarding state;

5.4 ERPS Configuration

Ethernet Ring Protection Switching (ERPS) is the Ethernet Ring Network Link Layer Technology with high reliability and stability. It can prevent the broadcast storm caused by data loop when the Ethernet ring is intact. When the Ethernet ring link failure occurs, it has high convergence speed that can rapidly recover the communication path between each node in the ring network.

5.4.1 Timer Configuration

Function Description

On the "Timer configuration" page, user could configure ring network.

An Ethernet network topology connected in ring is called a ERPS Ring. ERPS ring could be divided into main ring and subring. Each device in ERPS ring is called a node. The main node is in charge of blocking and opening ports on this node, preventing loops from forming.

Operation Path

Open in order: "Layer 2 Configuration > ERPS Configuration > Timer Configuration".

Interface Description

Timer configuration interface as follows:

Main elements configuration description of timer configuration interface:

Interface Element	Discription
Timer Name	The default name of timer is timer, which is up to 32 bytes.
WTR	WTR(Wait To Restore)timer, its value range is 1-12 minutes. Under revertive mode, the timer starts when the owner node in protection state receives NR packet. The owner node blocks the RPL port and unblocks the fault port after the timer expires.
WTB	WTB (Wait To Block) timer, its value range is 1-12 minutes. Under revertive mode, when the owner node is in MS (Manual Switch) or FS (Forced Switch) status, WTB timer will start if user carries out clean command on the owner node. After the timer expires, the owner node will block the RPL port and unblock temporary blocking port.
Guard timer	Guard timer, its value range is 10-2000ms. The timer starts when the port detects the link restoration, before the timer expires, the port won't deal with R-APS (Ring Automatic Protection Switching) packet.
Hold timer	Hold timer, its value range is 0-10ms. The timer starts when the port detects the link restoration, delay the fault report speed. When the link fails, the timer should report the fault if it exists after Hold timer expires.
Add	Clicking "Add" button can add the configuration of timer.
Delete	Check the radio box of timer entry, click "delete" button to delete timer entry.

5.4.2 Ring Configuration

Function Description

On the "Ring configuration" page, user could configure ring network.

An Ethernet network topology connected in ring is called a ERPS Ring. It could be divided into main ring and subring. Each device in ERPS ring is called a node. The main node is in charge of blocking and opening ports on this node, preventing loops from forming.

Operation Path

Open in order: "Layer 2 Configuration > ERPS Configuration > Ring Configuration".

Interface Description

Ring configuration interface as follows:

Ring name	Ring network ID	East-port	West-port	Ring level	Operation
<input type="checkbox"/>					

The main element configuration description of ring configuration interface.

Interface Element	Discription
Ring Name	The default name of ring network is ring, which is up to 32 bytes.
Ring network ID	The ID of ring network, its value range is 1-255.
East-port	Ring network 1, its value range is 1-port number
West-port	Ring network 2, its value range is 1-port number.
Ring Level	The higher the ring network level is, the greater the value is, its value range is 1-7.
Add	Click "Add" button to add ring network configuration.
Delete	Check the radio box of ring network entry, click "delete" button to delete ring network entry.

5.4.3 Instance Configuration

Function Description

 
On the "Instance configuration" page, user could configure instance.

Operation Path

Open in order: "Layer 2 Configuration > ERPS Configuration > Instance Configuration".

Interface Description

Instance configuration interface as follows:



The main element configuration description of instance configuration interface:

Interface Element	Discription
ERPS name	The default name of ERPS is erp, which is up to 32 bytes
ID	The ID of instance, its value range is 0-16.
Ring Name	The default name of ring network is the ring name that has been added in the ring network list
Timer Name	The default name of timer is the name that has been added in the timer list
Device Role	<p>Each device in ERPS ring is called a node. The node role is decided by user configuration, they are divided into following types:</p> <ul style="list-style-type: none"> rpl-owner: owner node is responsible for blocking and unblocking the port in RPL of the node to prevent loop forming and conduct link switching. rpl-neighbor: neighbor node is connected to Owner node on RPL. Cooperating to the Owner node, it blocks and unblocks the ports on RPL of the node and conduct link switching. interconnection: interconnected node is the node to connect multiple rings in the multi-loop model, it belongs

Interface Element	Discription
	<p>to the subring, and the primary ring has no interconnected node. In the link protocol packet upload mode between the two subring interconnected nodes, the subring protocol packet ends in the interconnected node, but the data packet won't end.</p> <ul style="list-style-type: none"> other: normal node is the other node in addition to the above three nodes. Normal node is responsible for receiving and forwarding the protocol packet and data packet in the link.
RPL Port	RPL (Ring Protection Link) port is the appointed ring network port for Owner node to establish RPL.
Ring Role	<p>Options of Ring Role drop-down box:</p> <ul style="list-style-type: none"> Major-ring: main ring network Sub-ring: subring network
Master Instance Virtual	The major instance name could be set and need to be set as ERPS instance name only when the ring role is Sub-ring
Virtual Channel	<p>After enable virtual channel, the subring protocol packet could transmit across the primary ring; otherwise, the subring protocol packet can only transmit in the ring.</p> <p>Options:</p> <ul style="list-style-type: none"> enable disable
Manage VLAN	The VLAN channel of protocol packet, its value range is 1-4094
Reversible	<p>Options:</p> <ul style="list-style-type: none"> Enable: In revertive mode, WTR timer starts when the owner node receives the link recovery packet after the clearing of fault. The timer will change from fault link protection status to idle status after expiring. Disable: Irreversible mode: Owner node doesn't conduct any action after receiving the link recovery packet and keeps the port status set before.

Interface Element	Discription
State	<p>The instance statuses of ERPS are as follows:</p> <ul style="list-style-type: none"> • ERPS_INIT: initial state, which is the initialized state when the protocol starts. • ERPS__IDLE: idle state, it would enter this state when the ring topology is complete. • ERPS_FS: force-switch state, it would enter this state when force-switch command is implemented. • ERPS_MS: manual-switch state, it would enter this state when manual-switch command is implemented. • ERPS_PROTECTION: protection state, it would enter this state when the ring link has failure. • ERPS_PENDING: pending state, it would enter this state when the ring link has recovered from failure.
Enable	<p>Instance ring protection protocol switch:</p> <ul style="list-style-type: none"> • ON: enable Ethernet ring protection protocol; • OFF: disable Ethernet ring protection protocol.
Operation	Click “operation-edit” button to modify instance configuration. Click “Delete” under “operation” to delete the corresponding instance entry directly.
Add	Click “Add” button to add instance configuration.
Delete	Check the radio box of instance configuration entry, click “delete” button to delete instance configuration.

5.5Ring Configuration

Ring provides automatic recovery and reconnection mechanism for the disconnected Ethernet network, which has link redundancy and self-recovery ability in case of network interruption or network failure.

The core of Ring technology adopt non-master station setting. In a multi-ring network of up to 250 switches, the network self-recovery time is less than 20 milliseconds. Each port in this series of switches can be used as a ring port and connected with other switches. When an interruption occurs in the network connection, the relay for

fault alarm will be activated and the Ring redundant mechanism enables the backup link to quickly recover the network communication.

Function Description

On the "Ring Configuration" page, user can enable/disable the ring network.

Operation Path

Open in order: "Layer 2 Configuration > Ring Configuration".

Interface Description

Ring configuration interface as follow:

Ring group	mark	Ring port 1	Port 1 status	Ring port 2	Port 2 status	Ring type	HelloTime	Master-slave	Heartbeat	Operation
------------	------	-------------	---------------	-------------	---------------	-----------	-----------	--------------	-----------	-----------

The main element configuration description of Ring configuration interface.


Interface Element	Discription
Enable	Enable switch, slide to the right to enable the Ring ring network function.
Ring group	Support ring group 1-12, it can create 12 ring networks at the same time.
mark	When multiple switches form a ring, the current ring ID would be network ID. Different ring network has different ID. Value range is 1-255. Note: The ring network identification must remain the same in one ring network.
Ring Port 1	The network port 1 on the switch device used to form a ring . Note: When the ring network type is "Couple", port 1 is the "Coupled Port". Coupling port is the port that connects different network identities.
Port1 Status	The current state of the port 2. <ul style="list-style-type: none"> block; forward.
Ring port 2	The network port 2 on the switch used to form a ring. Note:

Interface Element	Discription
	<ul style="list-style-type: none"> When the ring network type is “Couple”, port 2 is the “console port”. Console port is the port in the chain where two rings intersect. “Port 1” and “Port 2” cannot be set to the same port, and the port number it sets must be the same as it actually connects without sequential order;
Port2 Status	<p>The current state of the port 2.</p> <ul style="list-style-type: none"> block; forward.
Ring Type	<p>According to the requirement in the scene, user can choose different ring type.</p> <ul style="list-style-type: none"> Single: single ring, using a continuous ring to connect all device together. Couple: couple ring is a redundant structure used for connecting two independent networks. Chain: chain can enhance user’s flexibility in constructing all types of redundant network topology via an advanced software technology. Dual-homing: two adjacent rings share one switch. User could put one switch in two different networks or two different switching equipments in one network.
Hello Time	<p>Hello_time is the sending time interval of Hello packet; via the ring port, CPU sends information packet to adjacent device for confirming the connection is normal or not. Value range is 0-300.</p>
Master-slave	<p>Single loop network supports no-master station structure and one-master multi-slave structure.</p> <ul style="list-style-type: none"> When all the single-loop devices are slave stations, the single-loop structure is no-master station. When a single ring device is a master and multiple slave station, one device can be designated as the master device and the other devices as the slave device. One end of the main device of the ring network is the backup link. When the ring network fails, the backup link is enabled from the master station to ensure the normal operation of the network.

Interface Element	Discription
Heartbeat	Heartbeat detection mechanism. When this configuration is enabled, the network association will periodically send heartbeat messages to detect whether the corresponding devices are in live state, thus enhancing the reliability of the network. Swipe the "🔘" button to the right to activate the heartbeat function.
Add	Click "Add" button to add ring network configuration.
Delete	Check the radio box of ring network configuration entry and click "delete" button to delete ring network configuration.


Single Ring Configuration

Enable Single, enable ring group 1 (other ring group is OK), Set the device port 4 and port 5 to ring port, and set other switches to the same configuration as the switch above, Enable these devices, and adopt network cable to connect port 4 and port 5 of the switch, then search it via network management software, the ring topology structure picture as below:

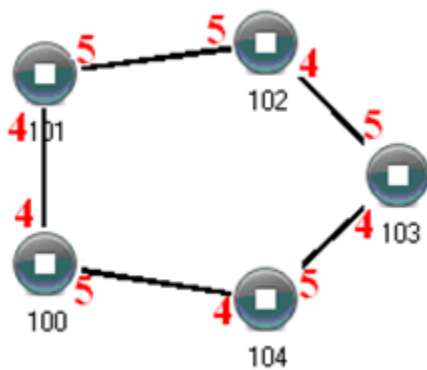

Double Ring Configuration

Double ring as shown below, in the figure, double ring is the tangency between two rings, and the point of tangency is NO. 105 switch.

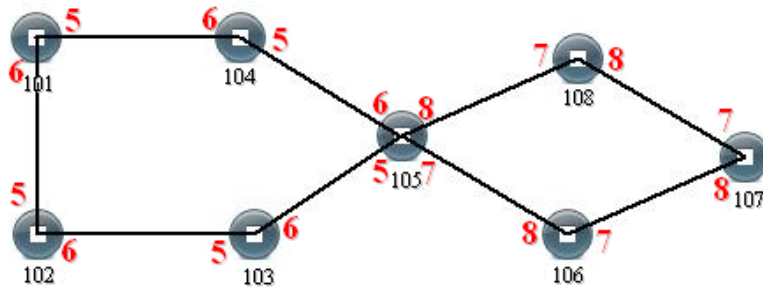


Configuration Method:

- Step 1** Adopt single ring configuration method to configure port 5 and port 6 of NO. 101, 102, 103, 104, 105 switches as the ring port, and the ring group is 1;
- Step 2** Adopt single ring configuration method to configure port 7 and port 8 of NO. 105, 106, 107 and 108 switches as the ring ports and the ring group 2;
- Step 3** Adopt network cable to connect the ring group 1;
- Step 4** Adopt network cable to connect the ring group 2;
- Step 5** Search the topology structure picture via network management software;

Since NO. 105 devices belong to two ring groups, the network IDs of the two ring groups cannot be the same.

Coupling Ring Configuration

Coupling ring basic framework as the picture below:

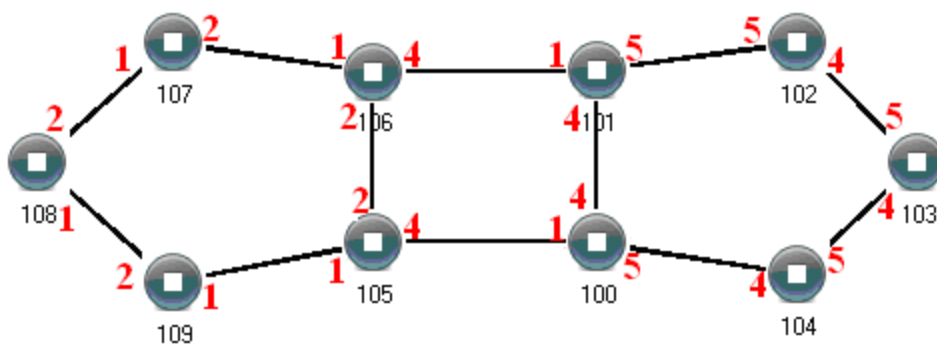

Operation method:

- Step 1** Enable ring network group 1 and 2: (Hello_time could be disabled, but the time could not be set to make Hello packet send too fast, otherwise it would effect CPU processing speed seriously);
- Step 2** Set the ring port of NO. 105, 106 device ring group to port 1 and port 2, network

identification to 1, ring type to Single; Set the coupling port of ring group 2 to port 4, console port to 2, ring identification to 3, ring type to Coupling.

Step 3 Set the ring port of NO. 100, 101 device ring group 1 to port 4 and port 5, network identification to 2, ring type to Single; Set the coupling port of ring group 2 to port 1, console port to port 4, ring identification to 3, ring type to Coupling.


Step 4 Set the ring port of NO. 107, 108 and 109 device ring group 1 to port 1 and port 2, network identification to 1, ring type to Single; Set the ring port of NO. 102, 103 and 104 device ring group 1 to port 4 and port 5, network identification to 2, ring type to Single.

Step 5 Connect the port 4 and port 5 of five devices NO. 100-104 to the single ring in turn, adopt network cable to connect the port 1 and port 2 of four devices NO. 105-109 to the single ring in turn, Then adopt Ethernet cable to connect port 4 of NO. 106 device to port 1 of NO. 101 device, port 4 of NO. 105 device to port 1 of NO. 100 device, coupling ring combination is completed.

Console ports are two ports connected to NO. 105 device and NO. 106 device in the above picture. The two ports connected to NO. 100 device and NO. 101 device are also called console ports.

Chain Configuration

Chain basic framework as the picture below:

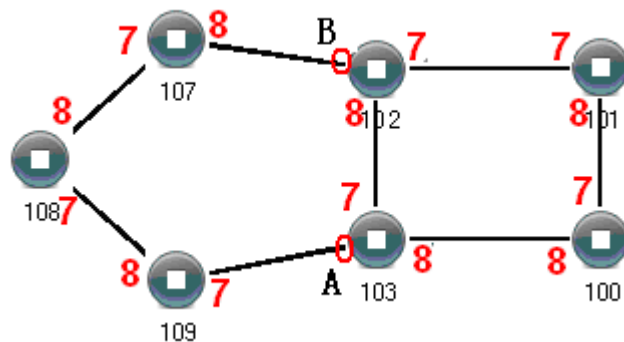

Operation method:

Step 1 Enable ring group1: (Hello_time could be disabled, but the time shouldn't be set to send Hello packet too fast, otherwise it would affect the processing speed of CPU seriously).

Step 2 Set the ring port of NO. 100, 101, 102 and 103 device ring group 1 to port 7 and port 8, network identification to 1, ring type to Single. Set the ring port of NO. 107, 108

and 109 devices ring group 1 to port 7 and port 8, network identification to 2, ring type to Chain.

Step 3 Adopt network cable to connect the port 7 and port 8 of three devices NO. 107-109, adopt network cable to connect the port 7 and port 8 of four devices NO. 100-103 to the single ring in turn, Then adopt network cable to connect port 7 of NO. 107 device and port 7 of NO. 109 device to normal ports of NO. 102 and 103 device, chain combination is complete.



Note

- Port that has been set to port aggregation can't be set to rapid ring port, and one port can't belong to multiple rings;
 - Network identification in the same single ring must be consistent, otherwise it cannot form a normal ring or normal communicate;
 - Network identification in different ring must be different;
 - When forming double ring and other complex ring, user should notice whether the network identification in the same single ring is consistent, and network identification in different single ring is different.
-

5.6 IGMP Snooping Configuration

IGMP Snooping (Internet Group Management Protocol Snooping) is an IPv4 layer 2 multicast Protocol. It maintains the egress interface information of Group broadcast by snooping for the multicast protocol messages sent between the layer 3 multicast device and the user host, so as to manage and control the forwarding of multicast data message in the data link layer.

After IGMP Snooping is configured, the layer 2 multicast device can snoop and analyze the IGMP messages between the multicast user and the upstream router. Based on these information, the layer 2 multicast forwarding and publishing items can be established to control the forwarding of multicast data message. This prevents multicast data from being broadcast in the layer 2 network.

The ways of IGMP Snooping processing different messages:

- 6 IGMP universal group query message: IGMP universal group query message is sent periodically to all hosts and routers in the local network segment to query

which multicast group members are in the network segment.

- 7 Specific group query message: when receiving a specific group query message for a multicast group, if there are member ports in the forwarding table entry corresponding to the group, reply the report message of the group to all router ports.
- 8 IGMP report message, when receiving the report message of a multicast group from a certain port, is handled in three situations:
 - If the forwarding table entry corresponding to the group already exists and the dynamic member port is included in the outgoing port list, reset its aging timer;
 - If the forwarding table entry corresponding to the group already exists, but the port is not included in the out port list, the port is added to the out port list as a dynamic member port and its aging timer is started;
 - If there is no forwarding table entry corresponding to the group, create a forwarding table entry, add the port as a dynamic member port to the out port list, start its aging timer, and then send the report message of the group to all router ports.
- 9 IGMP leave message: After receiving the leave message of a multicast group from a port, send a specific group inquiry message for the group to the port. Only when the last member port in the forwarding table entry corresponding to a multicast group is deleted, the leaving message of the group will be sent to all router ports.

5.6.1 Global Configuration

Function Description

On the "Global Configuration" page, user can enable/disable IGMP monitoring and resident multicast.

Operation Path

Open in order: "Layer 2 Configuration > IGMP-Snooping Configuration > Global Configuration".

Interface Description

Global configuration interface is as follows:

The main element configuration description of global configuration interface:

Interface Element	Discription
Enable IGMP-snooping	Check to enable IGMP listening configuration.
Permanent multicast	Configure the multicast group as a resident multicast group, and the multicast address will not age in the forwarding table.
Source address	When there is no IP address in the VLAN, you can specify the address from which to send an IGMP listener message.
VLAN ID	The VLAN ID number of multicast was listened.
Group Members	The multicast address that was listened.
Port list	Listened multicast routing port list.

5.6.2 Interface Configuration

Function Description

On the "Interface Configuration" page, user can configure the related parameters of interface IGMP Snooping.

Operation Path

Open in order: "Layer 2 Config > IGMP-snooping > Interface Config".

Interface Description

Interface configuration interface as follows:

IGMP-Snooping Configuration > Global configuration Interface Configuration Routing Interface Configuration Routing Interface Information

+ Add

Delete

<input type="checkbox"/>	VLAN ID	IGMP Snooping	Fast leave	Querier	Querier election disable	Startup query count	Startup query interval	Query interval	Query max response time	Last member query interval	Last member query count	Operation
--------------------------	---------	---------------	------------	---------	--------------------------	---------------------	------------------------	----------------	-------------------------	----------------------------	-------------------------	-----------

Total item 0 Total page 0 Current page < 1 >

The main element configuration description of interface configuration interface:

Interface Element	Discription
VLAN ID	VLAN ID number. Its value range is 1-4094.
IGMP Snooping	IGMP Snooping status, enabling IGMP snooping on global or VLAN interface. Note: Only when IGMP snooping is enabled on the global and VLAN interfaces can the configuration of the other IGMP snooping properties on that interface take effect.
Fast Leave	The enabled state of the multicast group fast leave. After fast leaving is enabled, when the switch receives the IGMP leaving group message sent by the host from a port, it directly deletes the port from the outgoing port list of the corresponding forwarding table entry.
Querier	Enable status of IGMP inquirer. IGMP querier can send general query messages to all hosts and other multicast routers in this network segment.
Querier election disable	Enable non-election status of IGMP-Querier. IGMPv2 uses an independent inquirer election mechanism. When there are multiple multicast routers on the shared network segment, the router with the smallest IP address becomes an inquirer, while the non-inquirer no longer sends universal group inquiry messages.
Startup query count	The number of times an IGMP query is started
Startup query interval	The starting query interval of IGMP querier, in seconds.
Query interval	Time interval for the inquirer to send IGMP universal group inquiry message. Note: The query interval of universal group must be greater than the maximum response of universal group.
Query max	Maximum response time of IGMP universal group query.

Interface Element	Discription
response time	
Last member query interval	Time interval when the inquirer sends IGMP specific group inquiry message.
Last member group count	Number of IGMP specific group inquiry messages sent by the inquirer.
Operation	Click the "Edit" button to edit relevant parameters; Click the "Delete" button to delete the entry.

5.6.3 Routing Port Configuration

Function Description

On the "Routing Port Configuration" page, user can configure the port of multicast router.

Operation Path

Open in order: "Layer 2 Config > IGMP Snooping > Routing Port Configuration".

Interface Description

Routing port configuration interface is as below:

Main elements configuration description of routing port configuration interface:

Interface Element	Discription
VLAN ID	VLAN ID number. Its value range is 1-4094.
Port list	Check the checkbox of port list, select device port as the static router port that connects router.
Operation	Click the "Delete" button to delete the entry.

5.6.4 Routing port information

Function Description

On the Routing Port Information page, you can view the startup time, aging time and port type of the routing port. The startup time starts from the port setting as the routing port.

Operation Path

Open in order: "Layer 2 Config > IGMP Snooping Configuration > Routing Port Information".

Interface Description

Routing port information interface is as follows:

IGMP-Snooping Configuration >	Global configuration	Interface Configuration	Routing Interface Configuration	Routing Interface Information
VLAN ID	Port list	Start Time	Aging time	Type
Total item 0	Total page 0	Current page	< 1 >	

5.7 Port Loopback Detection

Loop Detection technology is to periodically send a special detection message from the interface, and then detect whether the message returns to the device, and then judge whether there is a loop between the interface, the device's down-link network or the device and the device's dual interfaces:

- If detection packets are received by the same interface, a loopback occurs on the interface or a loop occurs on the downstream network or device connected to the interface.
- If detection packets are received by another interface on the same device, a loop occurs on the device or network connected to the interface.

After discovering the loop, the device will send an alarm to the network management and record the log, and close the interface at the same time to reduce the impact of the loop on the device and even the network. After the interface is closed, do not participate in any calculation or forwarding completely to prevent network storms.

After a certain period of time, if the device does not receive the detection message sent by the interface, the loop is considered to have been eliminated and the controlled interface will automatically return to the normal state. This process is called controlled interface automatic recovery. After the loop elimination, the recovery port can also be manually configured.

Controlled interface for Loop Detection based on VLAN Detection:

- If the interface cancel detecting this VLAN, the interface will automatically return to normal state.
- If GVRP is not enabled on the interface, when the interface exits this VLAN manually, the interface will automatically return to normal state.

Loop in the interface or network will affect the normal business, while Loop Detection is only a single-node loop detection technology, which does not have the network-level loop breaking function. After a loop is detected, you are advised to eliminate the loop immediately.

5.7.1 Global Configuration

Function Description

On the “Global Configuration” page, you can use the enable switch to enable the loop detection technology and check the configuration information of port loop detection.

Note:

If the loop monitoring function is enabled in the VLAN, it is not recommended to configure the port mirroring function on the ports belonging to the VLAN, otherwise it may cause errors in the loop monitoring function.

Operation Path

Open in order: "Layer 2 Config > Port Loop-detect > Global Config".

Interface Description

Global configuration interface is as follows:

Port loop detection >	Global configuration	Port Configuration
Enable <input checked="" type="radio"/>		
Port	Protected	State
Port recovery time	Protected VLAN	Loop VLAN
Stable packet sending interval	Packet sending interval	

The main element configuration description of global configuration interface:

Interface Element	Description
Enable switch	Global enable switch of port loop detection.
Port	The corresponding port number of this device's Ethernet port.
Protected	The state of the port protected by a loop.
State	The connection status of this port, values are: <ul style="list-style-type: none"> Down: the port is physically disconnected Up: the port is connected Shutdown: the port is closed No Shutdown: the port is not closed
Port recovery time	Recovery time after detection of loop action. If the disabled port does not receive the loop monitoring message after the "port recovery time", it is judged that the loop has been eliminated and the port is reactivated.
Protected VLAN	The VLAN ID of the loop protection.
Loop VLAN	The VLAN ID of the currently generated loop.
Stable packet sending interval	After the ports are started stably, that is, after three "packet-sending intervals", a loop monitoring message is sent at a "stable packet-sending interval" to determine whether there is a loop at each port and whether the loop on the port has been eliminated.
Packet sending interval	When the port is just started, the default time interval for sending loop monitoring messages is 1s, a total of 3 times, and then the packet issuing interval returns to the normal packet issuing interval.

5.7.2 Port Configuration

Function Description

On the "Port config" page, user can implement relevant configuration of port loop detection.

Operation Path

Open in order: "Layer 2 Config > Port Loop-detect > Port Config".

Interface Description

Check port configuration interface as below:

Port loop detection > Global configuration Port Configuration								
Config								
<input type="checkbox"/>	Port	Protected	State	Port recovery time	Protected VLAN	Loop VLAN	Stable packet sending interval	Packet sending interval
<input type="checkbox"/>	ge1	No	Up	300	-	-	10	1
<input type="checkbox"/>	ge2	No	Down	300	-	-	10	1
<input type="checkbox"/>	ge3	No	Down	300	-	-	10	1
<input type="checkbox"/>	ge4	No	Down	300	-	-	10	1
<input type="checkbox"/>	ge5	No	Down	300	-	-	10	1
<input type="checkbox"/>	ge6	No	Down	300	-	-	10	1
<input type="checkbox"/>	ge7	No	Down	300	-	-	10	1
<input type="checkbox"/>	ge8	No	Down	300	-	-	10	1
<input type="checkbox"/>	ge9	No	Down	300	-	-	10	1
<input type="checkbox"/>	ge10	No	Down	300	-	-	10	1
<input type="checkbox"/>	ge11	No	Down	300	-	-	10	1
<input type="checkbox"/>	ge12	No	Down	300	-	-	10	1
<input type="checkbox"/>	ge13	No	Down	300	-	-	10	1
<input type="checkbox"/>	ge14	No	Down	300	-	-	10	1
<input type="checkbox"/>	ge15	No	Down	300	-	-	10	1
<input type="checkbox"/>	ge16	No	Down	300	-	-	10	1
<input type="checkbox"/>	ge17	No	Down	300	-	-	10	1
<input type="checkbox"/>	ge18	No	Down	300	-	-	10	1
<input type="checkbox"/>	ge19	No	Down	300	-	-	10	1
<input type="checkbox"/>	ge20	No	Down	300	-	-	10	1
<input type="checkbox"/>	ge21	No	Down	300	-	-	10	1
<input type="checkbox"/>	ge22	No	Down	300	-	-	10	1
<input type="checkbox"/>	ge23	No	Down	300	-	-	10	1
<input type="checkbox"/>	ge24	No	Down	300	-	-	10	1
<input type="checkbox"/>	xe1	No	Down	300	-	-	10	1
<input type="checkbox"/>	xe2	No	Down	300	-	-	10	1
<input type="checkbox"/>	xe3	No	Down	300	-	-	10	1
<input type="checkbox"/>	xe4	No	Down	300	-	-	10	1

The main element configuration description of port configuration interface:

Interface Element	Discription
Port	The corresponding port number of this device's Ethernet port.
Protected	The state of the port protected by a loop.

Interface Element	Discription
State	<p>The connection status of this port, values are:</p> <ul style="list-style-type: none"> Down: the port is physically disconnected Up: the port is connected Shutdown: the port is closed No Shutdown: the port is not closed
Port recovery time	<p>The resume time after the action of detecting loop, value range: 300-600, its unit is second.</p>
Protected VLAN	<p>The VLAN ID of loop protection. It is None by default. The value range: 1-4094, the number of VLAN ID is ≤ 16</p> <p>Note: This parameter must be configured, otherwise there would be errors in down sending the data.</p>
Loop VLAN	<p>The VLAN ID of the currently generated loop.</p>
Stable packet sending interval	<p>After the ports are started stably, that is, after three "packet-sending intervals", a loop monitoring message is sent at a "stable packet-sending interval" to determine whether there is a loop at each port and whether the loop on the port has been eliminated. Stable packet issuing interval time, the value range is 10-300, and the unit is seconds.</p>
Packet sending interval	<p>When the port is just started, the default time interval for sending loop monitoring messages is 1s, a total of 3 times, and then the packet issuing interval returns to the normal packet issuing interval.</p>

6 Layer 3 Configuration

6.1 Multicast routing

Function Description


On the Multicast Routing page, user can enable or disable the layer 3 multicast routing feature.

Operation Path

Open in order: "L3 Config > Multicast Routing Configuration".

Interface Description

The multicast routing interface is shown as follows:

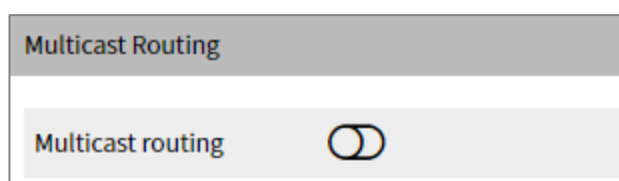

Main elements of the multicast routing interface:

Interface Element	Discription
Multicast routing	Click the button to enable or disable multicast routing, swipe right to enable it, swipe left to disable it.

6.2 Interface Configuration

Interface configuration mainly refers to setting the device interface IPV4 address. The interface configuration only supports manual configuration, doesn't support automatic acquisition (DHCP). User chooses the interface, and fill in IPV4 address . IPV6 address setting can be achieved via command line.

IPV4 address:

The IP address is a 32-bit address assigned to the device connected to Internet. IP address is composed of two fields: Network number field (net-id) and host number field (host-id). IP addresses are allotted by the Network Information Center (NIC) of U.S. Defense Data Network. IP addresses are divided into five categories for the convenience of IP address management. As the table below:

Network Type	Address Range	Usable IP Network Range
A	0.0.0.0~126.255.255.255	1.0.0.0~126.0.0.0
B	128.0.0.0~191.255.255.255	128.0.0.0~191.254.0.0
C	192.0.0.0~223.255.255.255	192.0.0.0~223.255.254.0
D	224.0.0.0~239.255.255.255	None
E	240.0.0.0~246.255.255.255	None
Other addresses	255.255.255.255	255.255.255.255

Thereinto, category A, B, C address are unicast address; category D address is multicast address; category E address is reserved address for the future special purpose. Now, most of the using IP addresses belong to category A, B, C address.

IP address adopts dotted decimal notation recording mode. Each IP address is expressed as four decimal integers separated by radix point, each integer is corresponding to a byte, such as 10.110.50.101.

IPV6 address:

IPv6 (Internet Protocol Version 6) is the second standard protocol of network layer protocol, also called IPng (IP Next Generation); it's a set of standards designed by IETF (Internet Engineering Task Force) and is the upgrade version of IPv4. The most

significant difference between IPv4 and IPv6: IP address length is increased from 32 bits to 128 bits.

IPv6 address is expressed as a series of 16 bits hexadecimal number separated by colon. Each IPv6 address is divided into eight groups, 16 bits in each group is expressed by four hexadecimal numbers, two groups are separated by colon, such as: 2001:0000:130F:0000:0000:09C0:876A:130B. In order to simplify the expression of IPv6 address, "0" in IPv6 address can be handled in the following way: The leading "0" in each group can be omitted, that is above address can be written as 2001:0:130F:0:0:9C0:876A:130B. If the address contains two or more successive 0 group, it can be replaced by double colon "::", that is, above address can be written as 2001:0:130F::9C0:876A:130B.

**Notice**

One IPv6 address can only use the double colon "::" once, otherwise, when the device changes "::" to 0 for restoring 128 bits address, 0 number represented by "::" won't be able to confirm.

IPv6 address is composed of two parts: address prefix and interface identification. Thereinto, address prefix is the network number field part in IPv4 address, interface identification is the host number part in IPv4 address.

The expression method of address prefix is: IPv6 address/prefix length. Thereinto, IPv6 address is any form listed before, and prefix length is a decimal number, it represents how many bits in the leftmost of IPv6 address is the address prefix.

6.2.1 Layer 3 Interface

The IP of layer 3 switch could be used as the device management address or gateway. The IP of layer 3 switch needs to be configured at layer 3 interface.

Function Description

On the "Interface Configuration" page, user can configure the Layer 3 interface IP address.

Operation Path

Open in order: "L3 Configuration > Interface Configuration > Layer-3 Interface".

Interface Description

L3 interface configuration interface as follows:

Interface Configuration >		Layer-3 Interface		Loopback Interface Configuration	
<input type="button" value="+Add"/>		<input type="button" value="Delete"/>			
<input type="checkbox"/>	Interface	State	IPv4 address	Enable	Operation
<input type="checkbox"/>	vlanif1	up	192.168.1.254/24	enable	Edit Delete
Total item 1		Total page 1	Current page	< 1 >	

The main element configuration description of interface configuration interface:

Interface Element	Discription
Interface	Layer 3 interface names, such as, vlanif1, value range: vlanif1-vlanif4094.
State	Interface state information, options: <ul style="list-style-type: none">Up;Down.
IPv4 address	IPv4 address and subnet mask, such as 192.168.1.1/24.
Enable	Interface switch options as follows: <ul style="list-style-type: none">enable;disable.
Operation	Click "edit" button to set interface and IPv4 address, enable/disable interface switch. Click "Delete" under "operation" to delete the corresponding interface configuration directly.
Add	Click "edit" button to add the configuration of layer 3 interface.
Delete	Check the radio box of layer 3 interface entry, and click "delete" button to delete layer 3 interface entry.

6.2.2 Loopback Interface

Loopback interface is virtual interface, and most of the platforms support using it to simulate real interface. This interface is in virtual forever UP state, which is more stable than any other physical interface. As long as the router starts, the loopback interface would be in an active state. If there are multiple routes that arrive at this loopback address, they would not be unreachable when one of the interface of the device is down. It only be invalid when the router no longer has effect.

Function Description


On the "Loopback Interface" page, user can configure the parameter of loopback interface.

Operation Path

Open in order: "L3 forward Config > Interface Config > Loopback Interface".

Interface Description

Loopback interface configuration interface as follows:

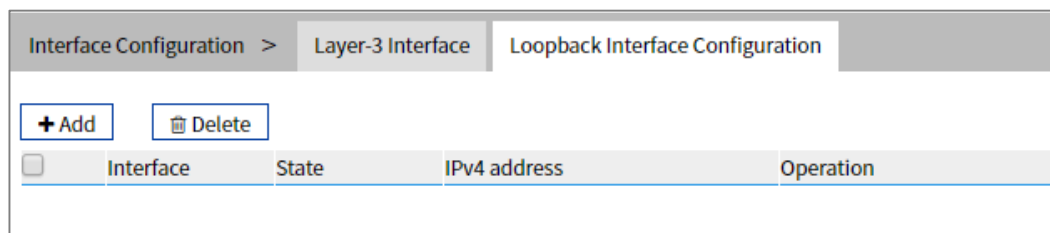

Interface	State	IPv4 address	Operation
-----------	-------	--------------	-----------

The main element configuration description of loopback interface interface:

Interface Element	Discription
Interface	The name of loopback interface, value range: loopback0 or loopback1.
State	Loopback interface state information, options are: <ul style="list-style-type: none">Up;Down.
IPv4 address	IPv4 address and subnet mask, such as 10.1.1.0/24.
Operation	Click the "Edit" button to set the interface and IPv4 address. Click "Delete" under "operation" to delete the relevant loop back interface directly.

Interface Element	Discription
Add	Click "add" button to add the configuration of loopback interface.
Delete	Check the radio box of loopback interface entry, click "delete" button to delete loopback interface entry.

6.3 ARP Configuration

ARP (Address Resolution Protocol) is the protocol that resolves IP address into Ethernet MAC address (or physical address).

In local area network, when the host or other network device sends data to another host or device, it must know the network layer address (IP address) and MAC address of the opposite side. So it needs a mapping from IP address to the physical address. ARP is the protocol to achieve the function.

6.3.1 Show ARP

Function Description

On the "ARP Information" page, user can check the ARP address, MAC, output port and other parameters.

Operation Path

Open in order: "L3 Configuration > ARP Configuration > ARP Information".

Interface Description

ARP Information interface as follow:

ARP Configuration > ARP Information Static ARP Configuration ARP Parameter Configuration						
Clear ARP table						
Destination IP	Destination MAC	Interface	Type	Expires	Port	Operation
192.168.1.10	0022.6fcc.0004	vlanif1	dynamic	1200	ge1	To Static
192.168.1.61	00e0.4d2f.2f52	vlanif1	dynamic	990	ge1	To Static
192.168.1.62	aa22.660d.6477	vlanif1	dynamic	1120	ge1	To Static
192.168.1.233	3497.f68e.4334	vlanif1	dynamic	980	ge1	To Static
Total item 4 Total page 1 Current page < 1 >						

The main element configuration description of ARP information interface:

Interface Element	Discription
Destination IP	Destination IP address of accessing device.
Destination MAC	Destination MAC address of accessing device.
Interface	Output port of accessing device data transmission.
Type	ARP mode of accessing device.
Expires	ARP age-time of accessing device.
Port	Port number of the accessing device.
Operation	Click "convert to Static" to convert dynamic address to static address.

6.3.2 Static ARP

Function Description

On the "Static ARP" page, user can conduct static ARP configuration.

Operation Path

Open in order: "L3 forward Configuration > ARP Configuration > Static ARP".

Interface Description

Static ARP interface as follows:

The main element configuration description of static ARP interface:

Interface Element	Discription
IP Address	IP address of accessing device, such as 192.168.1.1.
MAC address	MAC address of the access device, such as 0001.0001.0001.
Interface	Output port of accessing device data transmission.
Operation	Click "Edit" under "operation" to edit the MAC address

Interface Element	Discription
	information again. Click “Delete” under "operation" to delete the entry directly.

6.3.3 ARP Parameter Configuration

Function Description

On the "ARP age-time" page, user can conduct ARP age-time configuration.

Operation Path

Open in order: "L3 Configuration > ARP Configuration > ARP Parameters Configuration".

Interface Description

ARP parameter configuration interface as follows:

The main element configuration description of ARP age-time interface:

Interface Element	Discription
Interface	Interface Name.
Aging Time	Ageing time display.
Config	Check the ARP interface entry checkbox and click the “Config” button to configure the aging time of the specified interface. It is 1200 by default, valid input range is 30-1200 (second).

6.4 VRRP Configuration

VRRP (Virtual Router Redundancy Protocol) is a fault-tolerant protocol. In general, all hosts in a network will set a default route, when the destination address of the message sent by host isn't in the network segment; the message will be sent to the Router A via default router, achieving the communication between the host and external network. When the Router A breaks down, all hosts that takes Router A as default router in the network segment will disconnect communication to the outside, generating single point of failure. VRRP is proposed to solve the problem above, and it's designed for the local area network (such as: Ethernet) with multicast or broadcast capability.

VRRP organizes a set of routers (including a Master, that is the active router and several Backup, that is the standby router) in the local area network into a virtual router, which is called a backup team. The virtual router possesses its own IP address 10.100.10.1 (The IP address can be same to a router interface address in the backup team, it's called IP owner), routers in the backup team have their own IP address (such as IP address of Master is 10.100.10.2, IP address of Backup is 10.100.10.3). Hosts in the local area network only knows the virtual router IP address is 10.100.10.1, it doesn't know that the specific Master router IP address is 10.100.10.2 and Backup router IP address is 10.100.10.3. Hosts set their own default router next hop address to the virtual router IP address 10.100.10.1. Thereupon, hosts in the network start to communicate with other networks via the virtual router. If the Master router in backup team breaks down, Backup router will elect a new Master router via election strategy and provide router service for hosts in the network. Therefore, hosts in the network can uninterruptedly communicate with outside network.

Principle of realization

A VRRP router has the only identification: VRID, range is 0-255. The router has only one virtual MAC address, and the address format is 00-00-5E-00-01-[VRID]. Master router is responsible for replying the ARP request by MAC address. Regardless of the switching, it's ensured to give the only consistent IP and MAC address to the terminal device, declining the switching influence to terminal device.

VRRP control message includes only one type: VRRP announce (advertisement). It's packaged by IP multicast data packet, the multicast address is 224.0.0.18, issue range can be only in the same local area network. It has ensured that VRID can be repeatedly used in different network. In order to decrease the network bandwidth consumption, only the master router can periodically send VRRP announce message. Backup router will start new VRRP election if it can't receive VRRP in three consecutive announce intervals or receives announce with 0 priority.

In the VRRP router group, the master router is elected by priority. The priority range in VRRP protocol is 0-255. If VRRP router IP address is the same to virtual router interface IP address, then the virtual router is called IP address owner in VRRP group; IP address owner automatically has the highest priority: 255. Priority 0 is usually used when IP address owner forwardly gives up the master role. Configurable priority range is 1-254. Priority configuration principle is set according to the link speed and cost, router performance and reliability, and other management strategies. In the election of master router, virtual router with high priority wins; therefore, if there exists IP address owner in VRRP group, it will appear as the master router. Candidate router with the same priority can be elected according to IP address size order. VRRP has also provided priority preemption strategy, if the strategy is configured, backup router with high priority will deprive current master router with low priority and become the new master router.

In order to ensure the safety of VRRP protocol, two safety certification measures are provided: Plaintext authentication and IP header authentication. Plaintext authentication method requirements: User must provide the VRID and plaintext password while joining a VRRP router. It suits for avoiding the configuration error in the local area network but can't prevent gaining the password via network monitoring method. IP header authentication method has provided higher security, and it can prevent message replay and modification attack.

Function Description

On the "VRRP Configuration" page, user can configure VRRP parameters.

Operation Path

Open in order: "L3 Configuration > VRRP Configuration".

Interface Description

VRRP configuration interface as follow:

VRRP Configuration

+ Add
Delete

<input type="checkbox"/>	VRID	Layer-3 Interface	State	Virtual IP	IP address owner	Priority	Announcement interval (s)	Authentication mode	Preemption mode	Preemption delay time	Enable	Operation
Total item 0 Total page 0 Current page < 1 >												

The main element configuration description of VRRP configuration interface:

Interface Element	Discription
VRID	Virtual router ID, valid range is 1-255.
Layer 3 Interface	Layer 3 interface information, such as, vlanif1.
State	Current status, options as follows: <ul style="list-style-type: none"> Master; Backup.
Virtual IP	Virtual router IP address, such as 192.168.1.253.
Priority	Priority defaults to 100, valid range is 1-254. Note: When the IP address owner is configured, the default priority can only be 255.
Announcement interval (s)	The Master router in the VRRP backup group will send a notification message to notify the routers in the VRRP backup group that they are working normally, unit: second, default: 1 second, valid range: 1-10 seconds.
Authentication mode	Configure how the backup group sends and receives VRRP messages. By default, no authentication is performed. Options are as follows: <ul style="list-style-type: none"> disable; text. Note: <ul style="list-style-type: none"> Different backup groups on an interface can set different authentication methods. Members joining the same backup group need to set up the same authentication mode.
Preemption mode	In the preemption mode, once the routers in the backup group find that their priority is higher than that of the current Master router, they will send VRRP announcement messages to the outside. It causes the router in the backup group to reelect the

Interface Element	Discription
	Master router and eventually replace the original Master router. Accordingly, the original Master router will become the Backup router. Preemption mode, options as follows: <ul style="list-style-type: none"> • false; • true.
Preemption delay time	Set a preemption delay for a VRRP backup group to avoid frequent primary and standby state transitions among members of the backup group. Valid range is -255s, the default value is 0.
Enable	Enable switch, options are as follows: <ul style="list-style-type: none"> • Enable; • Disable.
Operation	Click "Edit" under "Operation" to re-edit VRRP configuration information; Click "Delete" under "Operation" to delete the entry directly.

6.5 NAT Settings

NAT(Network Address Translation) is a process of translating an IP address in an IP data header into another IP address. In practical application, NAT is mainly used to realize the function of private network accessing public network. This way of using a few public IP addresses to represent more private IP addresses will help to slow down the exhaustion of available IP address space.

6.5.1 NAT port binding

Function Description

On the "NAT binding" page, you can add or delete NAT entries, and set the internal network interface and external network interface of the device.

Operation Path

Open in order: "Layer 3 configuration > NAT Configuration > NAT Interface Binding".

Interface Description

The NAT interface binding interface is as follows:

Configuration description of main elements of NAT interface binding interface.

Interface Element	Discription
Add	Click the “Add” button and set the Intranet and external interfaces of the device.
Delete	Check NAT port binding information to be deleted, and click “Delete” to delete it
Name	NAT entry name. Note: Support input of up to 32 characters of letters, numbers or @_! .
Inside interface	Connect the VLAN of the intranet device, access the IP of this VLAN, and access the public network through NAT.
Outside interface	The VLAN connecting the external network device, through which the external network can access the internal network device through NAT.
Operation: delete	Delete the NAT entry of the current line.

Instance: typical NAT Port Binding

Assume that the switch physical port ge2 that connects external network is out-car interface, the other ports are in-car interfaces. First, port ge2 can be divided into VLAN2 and other ports into VLAN1. Then, VLAN1 and VLAN2 can be configured as the corresponding layer 3 interface, and the IP address and mask of the three-layer interface can be configured. Finally, interface binding can be performed.

Operation steps

Step 1 Divide port ge2 into VLAN2 and other ports into VLAN1.

- 1 Access "Layer 2 Configuration > VLAN Configuration > VLAN Config".
- 2 Click "Add" and enter 2 in "VLAN " text box as shown below:

VLAN

2	2

A group of input boxes of the same size indicates a vlan, otherwise a group of vlan ranges

Set

- 3 Click "Apply" button.
- 4 Access "Layer 2 Configuration > VLAN Configuration > Access Configuration".
- 5 Check port 2 and click "Configure".
- 6 Enter 2 in the box that pops up.

Pvid 2 1-4094

Set

- 7 Click "Apply" button.

VLAN Configuration > VLAN Configuration			Access Configuration	Trunk Configuration	Hybrid Configuration
Pvid Config			Mode setting		
<input type="checkbox"/>	Port	Pvid			
<input type="checkbox"/>	ge1	1			
<input checked="" type="checkbox"/>	ge2	2			
<input type="checkbox"/>	ge3	3			
<input type="checkbox"/>	ge4	4			
<input type="checkbox"/>	ge5	1			
<input type="checkbox"/>	ge6	1			

- 8 Enter "Layer 2 Config > VLAN Config > VLAN Config", confirm setting.

VLAN Configuration >

VLAN Configuration

Access Configuration

Trunk Configuration

Hybrid Configuration

+ Add

Delete

Range delete

<input type="checkbox"/>	VLAN	Description	Untagged port	Tagged port	State	Operation
<input type="checkbox"/>	1	default	ge1 ge3 ge4 ge5 ge6 ge7 ge8 ge9 ge10 ge11 ge12 ge13 ge14 ge15 ge16 ge17 ge18 ge19 ge20 ge21 ge22 ge23 ge24 xe1 xe2 xe3 xe4		static	Edit Delete
<input type="checkbox"/>	2	VLAN0002	ge2		static	Edit Delete

Total item 2

Total page 1

Current page

< 1 >

Step 2 Configure VLAN1 and VLAN2 as the corresponding layer 3 interface, and configure the IP address and mask of the layer 3 interface.

- 1 Enter "Layer 3 Config > Interface Config > Layer 3 Interface".
- 2 Click "Add". Enter "2" in the "Interface", "192.168.2.6/24" in the "IPv4 address", select "enable" in the "interface switch".

Interface: 2-4094

IPv4 address: eg: :192.168.1.1/24

Enable:

- 3 Click "Apply".

Interface Configuration >		Layer-3 Interface		Loopback Interface Configuration	
<input type="button" value="+ Add"/>		<input type="button" value="Delete"/>			
<input type="checkbox"/>	Interface	State	IPv4 address	Enable	Operation
<input type="checkbox"/>	vlanif1	up	192.168.1.254/24	enable	Edit Delete
<input type="checkbox"/>	vlanif2	down	192.168.2.6/24	enable	Edit Delete
Total item 2		Total page 1	Current page	< 1 >	

Step 3 NAT port binding

- 1 Enter: "Layer 3 Configuration > NAT Config > NAT Port Binding".
- 2 Click "Add".
- 3 Enter "TEST" in the pop-up window "Name", enter "1" in the "In-car interface" and "2" in the "Out-car interface".

Name:

Inside interface:

Outside interface:

- 4 Click "Apply".

NAT Configuration > NAT Interface binding NAT Configuration rules NAT Destination address

<input type="checkbox"/>	Name	Inside interface	Outside interface	Operation
<input type="checkbox"/>	TEST	vlanif1	vlanif2	Delete

Total item 1 Total page 1 Current page < 1 >

Step 4 End.

6.5.2 NAT Configuration Rule

Function Description

On the "NAT Config Rule" page, user can configure NAT rule.

Operation Path

Open in order: "L3 Config > NAT Config > NAT Config Rule".

Interface Description

NAT configuration rule interface is as follows:

NAT Configuration > NAT Interface binding NAT Configuration rules NAT Destination address

<input type="checkbox"/>	Name	Active state	Inside IP	Inside port	Outside IP	Outside port	Protocol	Operation
--------------------------	------	--------------	-----------	-------------	------------	--------------	----------	-----------

Total item 0 Total page 0 Current page < 1 >

Main elements configuration description of NAT configuration rule interface:

Interface Element	Discription
Add	Click "Add" button to add NAT configuration rule
Delete	Check NAT configuration rule to be deleted, and click "Delete" to delete it
Name	NAT entry name. Note: Support input of up to 32 characters of letters, numbers or @_! .
Activate state	Whether NAT rule is activated or not, the status is as follows: <ul style="list-style-type: none"> Activated: enable;

Interface Element	Discription
	<ul style="list-style-type: none"> Inactive: disable.
Protocol	<p>Mapping port protocol, options are as follows:</p> <ul style="list-style-type: none"> All: supports tcp, udp and icmp protocol forwarding; tcp: supports tcp protocol forwarding; udp: supports udp protocol forwarding; icmp: supports icmp protocol forwarding. <p>Note: When all and icmp protocols are selected, it is not supported to input internal network port and external network port. please keep the internal network port and external network port blank.</p>
Inside Port	<p>Port number of intranet VLAN corresponding to port mapping protocol.</p> <p>Note: TCP/UDP :1-65535/ do not fill to indicate any port; ALL/ICMP: No distinction between port numbers.</p>
Inside IP	Intranet IP that can be mapped to external network through NAT.
Outside Port	<p>The port number of the external VLAN corresponding to the port mapping protocol.</p> <p>Note: TCP/UDP :1-65535/ do not fill to indicate any port; ALL/ICMP: No distinction between port numbers.</p>
Outside IP	The external network IP mapped by the internal network IP through NAT.
Operation	Click the "Delete" button under the operation to delete this NAT configuration rule.

6.5.3 NAT Destination Address

Function Description

On the NAT destination address page, you can add or delete allowed external network addresses.

Operation Path

Open in order: "Layer 3 Configuration > NAT Configuration > NAT Destination Address".

Interface Description

The NAT destination address interface is as follows:

NAT Configuration >		NAT Interface binding	NAT Configuration rules	NAT Destination address
<div> <input type="button" value="+ Add"/> <input type="button" value="Delete"/> </div>				
<input type="checkbox"/>	Name	Destination network	Operation	
Total item 0 Total page 0 Current page < 1 >				

Main elements configuration description of NAT configuration rule interface:

Interface Element	Discription
Name	NAT entry name. Note: Support input of up to 32 characters of letters, numbers or @_! .
Destination network	IP addresses of accessible external networks.
Operation	Click "Delete" under "Operation" to delete the corresponding entry.

6.6 IGMP Configuration

6.6.1 Interface Configuration

Function Description

On the interface configuration page, user can add or delete IGMP configuration of Ethernet ports.

Operation Path

Open in order: "L3 forward Config > IGMP Config > Interface Configuration".

Interface Description

Interface configuration interface as follows:

IGMP Configuration >		Interface Configuration	SSM-Mapping Configuration	Group Members							
<input type="button" value="+ Add"/> <input type="button" value="Delete"/>											
<input type="checkbox"/>	Interface	IGMP	Version	Router-Alert option	Unlimited same subnet	Robustness coefficient	Other querier present timer	Fast leave ACL	Deny multicast ACL	Multicast group Max	Operation
Total item 0 Total page 0 Current page < 1 >											

The main element configuration description of interface configuration interface:

Interface Element	Discription
IGMP	IGMP status: <ul style="list-style-type: none"> enable; disable.
Interface	Layer 3 interface, such as vlanif1.
Version	IGMP version, options are: <ul style="list-style-type: none"> 1: IGMPv1, it defines the basic querying and reporting process of group members; 2: IGMPv2, it adds the mechanism of polling and leaving group members on IGMPv1; 3: IGMPv3, members are added to IGMPv2 to specify whether to receive or not to receive messages from certain multicast sources.
Router-Alert option	RA(Router-Alert). When a network device receives a message, only the message whose destination IP address is the interface address of the device will be sent to the corresponding protocol module for processing. If the destination address of the protocol message is not the interface address of the device, check whether the IP message header carries the Router-Alert option, if so, it will be directly sent to the corresponding protocol module for processing without checking the destination address. Note: For compatibility reasons, after receiving IGMP message, the current switch will send it to IGMP protocol module for processing by default regardless of whether its IP header contains Router-Alert option.
Unlimited same subnet	Limit the multicast source and interface to the same subnet, otherwise the port cannot receive multicast messages.
Robustness coefficient	Specify the robustness of the IGMP query, ranging from 2 to 7. This coefficient is used to specify the default value of the number of times an IGMP query message is sent by the IGMP

Interface Element	Discription
	query at startup, and the number of times an IGMP query message is sent by the IGMP query after the IGMP query receives the message leaving the group.
Other querier present timer	<p>Timer time of non-inquirer.</p> <ul style="list-style-type: none"> Before the timer expires, if the inquiry message from the inquirer is received, reset the timer; Otherwise, the original inquirer is considered invalid, and a new inquirer election process is initiated.
Fast leave ACL	By default, when the interface works in IGMP v2 or v3, after receiving IGMP leave message, it will send a specific group query message to determine whether to age multicast member entries. After configuring the fast leave ACL, if the group address specified by the leave message is within the group address range specified by the ACL, the multicast member table entry can be aged immediately.
Deny multicast ACL	List of restricted multicast groups.
Multicast group Max	The maximum number of multicast supported.
Operation: edit	Modify IGMP entries.
Operation: delete	Delete the current IGMP entry.

6.6.2 SSM-Map configuration

SSM(Source-Specific Multicast) requires routers to know the multicast source designated by member hosts when they join the multicast group. A host running IGMPv3 can specify multicast source addresses in IGMPv3 Report messages. However, hosts running IGMPv1 or IGMPv2 rely on the IGMP SSM mapping function to obtain the SSM service.

The mechanism of IGMP SSM Mapping is: by statically configuring SSM address Mapping rules on the router, information in IGMPv1 and IGMPv2 report packets is converted into corresponding information to provide SSM multicast service.

After the configuration of SSM Mapping rules, when the IGMP query receives the IGMPv1 or IGMPv2 report packets from the member host, it first checks the multicast group addresses carried in the paper, and then processes them separately according to the different inspection results.

- If the Multicast group is within the range of ANY-Source Multicast, then only ASM services are provided.
- If the multicast group is within the SSM group address range (the default is 232.0.0.0 ~ 232.255.255.255) :
 - If the router does not have the SSM Mapping rule corresponding to the multicast group, the SSM service cannot be provided and the article is discarded.
 - If there are SSM Mapping rules corresponding to the multicast group on the router, according to the rules, the information contained in the report packet (member, multicast group) will be mapped to (multicast group, INCLUDE, member) information, and SSM service will be provided.

Note:

By default, the IGMP SSM Mapping function is disabled. The switch can be turned on after sliding to the right.

Function Description

On the interface configuration page, user can add or delete IGMP configuration of Ethernet ports.

Operation Path

Open in order: "L3 Configuration > IGMP configuration > SSM-Map Configuration".

Interface Description

The SSM-Map configuration interface is as follows:

Main element configuration description of SSM-Map configuration interface:

Interface Element	Discription
SSM Mapping	IGMP SSM Mapping function switch is closed by default and turned on after sliding the switch to the right.
Access List	Access list.
Static mapping source	The specified multicast source address in the access list.

6.6.3 Multicast Group Information

Function Description

On the "Multicast Group Information" page, display the multicast information received by the device interface.

Operation Path

Open in order: "L3 Configuration > IGMP Configuration > Multicast Group Information".

Interface Description

The multicast group information interface is as follows:

IGMP Configuration >	Interface Configuration	SSM-Mapping Configuration	Group Members
Interface	Group Members	Type	
Total item 0	Total page 0	Current page	< 1 >

Main element configuration description of multicast group information interface:

Interface Element	Discription
Interface	Ethernet port.
Group Members	The multicast address received by the interface.
Type	Multicast type: <ul style="list-style-type: none"> dynamic static

6.7 PIM-SM Configuration

PIM-SM is a multicast routing protocol in sparse mode, which uses "Pull mode" to transmit multicast data. It is usually suitable for large and medium-sized networks with relatively scattered multicast group members and a wide range. Its basic principle is as follows:

- PIM-SM assumes that all hosts do not need to receive multicast data, but only forward it to the hosts that explicitly propose that they need multicast data. The core task of PIM-SM to realize multicast forwarding is to construct and maintain RPT(Rendezvous Point Tree). RPT selects a router in PIM domain as a common root node RP(Rendezvous Point), and multicast data is forwarded to receivers along RPT through RP.
- The router connecting the receiver sends a Join Message to the RP corresponding to a multicast group, and the message is delivered to the RP hop by hop, and the path it passes forms a branch of RPT;
- If a multicast source wants to send multicast data to a multicast group, the DR(Designated Router (DR) on the multicast source side is responsible for registering with the RP, and sending a Register Message to the RP by unicast, which triggers the establishment of SPT after reaching the RP. After that, the multicast source sends the multicast data to RP along SPT. When the multicast data reaches RP, it is copied and sent to the receiver along RPT.

The working mechanism of PIM-SM can be summarized as follows:

- Neighbor Discovery
- DR election
- RP discovery
- Construct RPT
- Multicast source note
- SPT switching
- Assertion

6.7.1 Global Configuration

Function Description

On the global configuration page, user can configure the global parameters of PIM-SM.

Operation Path

Open in order: "L3 Configuration > PIM-SM Configuration > Global Configuration".

Interface Description

Global configuration interface is as follows:

The screenshot shows the 'Global configuration' tab selected under 'PIM-SM Configuration'. The configuration options are as follows:

- Ignore CRP priority: ☐
- RP reachability check: ☐
- SPT switch: ☐
- Join/Prune interval: (Range: 1 - 65535 s)
- Registration suppression time: (Range: 1 - 65535 s)
- KAT aging: (Range: 1 - 65535 s)

Optional section (indicated by dashed lines):

- Deny register source ACL:
- C-BSR:
- Message rate: (Range: 1 - 65535)
- Register message interface/IP:

A 'Set' button is located at the bottom of the optional section.

The main element configuration description of global configuration interface:

Interface Element	Discription
Ignore CRP priority	When selecting the RP corresponding to multicast, whether to ignore the priority of CRP and choose according to IP address. The one with the larger IP address is elected.
RP reachability check	Whether it is necessary to check the reachability of RP when sending the registration message; if it is not, it means that it cannot be registered.
SPT switch	RP is a necessary transit station for all multicast messages. when the multicast message rate gradually increases, it will create a huge burden on RP. PIM-SM allows RP or group member DR to reduce the burden of RP by triggering SPT switching.
Join/prune interval	Time interval for PIM router to send join/pruning messages. Note:

Interface Element	Discription
	By default, the join/pruning message is sent at an interval of 60 seconds.
Registration suppression time	The time interval for sending the registration message again after receiving the registration stop message ranges from 1 to 65535, and the unit is seconds. The default value is 60 seconds.
KAT aging	The aging time of KAT timer after receiving the registration message ranges from 1 to 65535 in seconds. Note: By default, after receiving the registration message, the aging time of KAT timer = registration inhibition time * 3+registration detection time (the default is 5 seconds).
Deny register source ACL	Configure illegal neighbor source address range. Note: By default, there are no restrictions on the neighbor source addresses that an interface can learn from.
C-BSR	C-BSR Interface Configuration. <ul style="list-style-type: none"> vlanif: vlanif interface; Loopback: loopback interface.
Message rate	The rate of receiving and processing multicast service messages ranges from 1 to 65535, and the unit is one/second.
Register message interface /IP	The VLAN interface, source IP address or loopback interface that sends the registration message.

6.7.2 Static RP Configuration

Function Description

On the static RP configuration page, you can set up the static RP manually.

Operation Path

Open in order: "L3 Configuration > PIM-SM Configuration > Static RP Configuration".

Interface Description

Static RP configuration interface as follow:

The main element configuration description of static RP configuration interface:

Interface Element	Discription
IP Address	Configure the IP address of the static RP. Note: The address must be a legal unicast IP address, and should not be configured as the address of the 127.0.0.0/8 network segment.
Operation: delete	Delete the static RP entry of the current line.

6.7.3 C-RP Configuration of Interface

Function Description

On the interface C-RP configuration page, you can add or delete C-RP interfaces.

Operation Path

Open in order: "L3 Configuration > PIM-SM Configuration > Interface C-RP Configuration".

Interface Description

The interface C-RP configuration interface is as follows:

Main element configuration description of interface C-RP configuration interface:

Interface Element	Discription
C-RP interface	To configure the C-RP interface: <ul style="list-style-type: none"> vlanif: vlanif interface; Loopback: loopback interface.

Interface Element	Discription
Operation: delete	Delete the candidate convergence point entry in the current line.

6.7.4 Interface Configuration

Function Description

On the "Interface Configuration" page, user can set interface PIM- SM parameters.

Operation Path

Open in order: "L3 Configuration > PIM-SM Configuration > Interface Configuration".

Interface Description

Interface configuration interface as follows:

PIM-SM Configuration >

Global configuration

Static RP Configuration

Interface C-RP Configuration

Interface Configuration

Status Display

Multicast RP address

+ Add

Delete

<input type="checkbox"/>	Interface	PIM-SM	Exclude GenID	DR priority	Neighbor holdtime	Hello interval	Deny neighbor ACL	Operation
<div> <div>Total item 0</div> <div>Total page 0</div> <div>Current page</div> <div>< 1 ></div> </div>								

The main element configuration description of interface configuration interface:

Interface Element	Discription
Interface	Configure interface: <ul style="list-style-type: none"> vlanif: vlanif interface; Loopback: loopback interface.
PIM-SM	PIM-SM status. <ul style="list-style-type: none"> enable; disable.
Exclude GenID	The interface is configured to send hello messages without carrying GenID information. Note: GenID is a random value at the initial creation of the interface to identify unique interface information. With this information, users can detect whether the neighbor device has been restarted.
DR priority	Specify the priority of running for DR from 0 to 4294967294. Note: The higher the value, the higher the priority.

Interface Element	Discription
Neighbor holdtime	Specify the time to keep PIM neighbor reachable, the value range is 1 ~ 65535, and the unit is seconds. Note: If specified as 65535 seconds, the PIM neighbor is always reachable.
Hello interval	Time period for sending Hello messages between PIM routers.
Deny neighbor ACL	Illegal neighbor source address range.
Operation: edit	Modify and delete interface configuration items.
Operation: delete	Delete the interface configuration item of the current line.

6.7.5 Status Display

Function Description

On the "Status Display" page, you can view the parameter configuration of PIM multicast, including:

- BSR information
- Interface information
- Local multicast
- Multicast routing table
- Neighbor
- Next hop information
- RP-Set information

Operation Path

Open in order: "L3 Configuration > PIM-SM Configuration > Status Display".

Interface Description

The status display interface is as follows:

6.7.6 Multicast PR Address

Function Description

In multicast RP address, user can query the multicast RP address.

Operation Path

Open in order: "L3 Configuration > PIM-SM Configuration > Multicast RP Address".

Interface Description

The multicast RP address interface is as follows:

Main element configuration description of multicast RP address interface:

Interface Element	Discription
IP Address	Multicast address.
RP address	RP address.
Source address	CRP source address.

6.8 PIM-DM Configuration

PIM-DM is a multicast routing protocol in dense mode, which uses "Push mode" to transmit multicast data. It is usually suitable for small networks with relatively dense multicast group members. Its basic principle is as follows:

- PIM-DM assumes that each subnet in the network has at least one multicast group member, so multicast data will be Flooding to all nodes in the network. Then, PIM-DM prune the branches without multicast data forwarding, leaving only the branches containing receivers. This "Flooding-Prune" phenomenon occurs periodically, and the pruned branches can also be restored to forwarding status periodically.
- In order to reduce the time required for the node to return to the forwarding state when the multicast group members appear on the branched node, PIM-DM actively resumes its forwarding of multicast data by using the Graft mechanism.

Generally speaking, the forwarding path of data packets in dense mode is a Source Tree (a forwarding tree with multicast source as its root and multicast group members as its branches and leaves). Source Tree is also called SPT(Shortest Path Tree) because it uses the shortest path from multicast source to receiver.

The working mechanism of PIM-DM can be summarized as follows:

- Neighbor Discovery
- Build SPT
- Graft
- Assertion

6.8.1 Global Configuration

Function Description

On the Global Configuration page, user can refresh the pruning timer status and set the time interval between sending status and receiving status.

Operation Path

Open in order: "L3 Configuration > PIM-SM Configuration > Global Configuration".

Interface Description

Global configuration interface is as follows:

PIM-DM Configuration > Global configuration Interface Configuration Status Display

State Refresh ☒

Send status refresh interval 1 - 100 s

Receive status refresh interval 1 - 100 s

The main element configuration description of global configuration interface:

Interface Element	Discription
State refresh	When checked, refresh the status of pruning timer to prevent the clipped interface from resuming forwarding due to timeout of pruning timer.
Send status refresh interval	The pruning timer updates the sending state time interval.
Receive status refresh interval	The pruning timer updates the receiving state time interval.

6.8.2 Interface Configuration

Function Description

On the "Interface Configuration" page, user can configure interface PIM-DM parameters.

Operation Path

Open in order: "L3 Configuration > PIM-DM Configuration > Interface Configuration".

Interface Description

Interface configuration interface as follows:

PIM-DM Configuration > Global configuration Interface Configuration Status Display

<input type="checkbox"/>	Interface	PIM-DM	Exclude GenID	DR priority	Neighbor holdtime	Hello interval	Deny neighbor ACL	Operation
--------------------------	-----------	--------	---------------	-------------	-------------------	----------------	-------------------	-----------

Total item 0 Total page 0 Current page < >

The main element configuration description of interface configuration interface:

Interface Element	Discription
Interface	Configure interface: <ul style="list-style-type: none"> vlanif: vlanif interface; Loopback: loopback interface.
Delete	Delete the candidate convergence point entry in the current line.
Exclude GenID	The interface is configured to send hello messages without carrying GenID information. Note: GenID is a random value at the initial creation of the interface to identify unique interface information. With this information, users can detect whether the neighbor device has been restarted.
DR priority	Specify the priority of running for DR from 0 to 4294967294. Note: The higher the value, the higher the priority.
Neighbor holdtime	Specify the time to keep PIM neighbor reachable, the value range is 1 ~ 65535, and the unit is seconds. Note: If specified as 65535 seconds, the PIM neighbor is always reachable.
Hello interval	Time period for sending Hello messages between PIM routers.
Deny neighbor ACL	Illegal neighbor source address range.
Operation: edit	Modify and delete interface configuration items.
Operation: delete	Delete the interface configuration item of the current line.

6.8.3 Status Display

Function Description

On the "Status Display" page, you can view the parameter configuration of PIM multicast, including:

- BSR information
- Interface information
- Local multicast
- Multicast routing table
- Neighbor

- Next hop information
- RP-Set information

Operation Path

Open in order: "L3 Configuration > PIM-DM Configuration > Status Display".

Interface Description

The status display interface is as follows:

PIM-DM Configuration > Global configuration Interface Configuration Status Display

Interface information ▼

Address	Interface	Vlanif index	Version / Mode	Neighbor count	DR priority	DR address
---------	-----------	--------------	----------------	----------------	-------------	------------

Total item 0 Total page 0 Current page < 1 >

7 Router Configuration

7.1 IPv4 Configuration

7.2 IPv4 Routing Table

Function Description

On the "IPv4 Routing Table" page, user can check various router configuration methods.

Operation Path

Open in order: "Routing Configuration > IPv4 Configuration > IPv4 Routing Table".

Interface Description

The IPv4 routing table interface as follows:

IPv4 Configuration > IPv4 Routing Table IPv4 Static Route				
Destination IP	Mask length of destination IP	Protocol type	Next hop	Outgoing interface
127.0.0.0	8	connected	-	lo
192.168.1.0	24	connected	-	vlanif1
Total item 2 Total page 1 Current page < 1 >				

The main element configuration description of show route interface:

Interface Element	Discription
Destination IP	Destination IP addresses.

Interface Element	Discription
Mask length IP of destination IP	The length of destination subnet mask.
Protocol type	Protocol type, corresponding full name relationship as below: <ul style="list-style-type: none">• K-kernel route;• C - connected;• S – static;• R – RIP;• O – OSPF;• I - IS-IS;• B – BGP;• A – Babel;• > - selected route;• * - FIB route.
Next hop	Gateway address information of next hop.
Output port	Interface Name.

7.3 IPv4 Static Route

Static route refers to the route information that user or network administrator manually configures. When the network topology structure or link status changes, network administrator needs to manually modify relative static route information in the routing table. Static route usually adapts to simple network environment, under this environment, network administrator can clearly know the network topology structure, which is convenient for setting correct route information.

Function Description

On the "IPv4 Static Route" page, user can configure static route.

Operation Path

Open in order: "Routing Configuration> IPv4 Configuration > IPv4 Static Routing".

Interface Description

The IPv4 Static Route interface as follows:

IPv4 Configuration > IPv4 Routing Table IPv4 Static Route

+ Add

Delete

<input type="checkbox"/>	Destination IP	Mask length of destination IP	Next hop	Outgoing interface	Operation
--------------------------	----------------	-------------------------------	----------	--------------------	-----------

Total item 0 Total page 0 Current page < 1 >

The main element configuration description of IPv4 Static Route interface:

Interface Element	Discription
Destination IP	Destination network IP address, such as destination address is 10.1.1.0.
Mask length of destination IP	Destination IP mask length. Value range is 0-32.
Next hop	The gateway address of the next hop, format: no input or 192.3.3.3.
Outgoing interface	Interface Name.

7.4RIP Configuration

RIP (Routing Information Protocol) is a simple Interior Gateway Protocol (IGP) and mainly used in small network, such as Campus Network and Local Area Network with simple structure. RIP isn't used in more complex environment and large network.

RIP is simple to achieve and easier in configuration and maintenance than OSPF or IS-IS, so it's widely used in actual networking.

7.4.1 RIP Global Configuration

Function Description

On the "RIP Global Config" page, user can conduct RIP global relative parameters configuration.

Operation Path

Open in order: "Route Configuration > RIP Configuration > RIP Global Configuration".

Interface Description

RIP global configuration interface as follows:

The main element configuration description of RIP global configuration interface:

Interface Element	Discription
Enable	RIP function enable switch. After enabling, the RIP related parameter configuration will appear.
RIP Version	<p>RIP version drop-down list, the default version is RIP-2, the options of version are as follows:</p> <ul style="list-style-type: none"> 1: RIP-1 is Classful Routing Protocol, it only supports releasing protocol message via broadcast mode, only natural network segments such as A, B and C can be identified. 2: RIP-2 is a non-classified routing protocol, which is extended on the basis of RIP-1. <p>Note: Interface can only send/receive data packets of the RIP version configured.</p>
Assign default route	The default route with the destination address of 0.0.0.0 is assigned to RIP routing database, which is disabled by default. The options are as follows:

Interface Element	Discription
	<ul style="list-style-type: none"> • Enable; • Disable.
Metric	The metric is equal to the number of devices from this route to the destination route, with a default value of 1 and a value range of 1-16. Hops greater than or equal to 16 are defined as infinite, i.e. the destination network or host is unreachable.
Distance	RIP route management distance, the default distance is 120, the value range is 1-255. When there are routes from two different routing protocols to the same destination, the smaller the management distance value of the routing protocol is, the more reliable the route obtained by the protocol is.
Update time	<p>Routing information update time. When the timer timeout, immediately send update message, update messages are sent every 30 seconds by default. Value range is 5-2147483647 seconds.</p> <p>Note: When the routing information changes, the trigger update message is immediately sent to the neighbor device instead of waiting for the update timer timeout, thus avoiding the routing loop.</p>
Invalid time	If no routing update message is received from the neighbor within the invalid time, the route is considered unreachable. By default it is 180 seconds, value range is 5-2147483647 seconds.
Invalid retention time	If the unreachable route does not receive an update message from the same neighbor before the invalid retention timer countdown ends, the route will be completely deleted from the RIP routing table. By default it is 120 seconds, value range is 5-2147483647 seconds.
Redistribution	<p>To reallocate routes learned from other routing protocols to RIP, options are as follows:</p> <ul style="list-style-type: none"> • connected: direct connection routing. • static: static route; • ospf: OSPF route. • bgp: BGP border gateway protocol.
Set	Click the “Set” button to save and validate the configuration of RIP related parameters.

7.4.2 RIP Network Setting

Function Description


On the “RIP Network Configuration” page, user can configure the RIP network address.

Operation Path

Open in order: "Route Config > RIP Config > RIP Network Setting".

Interface Description

RIP network setting interface as follows:

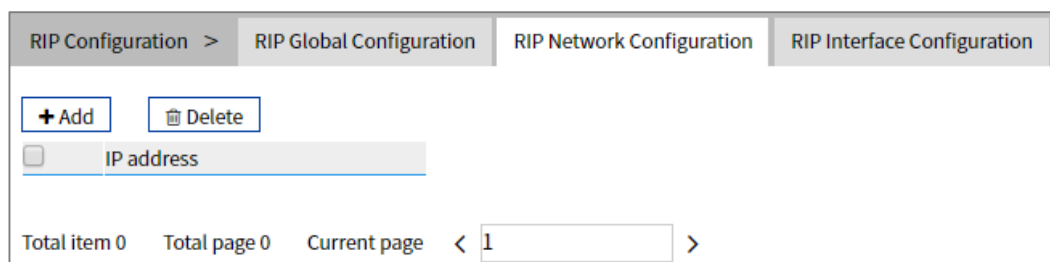

The main element configuration description of RIP global configuration interface:

Interface Element	Discription
Add	Click the “Add” button to specify the IP address of the network interface to enable RIP, such as 35.0.0.0/8.
Delete	Check the network entry to be deleted, and then click the “Delete” button to delete the specified network entry.
IP Address	Displays IP address information of the configured network interface.

7.4.3 RIP Interface Configuration

Function Description

On the "RIP Interface Configuration" page, user can conduct RIP network parameter configuration.

Operation Path

Open in order: "Route Configuration > RIP Configuration > RIP Interface Configuration".

Interface Description

RIP interface configuration interface as follows:

Interface	Split horizon	Send version	Receive version
<input type="checkbox"/> vlanif1	split-horizon	none	none
<input type="checkbox"/> vlanif2	split-horizon	none	none

Total item 2 Total page 1 Current page < 1 >

The main element configuration description of interface configuration interface:

Interface Element	Discription
Interface	RIP interface information
Split horizon	<p>Horizontal partition. Options are as follows:</p> <ul style="list-style-type: none"> • None; • Split-horizon; • Poison-reverse. <p>Note: Route that RIP learns from an interface, it won't be sent from the interface to neighbor router. It can not only reduce bandwidth consumption but also prevent routing loops.</p>
Send version	<p>RIP protocol version of sending data, options as follows:</p> <ul style="list-style-type: none"> • None; • 1; • 2; • 1 and 2; • 1-compatible.
Receive version	<p>RIP protocol version of receiving data, options as follows:</p> <ul style="list-style-type: none"> • None; • 1; • 2; • 1 and 2.

8 Advanced Configuration

8.1 DHCP Configuration

DHCP(Dynamic Host Configuration Protocol) is usually applied to large LAN environment. Its main functions are centralized management and IP address distribution, which enables the host in the network to acquire IP address, Gateway address, DNS server address dynamically and improve the usage of addresses.

8.1.1 DHCP Switch

Function Description


On the "DHCP Switch" page, user can enable/disable DHCP.

Operation Path

Open in order: "Advanced Configuration > DHCP Configuration > DHCP Switch".

Interface Description

DHCP switch configuration interface as follows:

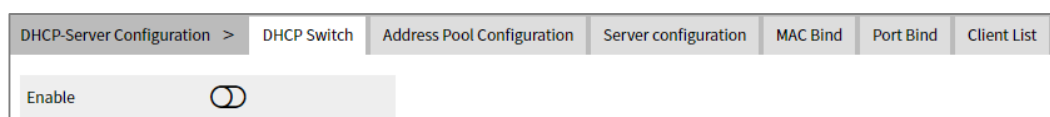

The screenshot shows a web interface for DHCP configuration. At the top, there is a breadcrumb trail: "DHCP-Server Configuration > DHCP Switch > Address Pool Configuration > Server configuration > MAC Bind > Port Bind > Client List". Below this, there is a section for the "DHCP Switch" configuration. It contains a label "Enable" followed by a toggle switch that is currently in the "off" position, represented by a circle with a vertical line through it.

The main element configuration description of DHCP switch configuration interface.

Interface Element	Discription
Enable	After enabling the switch, set the device as a DHCP server by setting static allocation address table, the device can

Interface Element	Discription
	distribute IP address to devices connected to it.

8.1.2 DHCP Pool Configuration

After user defines DHCP range and exclusion range, surplus addresses constitute an address pool; addresses in the address pool can be dynamically distributed to hosts in network. Address pool is valid only for the method of automated IP acquisition; manual IP configuration can ignore this option only if conforming to the rules.

DHCP server chooses and distributes IP address and other relative parameters for client from address pool.

DHCP server adopts tree structure: Tree root is the address pool of natural network segment. Branch is the subnet address pool of the network segment. Leaf node is the manually binding client address. Same level address pool order is decided by the configuration order. This kind of tree structure has realized the inheritance of configuration, that is, subnet configuration inherits the configuration of natural network segment, and client configuration inherits the subnet configuration. Therefore, as for some common parameters (such as DNS server address), user only needs to configure in the natural network segment or subnet. Specific inheritance situation as follows:

1. When the parent-child relationship is established, sub address pool will inherit the existing configuration of parent address pool.
2. After the parent-child relationship is established, parent address pool is configured, sub-address pool will inherit or not, two situations as follows:
 - If the child address pool doesn't include the configuration, it will inherit the configuration of parent address pool;
 - If the child address pool has included the configuration, it won't inherit the configuration of parent address pool.

Function Description

On the "DHCP Pool Config" page, user can add, delete the address pool and look over the configuration information of address pool.

Operation Path

Open in order: "Advanced Configuration > DHCP Configuration > Pool Configuration".

Interface Description

DHCP address pool configuration interface as follows:

DHCP-Server Configuration >		DHCP Switch	Address Pool Configuration	Server configuration	MAC Bind	Port Bind	Client List
<div> <input type="button" value="+ Add"/> <input type="button" value="Delete"/> </div>							
<input type="checkbox"/>	Address pool name	Assigned segment	Lease time	Default gateway	Assigned IP range	Operation	

The main element configuration description of DHCP pool configuration interface:

Interface Element	Discription
Address pool name	The name of address pool, up to 32 characters.
Assigned segment	Address pool distributes the IP address network segment of client, for example: 192.168.0.1/24.
Lease time	IP address utilization valid time of client, format: day, hour, minute, range is 0-30 day 0-24h 0-60m which are separated by space. Note: When the time of ip address obtained by dhcp client reaches the lease time, it needs to renew it otherwise the ip address would be invalid and dhcp client needs to request ip address again.
Default gateway	Default client gateway address, example: 192.168.1.0/24
Assigned IP range	The lowest address and the highest address in the DHCP address pool. The address that belongs to the range could be distributed effectively.
Operation	Click "Edit" button to modify the information of address pool. Click "Delete" under "operation" to delete the corresponding address pool entry directly.
Add	Click "add" button to add the information of address pool.
Delete	Check address pool entry, click "delete" button to delete address pool information.

8.1.3 Server Configuration

Function Description

On the "Address Pool Server Config" page, user can add, delete DNS/WINS/Log Server Address Pool.

Operation Path

Open in order: "Advanced Configuration > DHCP Configuration > Server Configuration".

Interface Description

Server configuration interface as follows:

DHCP-Server Configuration > DHCP Switch Address Pool Configuration Server configuration MAC Bind Port Bind Client List

+ Add

Type	IP	Operation
DNS server		Delete
WINS server		Delete
Log server		Delete

The main element configuration description of server configuration interface:

Interface Element	Discription
Add	Click the "Add" button to configure IP address pools for DNS servers, WINS servers, and log servers, with three IP addresses per server.
Type	<p>Three kinds of address pool servers are supported, as shown below:</p> <ul style="list-style-type: none"> DNS server: parse the domain name to be visited to an IP address, realizing domain name access network. WINS server: parse the NetBIOS host name using the Windows Microsoft operating system to an IP address. Log server.
IP	Server address pool, which supports up to three different server IP addresses.
Operation	Click "Delete" under "operation" to delete the corresponding server address pool.

8.1.4 MAC Binding

Function Description

On the "MAC binding" page, users can bind the IP address assigned by the address pool to the MAC address of the device.

Operation Path

Open in order: "Advanced Configuration > DHCP Server Configuration > MAC Binding".

Interface Description

The MAC binding configuration interface is as follows:

DHCP-Server Configuration > DHCP Switch > Address Pool Configuration > Server configuration > MAC Bind > Port Bind > Client List

+ Add Delete

Address pool name	IP address	MAC Address	Operation
-------------------	------------	-------------	-----------

Total item 0 Total page 0 Current page < 1 >

The main element configuration description of MAC binding interface:

Interface Element	Discription
Add	Click the "Add" button to add a static binding between the IP address assigned by the address pool and the MAC address of the device.
Delete	After checking the entry, click the "Delete" button to delete the binding of the corresponding IP address and MAC address.
Address pool name	Corresponding list name of DHCP address pool.
IP Address	IP addresses distributed by DHCP address pool, IP addresses obtained by this MAC address.
MAC address	The MAC address information of this device.
Operation	Click "Delete" under "operation" to delete this MAC binding.

8.1.5 Port Binding

Function Description

On the "Port binding" page, users can bind the relationship of IP addresses assigned by ports. Device A enables DHCP Server function and sets 2 static distribution address tables: 192.168.1.19 corresponding port is 1; 192.168.1.20 corresponding port is 2. After device B enables IP address automated acquisition function, if device A is connected to device B via port 1, device B can automatically gain IP address 192.168.1.19; If device A is connected to device B via port 2, device B can automatically gain IP address 192.168.1.20.

Operation Path

Open in order: "Advanced Config > DHCP Server Config > Port binding".

Interface Description

Port binding configuration interface as follows:

The main element configuration description of port binding interface:

Interface Element	Discription
Add	Click "Add" button to add a static binding between IP address allocated by address pool and layer 2 port.
Delete	After checking the entry, click the "Delete" button to delete the binding between the corresponding IP address and the layer 2 port.
Address pool name	Corresponding list name of address pool.
IP Address	IP address that DHCP address pool distributes, the IP addresses that client gains in the port.
Port	The corresponding port name of the device Ethernet port.
Operation	Click "Delete" under "Operation" to delete this port binding.

8.1.6 Client List

Function Description

On the "Client List" page, user can look over the information of DHCP client.

Operation Path

Open in order: "Advanced Configuration > DHCP Configuration > Client List".

Interface Description

Client list interface as follows:

DHCP-Server Configuration >	DHCP Switch	Address Pool Configuration	Server configuration	MAC Bind	Port Bind	Client List
IP address	MAC Address	Start time	End time	Remaining time		
Total item 0	Total page 0	Current page	< 1	>		

The main element configuration description of client list interface:

Interface Element	Discription
IP Address	IP address of DHCP client-side device.
MAC address	MAC address of DHCP client device.
Start time	Valid start time of DHCP client.
End time	Valid end time of DHCP client.
Remaining time	Valid remaining time of DHCP client.

8.2DHCP-Snooping Configuration

The function of DHCP Snooping

DHCP Snooping is a security feature of DHCP, which has the following functions:

- 5 Ensure that clients get IP addresses from legitimate servers.

If there is a pseudo-DHCP server set up privately in the network, it may cause the DHCP client to get the wrong IP address and network configuration parameters, and can't communicate normally. To enable DHCP clients to obtain IP addresses

through legitimate DHCP servers, DHCP Snooping security mechanism allows ports to be set as trusted ports and untrusted ports:

- The trust port forwards the received DHCP message normally.
- Discard the DHCP-ACK and DHCP-offer packets that the port does not trust after receiving the DHCP-ACK and DHCP-offer packets in response to the DHCP server.

The ports connecting DHCP server and other DHCP Snooping devices need to be set as trusted ports, and other ports should be set as untrusted ports, so as to ensure that DHCP clients can only obtain IP addresses from legitimate DHCP servers, while pseudo-DHCP servers erected privately cannot assign IP addresses to DHCP clients.

6 Record the corresponding relationship between IP address and MAC address of DHCP client

DHCP Snooping records DHCP Snooping entries by listening to DHCP-REQUEST messages and DHCP-ACK messages received by trusted ports, including MAC addresses of clients, acquired IP addresses, ports connected with DHCP clients and VLAN to which the ports belong. Using this information, you can achieve:

- ARP Detection: according to the DHCP Snooping table entry, judge whether the user sending ARP message is legal or not, so as to prevent ARP attack by illegal users.
- IP Source Guard: filter the messages forwarded by the port by dynamically obtaining DHCP Snooping entries to prevent illegal messages from passing through the port.

Option 82

Option 82 is called the relay agent information option and records the location information of the DHCP client. When the DHCP relay or DHCP Snooping device receives the request message sent by the DHCP client to the DHCP server, it adds Option 82 to the message and sends it to the DHCP server.

Administrators can obtain location information of DHCP client from Option 82, so as to locate DHCP client and realize control over security and billing of client. Servers that support Option 82 can also make allocation policies for IP addresses and other parameters based on information about that Option, providing a more flexible address allocation scheme.

Option 82 can contain up to 255 sub-option. If Option 82 is defined, define at least one sub-option. Currently, the DHCP relay supports only three sub-options: Sub-Option 1 (Circuit ID, Circuit ID sub-option) and Sub-option 2 (Remote ID, Remote ID sub-option) and sub-option 3 (Subscriber ID, Subscriber ID sub-option).

8.2.1 Global Configuration

Function Description


On the "Global Configuration" page, user can enable/disable DHCP Snooping.

Operation Path

Open in order: "Advanced Configuration > DHCP-Snooping Configuration > Global Configuration".

Interface Description

Global configuration interface is as follows:

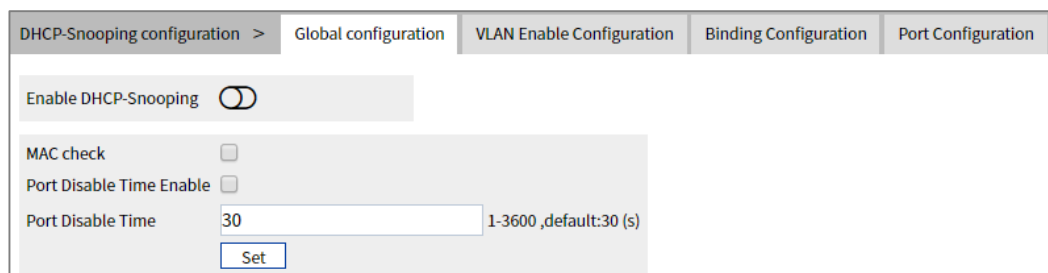

The main element configuration description of global configuration interface:

Interface Element	Discription
Enable DHCP-snooping	Swipe to the right to enable DHCP-Snooping.
MAC check	Enable DHCP client MAC address checking. Note: Enabling DHCP-Snooping will automatically turn on DHCP client MAC address checking.
Port Disable Time Enable	When the DHCP message rate of a port is lower than the configured rate of the port, the port's port disable duration will be disabled.
Port Disable Time	Port disable time, the input range is 1-3600, the unit is s, and the default is 30s.

8.2.2 VLAN Enable Configuration

Function Description

On the "VLAN Enable Configuration" page, user can specify that the VLAN to enable DHCP Snooping.

Operation Path

Open in order: "Advanced Configuration > DHCP-Snooping Configuration > Vlan enable Configuration".

Interface Description

The Vlan enable configuration interface is as follows:

Main elements configuration description of Vlan enabled configuration interface:

Interface Element	Discription
VLAN ID	The VLAN number.
DHCP Snooping	Enable status of DHCP Snooping. <ul style="list-style-type: none">• enable• disalbe
Operation: delete	Delete the current VLAN enable entry

8.2.3 Binding Configuration

Function Description

On the Binding Configuration page, user can bind ports, IP addresses and MAC addresses.

Operation Path

Open in order: "Advanced Configuration > DHCP-Snooping Configuration > Binding Configuration".

Interface Description

The binding configuration interface is as follows:

Main elements configuration description of Binding configuration interface:

Interface Element	Discription
VLAN ID	Binding VLAN ID information, for example: 1-4096.
Port	The corresponding port name of the device Ethernet port.
IP	Binding IP address, for example: 192.168.1.1.
MAC	Binding MAC address, for example: 0001-0001-0001.
Type	Port type: <ul style="list-style-type: none"> Static Dynamic
Aging time	Port aging time.
Operation: edit	Modify the port binding information.
Operation: delete	Delete the port binding configuration of the current row.

8.2.4 Port Configuration

Function Description

On the port configuration page, user can configure DHCP Snooping port information.

Operation Path

Open in order: "Advanced Configuration > DHCP-Snooping Configuration > Port Configuration".

Interface Description

Check port configuration interface as below:

DHCP-Snooping configuration >											
Global configuration VLAN Enable Configuration Binding Configuration Port Configuration											
Config											
	Port	Trust Enable	Message Rate	Option 82 Check	Option 82 Strategy	Circuit Type	Circuit ID	remote Type	Remote ID	Subscriber Type	Subscriber ID
<input type="checkbox"/>	ge1	disable	1000	disable	-	-	-	-	-	-	-
<input type="checkbox"/>	ge2	disable	1000	disable	-	-	-	-	-	-	-
<input type="checkbox"/>	ge3	disable	1000	disable	-	-	-	-	-	-	-
<input type="checkbox"/>	ge4	disable	1000	disable	-	-	-	-	-	-	-
<input type="checkbox"/>	ge5	disable	1000	disable	-	-	-	-	-	-	-
<input type="checkbox"/>	ge6	disable	1000	disable	-	-	-	-	-	-	-
<input type="checkbox"/>	ge7	disable	1000	disable	-	-	-	-	-	-	-
<input type="checkbox"/>	ge8	disable	1000	disable	-	-	-	-	-	-	-
<input type="checkbox"/>	ge9	disable	1000	disable	-	-	-	-	-	-	-
<input type="checkbox"/>	ge10	disable	1000	disable	-	-	-	-	-	-	-
<input type="checkbox"/>	ge11	disable	1000	disable	-	-	-	-	-	-	-
<input type="checkbox"/>	ge12	disable	1000	disable	-	-	-	-	-	-	-
<input type="checkbox"/>	ge13	disable	1000	disable	-	-	-	-	-	-	-
<input type="checkbox"/>	ge14	disable	1000	disable	-	-	-	-	-	-	-
<input type="checkbox"/>	ge15	disable	1000	disable	-	-	-	-	-	-	-
<input type="checkbox"/>	ge16	disable	1000	disable	-	-	-	-	-	-	-
<input type="checkbox"/>	ge17	disable	1000	disable	-	-	-	-	-	-	-
<input type="checkbox"/>	ge18	disable	1000	disable	-	-	-	-	-	-	-
<input type="checkbox"/>	ge19	disable	1000	disable	-	-	-	-	-	-	-
<input type="checkbox"/>	ge20	disable	1000	disable	-	-	-	-	-	-	-
<input type="checkbox"/>	ge21	disable	1000	disable	-	-	-	-	-	-	-
<input type="checkbox"/>	ge22	disable	1000	disable	-	-	-	-	-	-	-
<input type="checkbox"/>	ge23	disable	1000	disable	-	-	-	-	-	-	-
<input type="checkbox"/>	ge24	disable	1000	disable	-	-	-	-	-	-	-
<input type="checkbox"/>	xe1	disable	1000	disable	-	-	-	-	-	-	-
<input type="checkbox"/>	xe2	disable	1000	disable	-	-	-	-	-	-	-
<input type="checkbox"/>	xe3	disable	1000	disable	-	-	-	-	-	-	-
<input type="checkbox"/>	xe4	disable	1000	disable	-	-	-	-	-	-	-

The main element configuration description of global configuration interface:

Interface Element	Discription
Port	The corresponding port name of the device Ethernet port.
Trust enable	Port trust enable, and the trust port forwards the received DHCP message normally.
Message rate	Message transmission speed of port, the input range is 10-1000 (s), and the default value is 1000s.
Option 82 check	When Option 82 check is turned on, the location information of DHCP client can be obtained from Option 82, so as to locate DHCP client.
Option 82 strategy	Option 82 dealing strategy, options as follows: <ul style="list-style-type: none"> Drop: Discard messages. Keep: Adopt different modes to fill Option 82, replace prime Option 82 in message and forward, filling modes will be described as below.

Interface Element	Discription
	<ul style="list-style-type: none"> Replace: Keep Option 82 in messages unchanged and forward.
circuit type	Circuit ID sub-option filling type, options as follows: <ul style="list-style-type: none"> Normal: Normal mode; String: Detailed mode.
Circuit ID	Circuit ID sub-option filling content, support ASCII and HEX mode. Note: <ul style="list-style-type: none"> The input length is limited between 2 and 64; When Hex is selected, the input content is a combination of uppercase and lowercase letters and numbers. When ASCII is selected, the content is not limited.
Remote type	Remote ID sub-option filling type, options as follows: <ul style="list-style-type: none"> Normal: Normal mode; Sysname: Directly adopt device system name to fill Option 82; String: Detailed mode.
Remote ID	The filling content of the remote ID sub-option supports ASCII and HEX formats. Note: <ul style="list-style-type: none"> The input length is limited between 2 and 64; When Hex is selected, the input content is a combination of uppercase and lowercase letters and numbers. When ASCII is selected, the content is not limited.
Subscriber type	User option fill type, which supports ASCII format.
Subscriber ID	The filling content of Subscriber ID sub-option supports ASCII and HEX formats. Note: <ul style="list-style-type: none"> The input length is limited between 2 and 64; When Hex is selected, the input content is a combination of uppercase and lowercase letters and numbers. When ASCII is selected, the content is not limited.

8.3 DHCP-Relay Configuration

Function Description

On the "DHCP-Relay Configuration" page, user can configure the relevant parameters of Relay port.

Operation Path

Open in order: "Advanced Configuration > DHCP-Relay Configuration".

Interface Description

DHCP-Relay configuration interface is as follows:

DHCP-Relay Configuration						
<input type="button" value="Clear config"/>						
<input type="checkbox"/>	Interface	Enable	Option82	Server IP	Operation	
<input type="checkbox"/>	vlanif1	disable	disable		Edit	Delete
<input type="checkbox"/>	vlanif2	disable	disable		Edit	Delete
Total item 2		Total page 1		Current page < 1 >		

Main element configuration description of DHCP-Relay configuration interface:

Interface Element	Discription
Interface	Interface Name.
Enable	Enable switch, options as follows: <ul style="list-style-type: none"> • Enable: enable the dhcp relay function of the interface; • Disable: disable the dhcp relay function of the interface.
Option82	Option82 function, options as follows: <ul style="list-style-type: none"> • - Enable: enable the option 82 function of dhcp relay; • - Disable: disable the option 82 function of dhcp relay. Note: When the option82 function is enabled, the relay message sent by relay process would carry option 82.
Server IP	IP address information of proxy server.
Operation: edit	Click "edit" button to set the parameters of the switch and option82.
Operation: delete	Check Relay interface configuration entry, click "delete" to delete Relay interface configuration.

8.4 LLDP Configuration

LLDP is a layer 2 topology discovery protocol, its basic principle is: Devices in network send the status information message to adjacent device, and each port in the device stores its own information, if there is change in the status of local device, it can also send updated information to the adjacent device directly connected to it. Adjacent devices will store the information in standard SNMP MIB bank. The network management system could inquiry the connection status of current layer 2 from SNMP MIB bank. It should be noted that LLDP is only a remote device status information discovery protocol, which cannot complete the network device configuration, port control and other functions.

8.4.1 Current configuration

Function Description

On the "Current Config" page, user can configure the relevant parameters of LLDP.

Operation Path

Open in order: "Advanced Configuration > LLDP Configuration > Current Configuration".

Interface Description

The current configuration interface is as follows:

LLDP Configuration > Current Configuration Port Configuration Neighbor Information

Enable ☐

Transmission period 30 Range:5-300,Unit: s,Default:30

Set

Main elements configuration description of the current configuration interface:

Interface Element	Discription
Enable	The radio box of LLDP function status, check to enable.
Transmission period	LLDP transmission period, range 5-300, unit: second, default: 30 Note:

Interface Element	Discription
	When no device status changes, the device periodically sends LLDP packets to its adjacent nodes. The interval is called the period for sending LLDP packets.
Set	Click "Set" button to operate.

8.4.2 Port Configuration

Function Description


On the "Port Config" page, user can configure the sending and receiving mode and management address of the port.

Operation Path

Open in order: "Advanced Configuration > LLDP Configuration > Port Configuration".

Interface Description

Check port configuration interface as below:

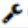LLDP Configuration > Current Configuration Port Configuration Neighbor Information				
 Config				
<input type="checkbox"/>	Local port	Port status	Port Configuration	Management IP
<input type="checkbox"/>	ge1	up	txrx-enable	0.0.0.0
<input type="checkbox"/>	ge2	down	txrx-enable	0.0.0.0
<input type="checkbox"/>	ge3	down	txrx-enable	0.0.0.0
<input type="checkbox"/>	ge4	down	txrx-enable	0.0.0.0
<input type="checkbox"/>	ge5	down	txrx-enable	0.0.0.0
<input type="checkbox"/>	ge6	down	txrx-enable	0.0.0.0
<input type="checkbox"/>	ge7	down	txrx-enable	0.0.0.0
<input type="checkbox"/>	ge8	down	txrx-enable	0.0.0.0
<input type="checkbox"/>	ge9	down	txrx-enable	0.0.0.0
<input type="checkbox"/>	ge10	down	txrx-enable	0.0.0.0
<input type="checkbox"/>	ge11	down	txrx-enable	0.0.0.0
<input type="checkbox"/>	ge12	down	txrx-enable	0.0.0.0
<input type="checkbox"/>	ge13	down	txrx-enable	0.0.0.0
<input type="checkbox"/>	ge14	down	txrx-enable	0.0.0.0
<input type="checkbox"/>	ge15	down	txrx-enable	0.0.0.0
<input type="checkbox"/>	ge16	down	txrx-enable	0.0.0.0
<input type="checkbox"/>	ge17	down	txrx-enable	0.0.0.0
<input type="checkbox"/>	ge18	down	txrx-enable	0.0.0.0
<input type="checkbox"/>	ge19	down	txrx-enable	0.0.0.0
<input type="checkbox"/>	ge20	down	txrx-enable	0.0.0.0
<input type="checkbox"/>	ge21	down	txrx-enable	0.0.0.0
<input type="checkbox"/>	ge22	down	txrx-enable	0.0.0.0
<input type="checkbox"/>	ge23	down	txrx-enable	0.0.0.0
<input type="checkbox"/>	ge24	down	txrx-enable	0.0.0.0
<input type="checkbox"/>	xe1	down	txrx-enable	0.0.0.0
<input type="checkbox"/>	xe2	down	txrx-enable	0.0.0.0
<input type="checkbox"/>	xe3	down	txrx-enable	0.0.0.0
<input type="checkbox"/>	xe4	down	txrx-enable	0.0.0.0

The main element configuration description of port configuration interface:

Interface Element	Discription
Local port	The corresponding port name of the device Ethernet port.
Port status	<p>The options of LLDP working modes of device port are as follows:</p> <ul style="list-style-type: none"> tx-enable: work mode is Tx, it only transmits LLDP message and not receive it. rx-enable: work mode is Rx, it only receives LLDP message and not transmit it. txrx-enable: work mode is TxRx, it transmits LLDP

Interface Element	Discription
	<p>message as well as receive it.</p> <ul style="list-style-type: none"> Disable: work mode is Disable, it neither transmits nor receives LLDP message. <p>Note: When global LLDP is enabled, the work mode of LLDP is TxRx by default.</p>
Management IP	<p>Corresponding LLDP management IP address of the port.</p> <p>Note:</p> <ul style="list-style-type: none"> LLDP management address is the address to be marked and managed by network management system. Management address can definitely mark a device, which is beneficial to the drawing of network topology and network management. Management address is encapsulated in Management Address TLV field of LLDP message and sent to adjacent nodes. The management address released by the port in the LLDP message defaults to the main IP address of the smallest VLAN of the VLANs this port is in. If the VLAN is not configured with a main IP address, it will be 0.0.0.0.

8.4.3 Neighbor Information

Function Description

On the "Neighbors Information" page, user can look over the relative information of neighbors.

Operation Path

Open in order: "Advanced Configuration > LLDP Configuration > LLDP Neighbors".

Interface Description

Neighbor information interface as follows:

LLDP Configuration >	Current Configuration	Port Configuration	Neighbor Information	
Local port	Chassis ID	Remote port	System name	Management IP

Main elements configuration description of neighbor information interface:

Interface Element	Discription
Local port	Local port number of local switch connected to adjacent devices.
Chassis ID	Bridge MAC address of neighbor device or port.
Remote port	Port number of neighbor device.
System Name	System name of the neighbor device.
Management IP	Management IP address of neighbor device or port.

8.5SNMP Configuration

Now, the broadest network management protocol in network is SNMP (Simple Network Management Protocol). SNMP is the industrial standard that is widely accepted and comes into use, it's used for guaranteeing the management information transmission between two points in network, and is convenient for network manager search information, modify information, locate faults, complete fault diagnosis, conduct capacity plan and generate a report. SNMP adopts polling mechanism and only provides the most basic function library, especially suit for using in minitype, rapid and low price environment. SNMP implementation is based on connectionless transmission layer protocol UDP, therefore, it can achieve barrier - free connection to many other products.

8.5.1 SNMP Switch

Function Description


On the "SNMP Switch" page, user can enable/disable SNMP function.

Operation Path

Open in order: "Advanced Configuration > SNMP Configuration > SNMP Switch".

Interface Description

SNMP switch configuration interface as follows:

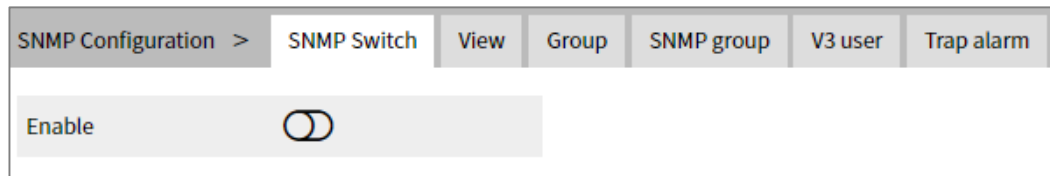

The main element configuration description of SNMP switch configuration interface.

Interface Element	Discription
Enable	SNMP enable switch, which is enabled by default Note: If the agent side has opened, the SNMP server can't be closed.

8.5.2 View

Function Description


On the "View" page, user can add/delete SNMP view.

Operation Path

Open in order: "Advanced Config > SNMP Config > View".

Interface Description

View interface as below:

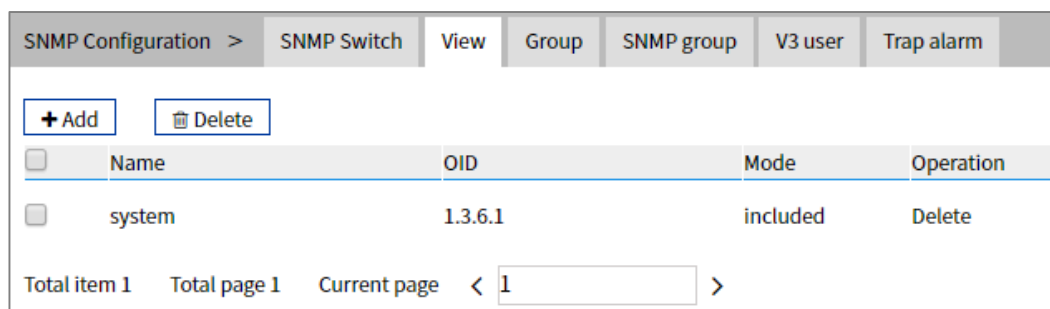

The main element configuration description of view interface:

Interface Element	Note
Name	SNMP view name definition, support 32 characters input. Notice: Name can't be empty or contain "&", ";", "\", "/" or "/".
OID	Node location information of MIB tree where the device resides. Discription:

Interface Element	Note
	<ul style="list-style-type: none"> OID object identifier, a component node of MIB, uniquely identified by a string of numbers that represent the path. The information of OID could be viewed via the third-party software MG-SOFT MIB Browser.
Mode	Node OID dealing method, options as below: <ul style="list-style-type: none"> Included: It contains all objects under the node subtree; Excluded: Eliminate all objects beyond the node subtree.
Operation	Check the entry and click the "Delete" button to delete it.

8.5.3 Community

Function Description

On the "Community" page, user can add/delete SNMP community. Define MIB view that community name can access, set MIB object access privilege of community name as read-write privilege or read-only privilege.

Operation Path

Open in order: "Advanced Config > SNMP Config > Community".

Interface Description

Community interface as below:

SNMP Configuration > SNMP Switch View Group SNMP group V3 user Trap alarm				
<input type="button" value="+ Add"/> <input type="button" value="Delete"/>				
<input type="checkbox"/>	Name	View name	Read-write type	Operation
<input type="checkbox"/>	public	system	read-only	Delete
Total item 1 Total page 1 Current page < 1 >				

The main element configuration description of community interface:

Interface Element	Discription
Name	Group name, including numbers or letters, with a length of no more than 32 characters.

Interface Element	Discription
View Name	SNMP view name definition, which has been configured in the View page.
Read-write type	Read-write privilege view name selection, options:.. <ul style="list-style-type: none"> Read only Read and write
Operation	You can check this item and click the "Delete" button to delete it.

8.5.4 SNMP Group

Function Description

On the "SNMP Group" page, user can configure a new SNMP group and set the secure mode and corresponding SNMP view of the SNMP group.

Operation Path

Open in order: "Advanced Configuration > SNMP Configuration > SNMP Group".

Interface Description

SNMP Group interface as follows:

Main elements configuration description of SNMP Group interface:

Interface Element	Discription
Name	SNMP group name, ranging from 1 to 32 bytes.
Encryption mode	Whether to authenticate and encrypt the message, values: <ul style="list-style-type: none"> auth: indicates that the message is authenticated but not encrypted; noauth: indicates that the message is neither

Interface Element	Discription
	authenticated nor encrypted; <ul style="list-style-type: none">• priv: indicates that the message is authenticated and encrypted.
Read view	Specify the read view of the group. Note: The view must be configured in the View interface.
Write View	Specify the write and read view of the group Note: The view can be matched or not. To configure, the view must be configured by the View interface.
Notification view	Specify the notification view of the group. Note: The view can be matched or not. To configure, the view must be the view configured in the View interface.
Operation	You can check this item and click the "Delete" button to delete it.

8.5.5 V3 User

Function Description

SNMPv3 adopts User-Based Security Model (USM) authentication mechanism. Network manager can configure authentication and encryption function. Authentication is used to verify the validity of the packet sender and prevent unauthorized users from accessing it. Encryption encrypts the transmission packet between NMS and Agent to prevent eavesdropping. It adopts authentication and encryption function to provide higher security for the communication between NMS and Agent.

Operation Path

Open in order: " Advanced Config > SNMP Config > V3 User".

Interface Description

V3 user interface as follows:

SNMP Configuration > SNMP Switch View Group SNMP group V3 user Trap alarm

+ Add

Delete

<input type="checkbox"/>	Username	Group name	Safe mode	Auth mode	Encryption mode	Operation
Total item 0 Total page 0 Current page < 1 >						

The main element configuration description of V3 user interface:

Interface Element	Discription
Username	SNMP v3 user name definition, can only contain numbers, letters, or @_! , no longer than 32 characters.
Group Name	Group name, ranging from 1 to 32 bytes. Note: Group name must be created snmp group, and only created group can create SNMP v3 users.
Safe Mode	Whether to authenticate and encrypt the message, values: <ul style="list-style-type: none"> auth: indicates that the message is authenticated but not encrypted; noauth: indicates that the message is neither authenticated nor encrypted; priv: indicates that the message is authenticated and encrypted.
Auth mode	Authentication mode type, acceptable value: <ul style="list-style-type: none"> Md5: Information abstract algorithm 5; Sha: Secure hash algorithm.
Encryption mode	V3 user data encryption algorithm, options as follows: <ul style="list-style-type: none"> Des: Adopt data encryption algorithm; Aes: Adopt advanced encryption standard.
Operation	You can check this item and click the "Delete" button to delete it.

V3 User: “Add” Interface Description

The screenshot shows a web-based configuration window titled 'V3 User: "Add"'. It contains the following elements:

- Username:** A text input field.
- Group name:** A dropdown menu.
- V3:** A checkbox.
- auth:** A checkbox.
- Auth info:** A dropdown menu with 'md5' selected.
- Auth password:** A text input field.
- priv:** A checkbox.
- Encrypted info:** A dropdown menu with 'des' selected.
- Encrypted password:** A text input field.
- Set:** A button at the bottom center.

The main element configuration description of V3 user “add” interface:

Interface Element	Discription
Username	SNMP v3 user name definition, can only contain numbers, letters, or @_! , no longer than 32 characters.
Group name	The drop-down list of SNMP group name.
V3	It refers to SNMP V3 version user, and defaults to V1 version user.
auth	Indicate that security mode requires authentication. If do not check this parameter, the default is no authentication, no encryption mode.
Auth info	Authentication information type, acceptable values: <ul style="list-style-type: none"> Md5: Information abstract algorithm 5; Sha: Secure hash algorithm.
Auth Password	Authentication password, character string, length greater than or equal to 8 bytes.
priv	Indicate that security mode requires encryption.
Encrypted info	V3 user data encryption algorithm, options as follows: <ul style="list-style-type: none"> Des: Adopt data encryption algorithm; Aes: Adopt advanced encryption standard.
Encrypted Password	Encrypted password, character string, length greater than

Interface Element	Discription
	or equal to 8 bytes.

8.5.6 Trap alarm

Function Description

Base on TCP/IP protocol, SNMP usually adopts UDP port 161 (SNMP) and 162 (SNMP-traps), SNMP protocol agent exists in the network device and adopts information specific to the device (MIBs) as the device interface; these network devices can be monitored or controlled via Agent. When a trap event occurs, the message is transmitted by SNMP Trap. At this point, an available trap receiver can receive the trap message.

Operation Path

Open in order: "Advanced Config > SNMP Config > Trap Alarm".

Interface Description

Trap alarm interface as below:

The main element configuration description of Trap alarm interface:

Interface Element	Discription
Address	IP address of SNMP management device, used for receiving alarm information, such as PC.
Version	SNMP management device version, options as below: <ul style="list-style-type: none"> v1; v2c; Note: V3 is not supported temporarily.

Interface Element	Discription
Team name	Community name or snmpv3 user name.
Operation	You can check this item and click the "Delete" button to delete it.

8.6 RMON Configuration

RMON (Remote Network Monitoring) mainly achieves statistics and alarm functions, which are used for remote monitoring and management of management device to managed devices. Statistical function refers to that managed device can periodically or continuously keep track of all the traffic information on the network segment connected to the port, For example, the total number of packets received on a network segment in a period of time, or the total number of received super long packets. Alarm function refers to that the managed device can monitor the value of the specified MIB variable. When the value reaches the alarm threshold (such as the port rate reaches the specified value or the proportion of broadcast message reaches the specified value), it can automatically log and send Trap messages to the managed device.

8.6.1 Event

Function Description

On the "Event" page, user can add, delete or check the configuration information of event.

Operation Path

Open in order: "Advanced Config > RMON Config > Event".

Interface Description

Event group interface as below:

RMON Configuration >	Event group	Statistical group	Historical group	Alarm group			
<input type="button" value="+ Add"/> <input type="button" value="Delete"/>							
<input type="checkbox"/>	No.	Description	Type	Team name	Recent time	Owner	Operation
Total item 0 Total page 0 Current page < 1 >							

The main element configuration description of event group interface:

Interface Element	Discription
No.	Triggered event serial number when monitoring MIB object exceeds threshold value. Note: This serial number corresponds to the rising event index and falling event index set in RMON alarm configuration information.
Description	Some description information for describing the event.
Type	Event dealing method, options as below: <ul style="list-style-type: none"> log: Record the event in the log table when the event is triggered; trap: Send Trap information to management station for informing the occurring of event when the event is triggered; Log, trap: Record the event in the log table and produce a trap information when the event is triggered.
Team name	Community name of the network management station receiving the alarm information.
Recent time	The time of the last incident occurred.
Owner	The creator of the table entry.
Operation	Check the entry and click the "Delete" button to delete it.

8.6.2 Statistical

Function Description

On the "Statistical" page, user can add, delete or check the configuration information of statistical.

Operation Path

Open in order: "Advanced Config > RMON Config > Statistical".

Interface Description

Statistical group interface as below:

RMON Configuration >					
Event group		Statistical group		Historical group	
<div> <input type="button" value="+ Add"/> <input type="button" value="Delete"/> </div>					
<input type="checkbox"/>	No.	Port No.	Port name	Owner	Operation
Total item 0 Total page 0 Current page < 1 >					

The main element configuration description of statistical group interface:

Interface Element	Discription
No.	Serial number is used to identify a special application interface, when the serial number is same to the application interface serial number set before, previous configuration will be replaced.
Port No.	The counted port serial number.
Port name	The name of the port being counted.
Owner	The creator of the table entry.
Operation	Check the entry and click the "Delete" button to delete it.

8.6.3 History

Function Description

On the "History" page, user can add, delete or check the configuration information of history.

Operation Path

Open in order: "Advanced Config > RMON Config > History".

Interface Description

Historical group interface as below:

RMON Configuration > Event group Statistical group **Historical group** Alarm group

[+ Add](#) [Delete](#)

<input type="checkbox"/>	No.	Actual buckets number	Port name	Max buckets number	Sampling period	Owner	Operation
Total item 0 Total page 0 Current page < 1 >							

The main element configuration description of historical group interface:

Interface Element	Discription
No.	Serial number is used to identify a special application interface, when the serial number is same to the application interface serial number set before, previous configuration will be replaced.
Actual buckets number	Set the historical statistics capacity corresponding to the history group, ranging from 1-65535.
Port name	The recorded port name.
Max buckets number	Maximum capacity of historical statistics table supported by device.
Sampling period	The interval time of gaining statistics data each two times.
Owner	The creator of the table entry.
Operation	Check the entry and click the "Delete" button to delete it.

8.6.4 Alarm

Function Description

On the "Alarm" page, user can add, delete the alarm or check the alarm configuration information. Alarm type adopts absolute to directly monitor MIB object value; Alarm type adopts delta to monitor changes in MIB object values between two samples;

- When monitoring MIB object reaches or surpasses the rising threshold value, it will trigger corresponding event of rising event index;
- When monitoring MIB object reaches or surpasses declining threshold value, it will trigger corresponding event of declining event index;

Operation Path

Open in order: "Advanced Config > SNMP Config > Trap Alarm".

Interface Description

Trap alarm interface as below:

RMON Configuration > Event group Statistical group Historical group Alarm group

+ Add Delete

No.	State	Sampling interval	Sampling type	Alarm parameter	Alarm value	Rising edge threshold	Rising edge event	Falling edge threshold	Falling edge event	Owner	Operation
Total item 0 Total page 0 Current page < 1 >											

The main element configuration description of Trap alarm interface:

Interface Element	Discription
No.	Triggered event serial number when monitoring MIB object exceeds threshold value. Note: This serial number corresponds to the rising event index and falling event index set in RMON alarm configuration information.
State	The status of alarm list items, which is not configurable when configuring alarm list items and is VALID by default.
Sampling interval	Sampling time interval value, value range is 1-4294967295, unit: second.
Sampling Type	Two sampling methods, options as follows: <ul style="list-style-type: none"> Absolute: When alarm variable value reaches alarm threshold value, an alarm is triggered; If the second sampling is same to last sampling alarm type, alarm isn't triggered again; Delta: When alarm variable value reaches alarm threshold value during each sampling, an alarm is triggered.
Alarm parameter	The monitored MIB node supports string format instead of oid format.
Rising edge threshold	Alarm variable value, upper limit alarm, threshold value is between 1-12147483647. Note: In the rising process of alarm variable value, when the variable value surpasses rising threshold, an alarm occurs at least one time.
Rising edge event	Event index, when alarm variable value reaches or surpasses the rising event threshold value, it will activate corresponding event in event group, value range is 1-65535.
Falling edge threshold	Alarm variable value, lower limit alarm, threshold value is between 1-12147483647. Note:

Interface Element	Discription
	In the falling process of alarm variable value, when the variable value reaches falling threshold, an alarm occurs at least one time.
Falling edge event	Event index, when alarm variable value reaches or is less than the falling threshold value, it will activate corresponding event in event group, value range is 1-65535.
Owner	The creator of the table entry.
Operation	Check the entry and click the "Delete" button to delete it.

8.7 NTP Configuration

The full name of NTP protocol is Network Time Protocol. Its destination is to transmit uniform and standard time in international Internet. Specific implementation scheme is appointing several clock source websites in the network to provide user with timing service, and these websites should be able to mutually compare to improve the accuracy. It can provide millisecond time correction, and is confirmed by the encrypted way to prevent malicious protocol attacks.

Function Description

On the "NTP Config" page, user can configure the device time and NTP server information.

Operation Path

Open in order: "Advanced Configuration > NTP Configuration".

Interface Description

NTP configuration interface as follows:

The screenshot shows the 'NTP Configuration' window. It features a 'Time Zone' dropdown menu with 'UTC+8' selected and a 'Set' button. Below this is a 'Server' input field with the example 'eg: 192.168.1.1' and 'Set' and 'Cancel' buttons.

Main element configuration instructions in NTP settings interface:

Interface Element	Discription
Timezone	UTC(Universal Time Coordinated) time zone.
Server	IP address of NTP server, for example: 192.168.1.1. Note: As NTP client, the system will synchronize time with NTP server every 11 minutes.

9 System Maintenance

9.1 Configure File Management

9.1.1 Global Configuration

Function Description

On the "Current Configuration" page, user can view current configuration information.

Operation Path

Open in order: "System Management > Configuration File Settings > Current Configuration".

Interface Description

Global configuration interface is as follows:

Configuration Management >	Current Configuration	Configuration Upgrade	Restore Factory Settings
<pre>! no service password-encryption ! hostname Switch ! log stdout ! username admin123 password admin123 ! ip domain-lookup !</pre>			

9.1.2 Configuration File Update

Function Description


On the "Management File" page, user can download and upload configuration file.

Operation Path

Open in order: "System Management > Configuration File Settings > Configuration File Upgrade".

Interface Description

Configuration file upgrade interface as follows:

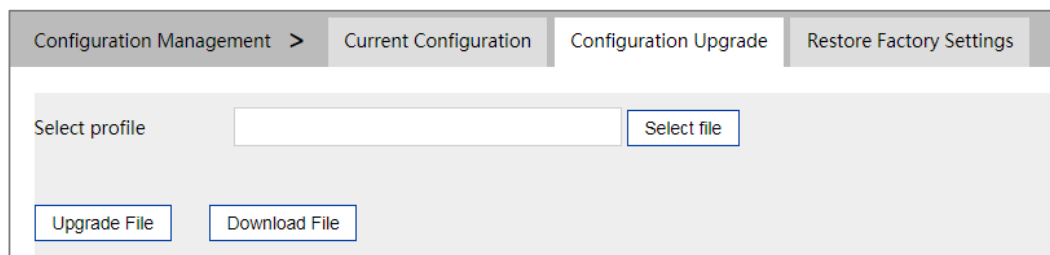

The main element configuration description of configuration file upgrade interface:

Interface Element	Discription
Select porfile	Locally uploading configuration file path, click "Select File" to select required configuration file.
Upgrade File	Upload local configuration file, format: .conf.
Download File	Download the configuration file of current device, format: .conf.

9.1.3 Restore Factory Settings

Function Description

On the "Restore Factory Settings" page, user can restore the device to default setting.

Operation Path

Open in order: "System management > Configure Management > Restore Factory Setting".

Interface Description

Restore Factory Settings interface is as follows:



The main element configuration description of restore factory settings interface:

Interface Element	Discription
Restore Factory Settings	Click the button to confirm, the device will lose all existing configuration and restore to default setting.

9.2 Alarm Configuration

Function Description

On the "Alarm Configuration" page, user can set the port alarm function. When the device port is in an abnormal state, the administrator can be informed in time, and the device state can be quickly repaired to avoid excessive loss.

Operation Path

Open in order: "System Maintenance > Alarm Configuration".

Interface Description

Alarm Configuration interface as below:

Alarm Configuration

<input type="checkbox"/>	Port	State	Alarm switch
<input type="checkbox"/>	ge1	up	disable
<input type="checkbox"/>	ge2	down	disable
<input type="checkbox"/>	ge3	down	disable
<input type="checkbox"/>	ge4	down	disable
<input type="checkbox"/>	ge5	down	disable
<input type="checkbox"/>	ge6	down	disable
<input type="checkbox"/>	ge7	down	disable
<input type="checkbox"/>	ge8	down	disable
<input type="checkbox"/>	ge9	down	disable
<input type="checkbox"/>	ge10	down	disable
<input type="checkbox"/>	ge11	down	disable
<input type="checkbox"/>	ge12	down	disable
<input type="checkbox"/>	ge13	down	disable
<input type="checkbox"/>	ge14	down	disable
<input type="checkbox"/>	ge15	down	disable
<input type="checkbox"/>	ge16	down	disable
<input type="checkbox"/>	ge17	down	disable
<input type="checkbox"/>	ge18	down	disable
<input type="checkbox"/>	ge19	down	disable
<input type="checkbox"/>	ge20	down	disable
<input type="checkbox"/>	ge21	down	disable
<input type="checkbox"/>	ge22	down	disable
<input type="checkbox"/>	ge23	down	disable
<input type="checkbox"/>	ge24	down	disable
<input type="checkbox"/>	xe1	down	disable
<input type="checkbox"/>	xe2	down	disable
<input type="checkbox"/>	xe3	down	disable
<input type="checkbox"/>	xe4	down	disable

The main element configuration description of alarm information interface:

Interface Element	Discription
Port	The corresponding port name of the device Ethernet port.
State	Port link status, display items as follows: <ul style="list-style-type: none"> up; down.
Alarm switch	Port alarm function status, options as follows: <ul style="list-style-type: none"> Enable;

Interface Element	Discription
	<ul style="list-style-type: none">Disable.
Enable	Check the port that needs to enable port alarm, and click enable to enable this function. Note: After enable port alarm, when port occurs abnormal status, such as connection break down, the device will output a signal to hint the abnormal operation of device.
Disable	Check the port that needs to disable port alarm, and click disable to disable this function.

9.3 Upgrade

Function Description


On the "Software Upgrade" page, user can update and upgrade the device procedure via TFTP server.

Operation Path

Open in order: "System management > Software Upgrade".

Interface Description

The software update interface as follows:

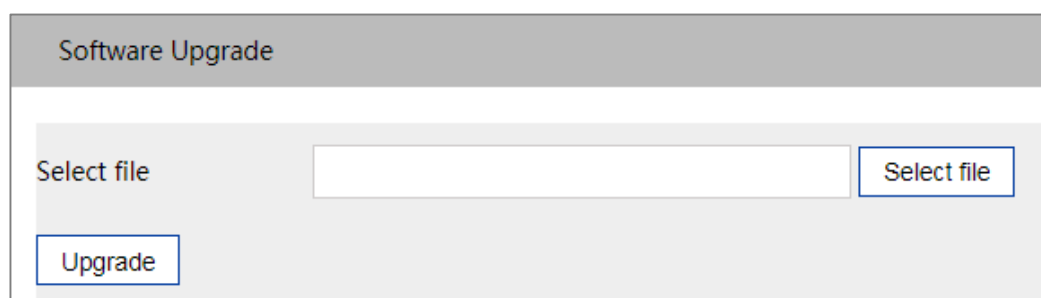

The main elements configuration description of software update interface:

Interface Element	Discription
Select file	Choose upgrade file, format ".bin". Supports WEB pages and software feature upgrades.

9.4 Log Information

9.4.1 Log Information

Function Description

On the page of "Log information", user can check the log information of the device. Log information mainly records user operation, system failure, system safety and other information, including user log, security log and diagnostic log.


- User log: records user operations and system operation information.
- Security log: records information including account management, protocol, anti-attack and status.
- Diagnostic log: records information that assists in problem identification.

Operation Path

Open in order: "System Maintains > Log Information > Log Information".

Interface Description

Log information interface as follow:

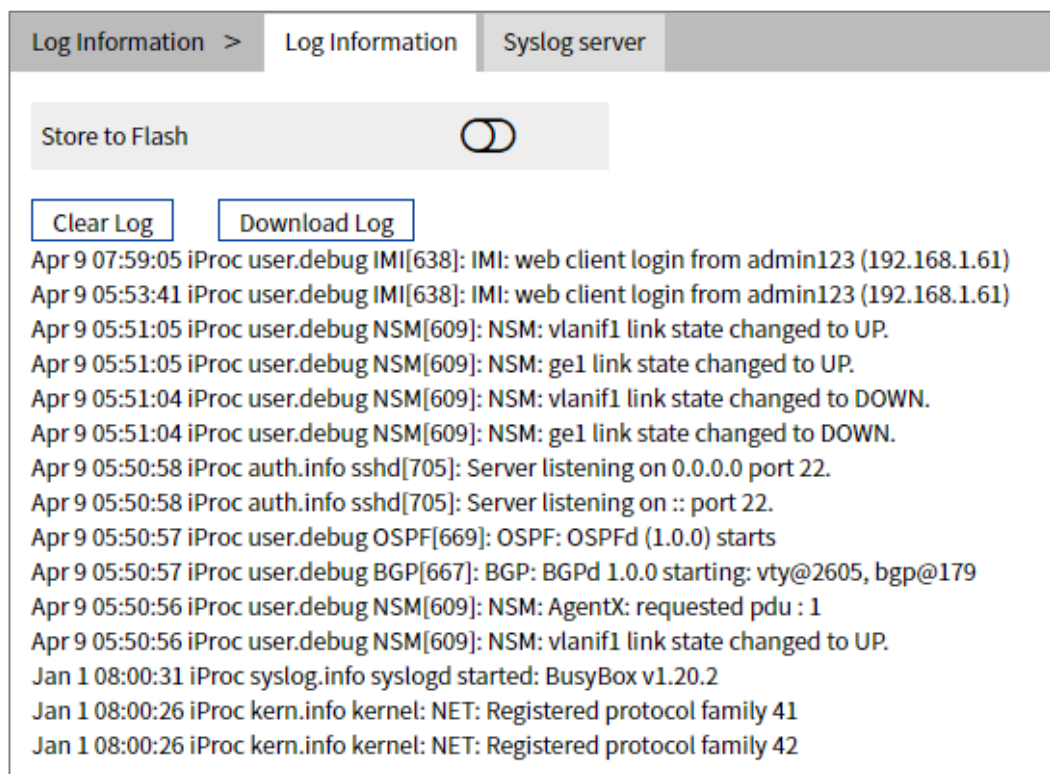

Main elements configuration description of log information interface:

Interface Element	Discription
Store to Flash	Log information is stored in FLASH, log information will not be lost after power failure.
Clear log	Click the "clear log" button to clear the current log information record.
Download log	Click the "Download Log" button to download the current log information to the local.

9.4.2 Syslog Server

Function Description

On the "Syslog server" page, user can configure the Syslog server IP address, and the system log information can be sent to the configured syslog server.

Operation Path

Open in order: "System Maintains > Log Information > Syslog Server".

Interface Description

The Syslog server interface as follows:

Log Information > Log Information Syslog server

Syslog server

eg: 192.168.1.1:80

Set

Syslog server interface main elements configuration instructions:

Interface Element	Discription
Syslog Server	IP address of Syslog server Note: <ul style="list-style-type: none">Supports port configuration and the input format is IP: port, for

Interface Element	Discription
	<p>example: 192.168.1.1:80.</p> <ul style="list-style-type: none">• Users can configure up to 4 syslog servers at a time. If the configuration of one or more syslog servers need to be canceled, delete the input box and click Set.

The Second Part: Frequently Asked Questions

10 FAQ

10.1 Sign in Problems

1. **Why the web page display abnormally when browsing the configuration via WEB?**

Before accessing the WEB, please eliminate IE cache buffer and cookies. Otherwise, the web page will display abnormally.

2. **What should I do if I forget my login password?**

IF you forget the login password, you can initialize the password by restoring factory settings. The specific method is to search by BlueEyes_II software and use restore factory setting function, then the password will be initialized. Both of the initial user name and password are "admin123".

3. **Is configuring via WEB browser same to configuring via BlueEyes_II software?**

Both configurations are the same, without conflict.

10.2 Configuration Problem

1. Why the bandwidth can't be increased after configuring Trunking (port aggregation) function?

Check whether the port attributes set to Trunking are consistent, such as rate, duplex mode, VLAN and other attributes.

2. What's the difference between RING V2 and RING V3?

RING V2 and RING V3 are our company's ring patents. RING V2 only supports single ring and coupling ring. RING V3 supports single ring, coupling ring, chain and Dual_homing, and Hello_Time can be set to detect port connection status.

3. How to deal with the problem that part of switch ports are impassable?

When some ports on the switch are impassable, it may be network cable, network adapter and switch port faults. User can locate the faults via following tests:

- Keep connected computer and switch ports unchanged, change other network cables;
- Keep connected network cable and switch port unchanged, change other computers;
- Keep connected network cable and computer unchanged, change other switch port;
- If the switch port faults are confirmed, please contact supplier for maintenance.

4. How about the order of port self-adaption state detection?

The port self-adaption state detection is conducted according to following order: 1000Mbps full duplex, 100Mbps full duplex, 100Mbps half-duplex, 10Mbps full duplex, 10Mbps half-duplex, detect from high to low, connect automatically in supported highest speed.

10.3 Alarm Problem

1. **When the device alarms, except BlueEyes_II software nether alarm information display area will display alarm information, is there any other way to notify technical staffs?**

When the device alarms, the computer buzzer for host monitoring will continue to emit alarm sounds.

10.4 Indicator Problem

1. **Why is the power supply indicator off?**

Possible reasons include:

- Not connected to the power socket; troubleshooting, connected to the power socket.
- Power supply or indicators faults; troubleshooting, change the power supply or device test.
- Power supply voltage can't meet the device requirements; troubleshooting, configure the power supply voltage according to the device manual.

2. **Why is the Link/Act indicator off?**

Possible reasons include:

- The network cable portion of Ethernet copper port is disconnected or bad contact; troubleshooting, connect the network cable again.
- Ethernet terminal device or network card works abnormally; troubleshooting, eliminate the terminal device fault.
- Not connected to the power socket; troubleshooting, connected to the power socket.
- Interface rate doesn't match the pattern; troubleshooting, examine whether the device transmission speed matches the duplex mode.

3. **Ethernet copper port and fiber port indicator are connected normally, but can't transmit data, what's the reason?**

When the system is power on or network configuration changes, the device and

switch configuration in the network will need some time. Troubleshooting, after the device and switch configuration are completed, Ethernet data can be transmitted; if it's impassable, power off the system, and power on again.

4. Why does the communication crashes after a period of time, namely, it cannot communicate, and it returns to normal after restarting?

Reasons may include:

- Surrounding environment disturbs the product; troubleshooting, product grounding adopts shielding line or shields the interference source.
- Site wiring is not normative; Troubleshooting, optical fiber, network cable, optical cable cannot be arranged with power line and high-voltage line.
- Network cable is disturbed by static electricity or surge; Troubleshooting, change the shielded cable or install a lightning protector.
- High and low temperature influence; troubleshooting, check the device temperature usage range.

11 Maintenance and Service

Since the date of product delivery, our company provides 5-year product warranty. According to our company's product specification, during the warranty period, if the product exists any failure or functional operation fails, our company will repair or replace the product for users free of charge. However, the commitments above do not cover damage caused by improper usage, accident, natural disaster, incorrect operation or improper installation.

In order to ensure that consumers benefit from our company's managed switch products, consumers can get help and solutions in the following ways:

- Internet Service;
- Service Hotline;
- Product repair or replacement;

11.1 Internet Service

More useful information and tips are available via our company website.

Website: <http://www.3onedata.com>


11.2 Service Hotline

Users of our company's products could call technical support office for help. Our company has professional technical engineers to answer your questions and help you solve the product or usage problems ASAP. Free service hotline: +86-400-880-4496

11.3 Product Repair or Replacement

As for the product repair, replacement or return, customers should firstly confirm with the company's technical staff, and then contact the salesmen to solve the problem. According to the company's handling procedure, customers should negotiate with our company's technical staff and salesmen to complete the product maintenance, replacement or return.

3onedata

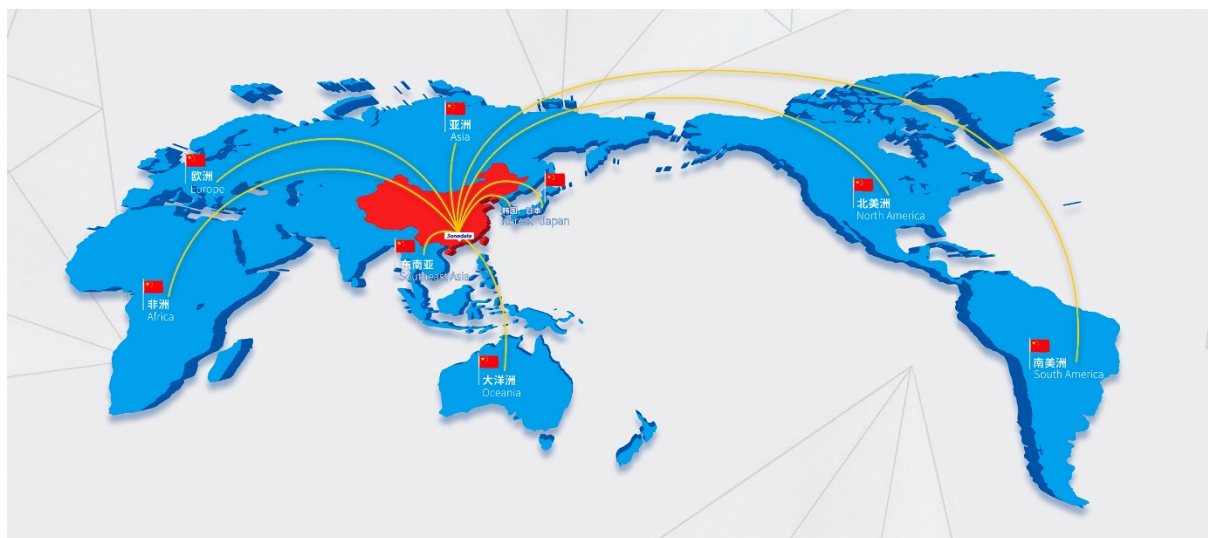

3onedata Co., Ltd.

Headquarter address: 3/B, Zone 1, Baiwangxin High Technology Industrial Park, Song Bai Road,
Nanshan District, Shenzhen, 518108, China

Technology support: tech-support@3onedata.com

Service hotline: 400-880-4496

Official Website: <http://www.3onedata.com>